



## 6. Fuel Tank Pressure Sensor

### A: REMOVAL AND INSTALLATION


- 1) Release fuel pressure. <Ref. to 2-8 [W1B0].>
- 2) Open fuel flap lid, and remove fuel filler cap.

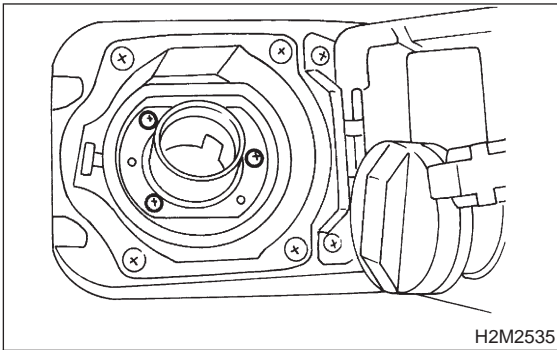


- 3) Drain fuel from fuel tank. <Ref. to 2-8 [W1C0].>

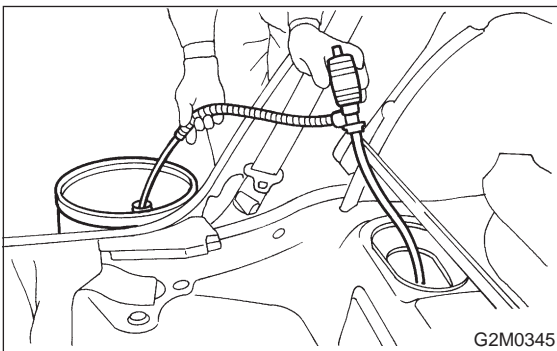


- 4) Disconnect battery ground cable.

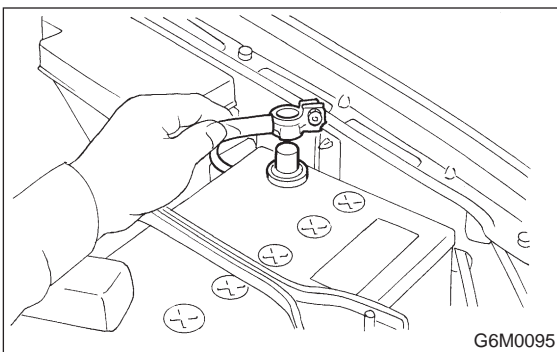


- 5) Remove fuel tank. <Ref. to 2-8 [W2A0].>

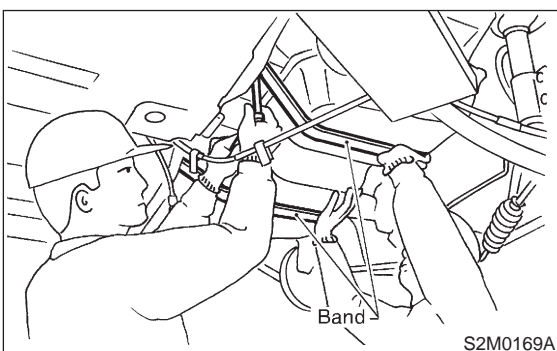


- 6) Remove protector cover.

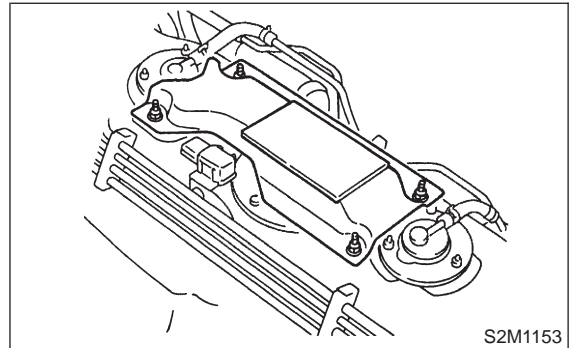


- 7) Disconnect connector from fuel tank pressure sensor.

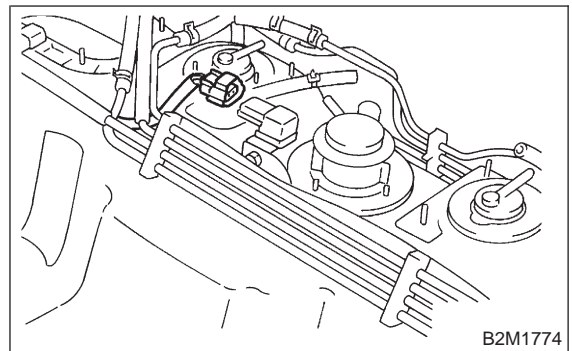

- 8) Release clips which hold fuel pipes onto fuel tank.

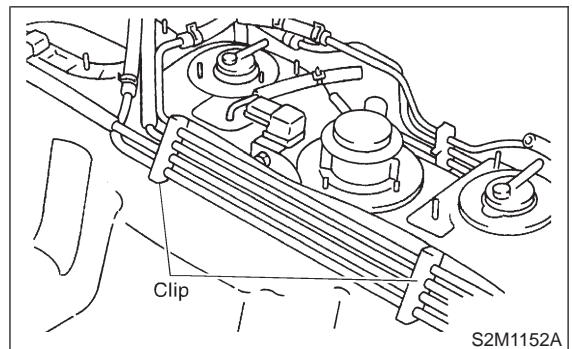

- 9) Move two fuel pipes to upper side, and remove bolt which install fuel tank pressure sensor to bracket.

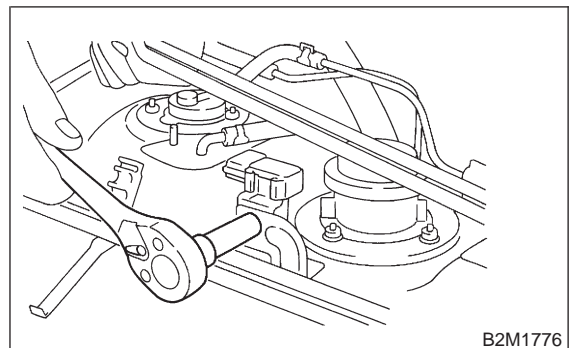


## 2-1 [W7A0]


### 7. Pressure Control Solenoid Valve

## SERVICE PROCEDURE

10) Move clip, and disconnect pressure hose from fuel tank.

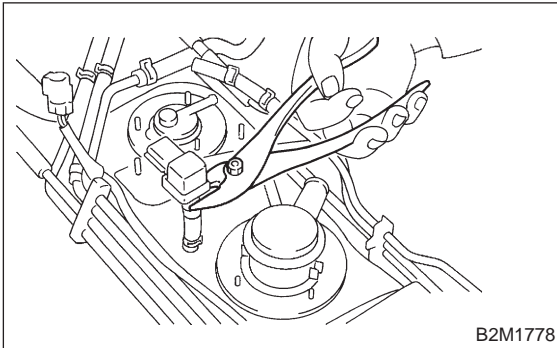


11) Disconnect pressure hose from fuel tank pressure sensor.

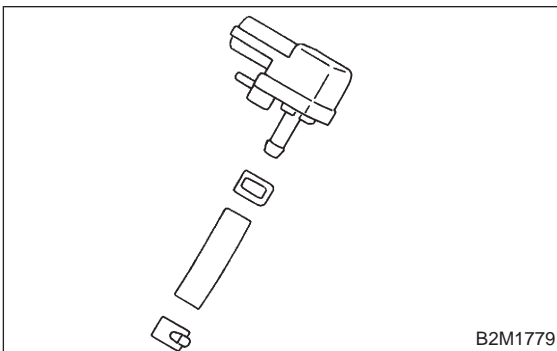

12) Installation is in the reverse order of removal.

#### **Tightening torque:**


**$7.35 \pm 1.96$  N·m ( $0.75 \pm 0.20$  kg·m,  $5.4 \pm 1.4$  ft·lb)**

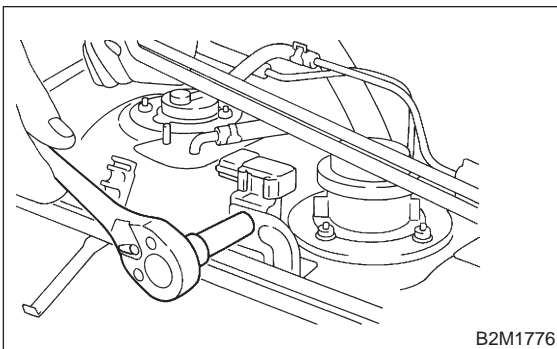


## 7. Pressure Control Solenoid Valve

### A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

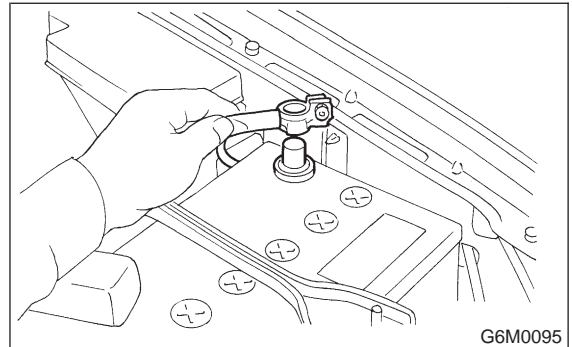

2) Remove canister. <Ref. to 2-1 [W3A0].>

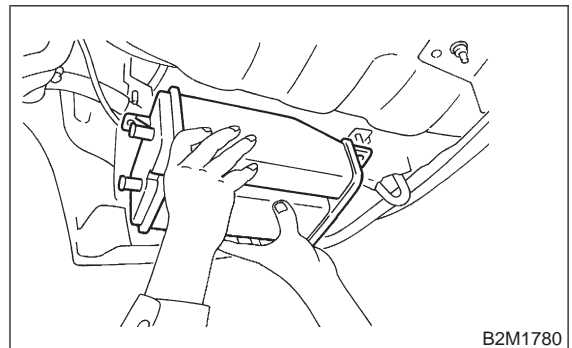

3) Disconnect evaporation hoses (A) from joint pipes.

