

# FUEL DAMPER VALVE

FUEL INJECTION (FUEL SYSTEMS)


---

## 29. Fuel Damper Valve

### A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>

2) Remove the fuel damper valve from the fuel delivery line.

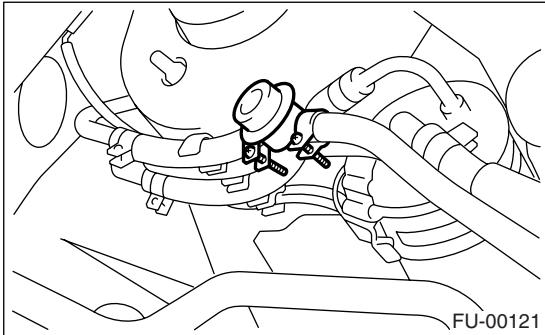

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**1.25 N·m (0.13 kgf-m, 0.94 ft-lb)**