
## 4. Electrical Components Location

## A: LOCATION

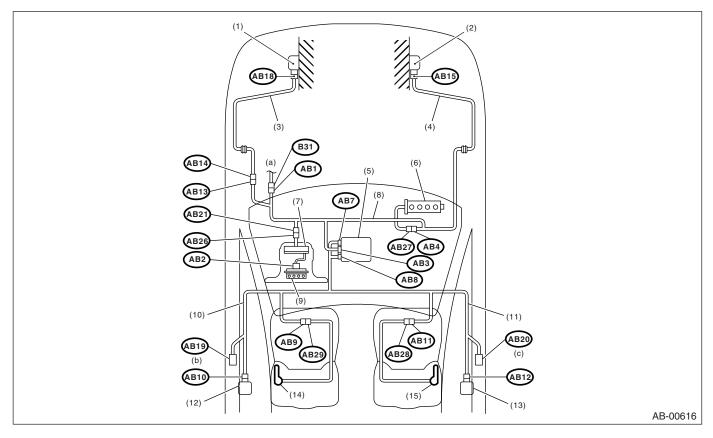

- (1) Front sub sensor (LH)
- (2) Front sub sensor (RH)
- (3) Front sub sensor harness (LH)
- (4) Front sub sensor harness (RH)
- (5) Airbag control module with built-in safety and electric sensor
- (6) Passenger's airbag inflator

- (7) Roll connector
- (8) Airbag main harness
- (9) Driver's airbag inflator
- (10) Side airbag harness (LH)
- (11) Side airbag harness (RH)
- (12) Side airbag sensor (LH)
- (13) Side airbag sensor (RH)

- (14) Side airbag inflator (LH)
- (15) Side airbag inflator (RH)
- (a) To body harness
- (b) To seat belt pretensioner (LH)
- (c) To seat belt pretensioner (RH)

Connector No.	(AB1)	(AB2)	(AB3)	(AB4)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pole	6	2	28	4	12	12	2	4	2	4	2	2
Color	Yellow											
Male/Female	Male	Female	Male									
		•	•							•		
Connector No.	(AB15)	(AB18)	(AB19)	(AB20)	(AB21)	(AB27)	(AB28)	(AB29)	(AB30)	(AB31)		
Pole	2	2	2	2	2	4	2	2	2	2		
Color	Yellow	Black										
Male/Female	Female	Female	Female	Female	Female	Male	Male	Male	Male	Female		