


## 17.Lower Inner Trim

### A: REMOVAL

- 1) Remove the side sill front cover (A).
- 2) Remove the rear seat cushion <Ref. to SE-13, REMOVAL, Rear Seat.>, then remove side sill rear cover (B).
- 3) Remove the center pillar lower trim (C).

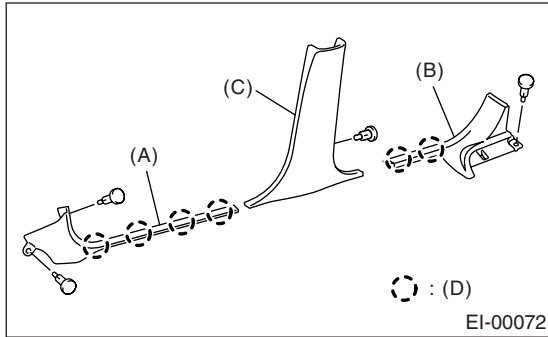

(D) Clip

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

**Be sure to securely hook pawls of inner trim panel to body flange.**