

POWER WINDOW SYSTEM

GLASS/WINDOWS/MIRRORS

2. Power Window System

A: WIRING DIAGRAM

1. POWER WINDOW

<Ref. to WI-126, WIRING DIAGRAM, Power Window System.>

B: INSPECTION

Symptom	Repair order
All power windows does not operate.	(1) Fuse (SBF-6) (F/B No. 18) (2) Power window circuit breaker (3) Power window relay (4) Wire harness
One window does not operate.	(1) Power window main switch (2) Power window sub switch (3) Power window motor (4) Wire harness
"Window Lock" does not operate.	(1) Power window main switch