

8. Remote Control Mirror Switch

A: REMOVAL

Refer to Power Window Control Switch, because the remote control mirror switch is integrated with power window control switch. <Ref. to GW-7, REMOVAL, Power Window Control Switch.>

B: INSTALLATION


Refer to Power Window Control Switch, because the remote control mirror switch is integrated with power window control switch. <Ref. to GW-7, INSTALLATION, Power Window Control Switch.>

REMOTE CONTROL MIRROR SWITCH

GLASS/WINDOWS/MIRRORS

C: INSPECTION

Move the rearview mirror switch to each position and check continuity between terminals.

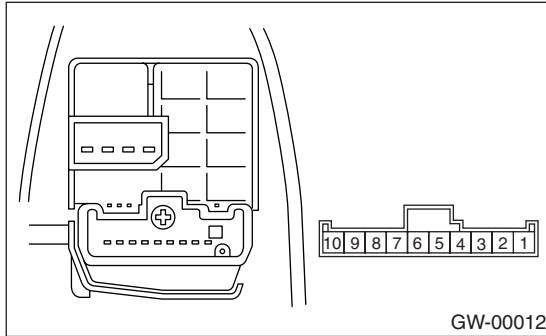

Change over switch right position:

Switch position	Terminal No.	Standard
OFF	—	More than 1M Ω
UP	8 and 3, 6 and 7	Less than 1 Ω
DOWN	8 and 6, 3 and 7	Less than 1 Ω
LEFT	8 and 2, 6 and 7	Less than 1 Ω
RIGHT	8 and 6, 2 and 7	Less than 1 Ω

Change over switch left position:

Switch position	Terminal No.	Standard
OFF	—	More than 1M Ω
UP	8 and 4, 6 and 7	Less than 1 Ω
DOWN	8 and 6, 4 and 7	Less than 1 Ω
LEFT	8 and 5, 6 and 7	Less than 1 Ω
RIGHT	8 and 6, 5 and 7	Less than 1 Ω

If NG, replace the switch.