


# RELAY AND FUSE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


## 17. Relay and Fuse

### A: LOCATION

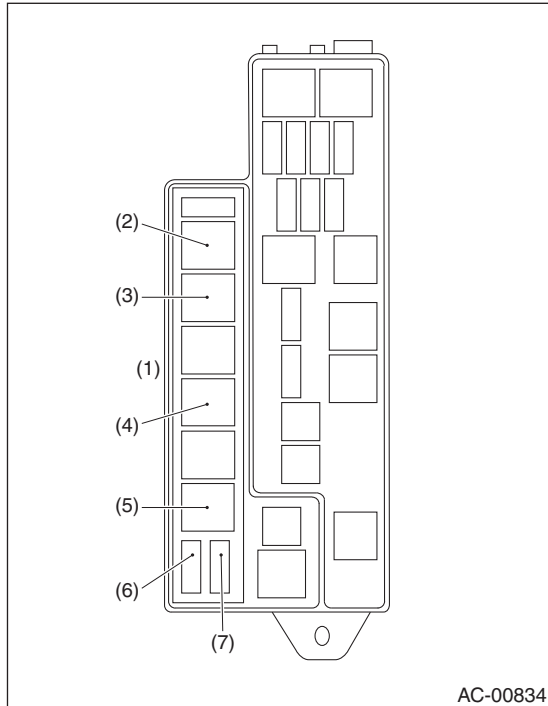

- (1) Main fuse box (M/B)
- (2) Main fan relay
- (3) Sub fan relay
- (4) A/C relay
- (5) Fan mode relay
- (6) Main fan 20 A (Non-turbo model), 30A (Turbo model) fuse
- (7) Sub fan 20 A (Non-turbo model), 30A (Turbo model) fuse

### B: INSPECTION

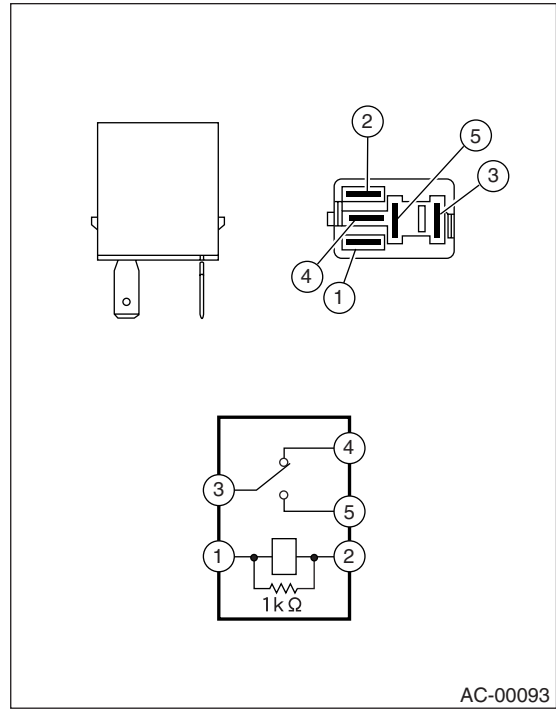

(1) — (2): Continuity exists.

(3) — (4): Continuity exists.

(3) — (5): No continuity.

While applying battery voltage to the terminal between (1) and (2), check continuity between (3) and (5).

If no continuity exists, replace the relay with a new one.