


SUN-LOAD SENSOR (AUTO A/C MODEL)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

20.Sun-load Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the sunload sensor connector.

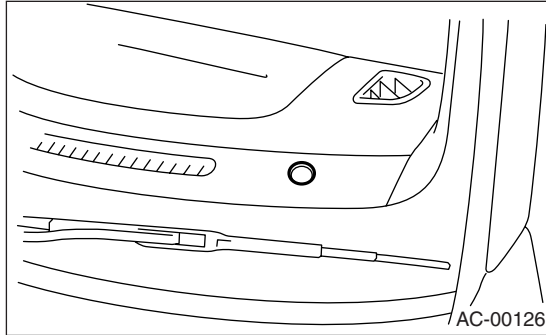

CAUTION:

Be careful not to damage the sensors and interior trims when removing them.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC-36, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>