

## 6. Fuel Gauge

### A: REMOVAL


Disassemble the combination meter, and then remove the water temperature gauge and fuel gauge assembly. <Ref. to IDI-11, DISASSEMBLY, Combination Meter Assembly.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the fuel gauge resistance.

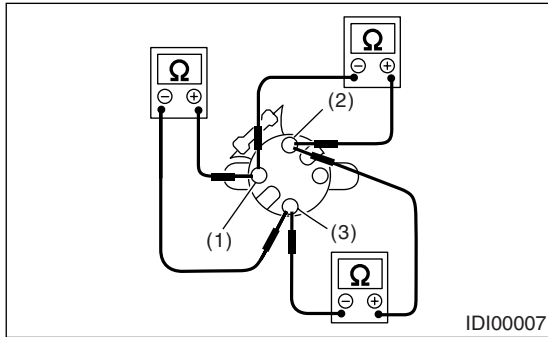

- (1) UNIT
- (2) IGN
- (3) GND

Terminal	Resistance
Terminals IGN and GND	$170 \pm 10 \Omega$
Terminals IGN and UNIT	$35 \pm 10 \Omega$
Terminals UNIT and GND	$136 \pm 10 \Omega$

If NG, replace the water temperature gauge and fuel gauge assembly.

If OK, replace the combination meter printed circuit.