

7. Water Temperature Gauge

A: REMOVAL


Disassemble the combination meter, and then remove the water temperature gauge and fuel gauge assembly. <Ref. to IDI-11, DISASSEMBLY, Combination Meter Assembly.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the water temperature gauge resistance.

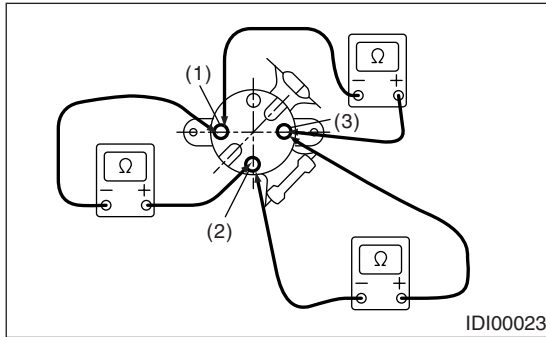

- (1) GND
- (2) IGN
- (3) UNIT

Terminal	Resistance
Terminals IGN and GND	208±10 Ω
Terminals IGN and UNIT	56±10 Ω
Terminals UNIT and GND	264±10 Ω

If NG, replace the water temperature gauge & fuel gauge assembly.

If OK, replace the combination meter printed circuit.