

HEADLIGHT BULB

LIGHTING SYSTEM


10. Headlight Bulb

A: REMOVAL


CAUTION:

- Because the halogen bulb operates at a high temperature, dirt and oil on the bulb surface reduces the bulb's service life. Hold the flange portion when replacing the bulb. Never touch the glass portion.
- Do not leave the headlight without a bulb for a long time. Dust, moisture, etc. entering the headlight may affect its performance.

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct (when right side headlight is removed).
- 3) Disconnect the harness connector.
- 4) Remove the rubber cap.

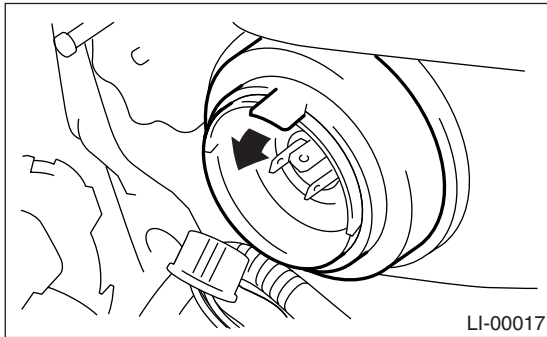

- 5) Remove the light bulb retaining spring to remove the bulb.

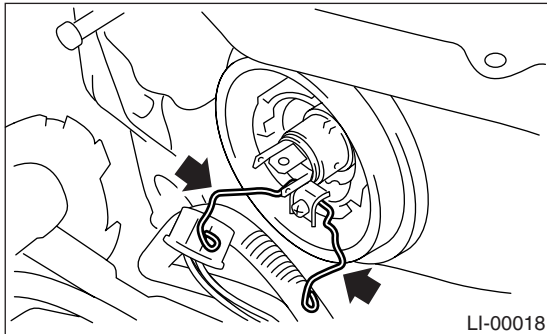

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Attach the rubber cap with letters **TOP** on the top so the drain hole will be on the lower side.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.