
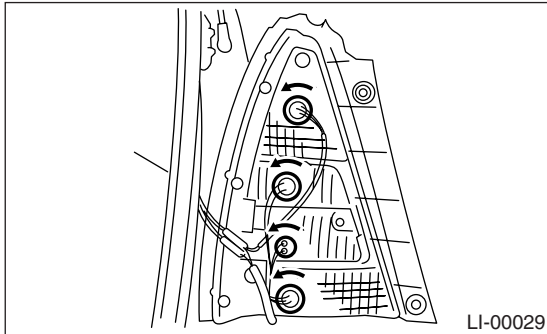


16. Rear Combination Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the two bolts, and then turn the socket and disconnect cord assembly to remove rear combination light.

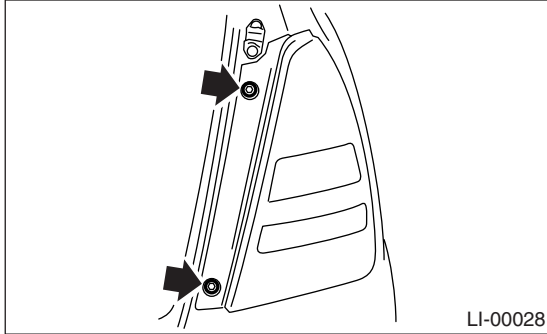

B: INSTALLATION

Install in the reverse order of removal.