


## 9. Rear Inner Remote

### A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove a screw and two cables.
- 4) Remove the inner remote.

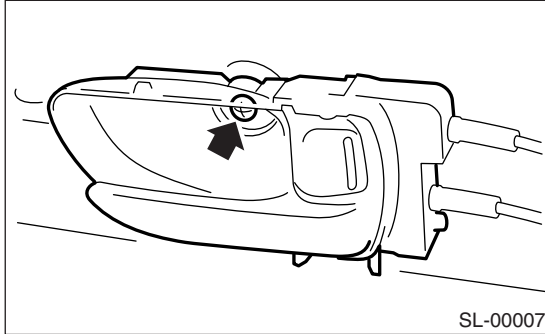

### B: INSTALLATION

Install in the reverse order of removal.

**NOTE:**

Make sure the inner remote works properly after installation.

### C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable work smoothly.
- 3) Make sure that the rear door child safety lock operates properly.

**NOTE:**

If the remote handle is metalclad type, make sure that grease is sufficiently applied to the cable connection portion.

If the grease is insufficient, apply additional grease to the cable connection portion before connecting the cable.

### 10.Rear Outer Handle

#### A: REMOVAL

1) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>

#### CAUTION:


**Do not use excessive force to remove the door panel. This will deform it.**

2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>

3) Remove the rear inner remote. <Ref. to SL-31, REMOVAL, Rear Inner Remote.>

4) Remove the rear door latch assembly. <Ref. to SL-33, REMOVAL, Rear Door Latch Assembly.>

5) Remove two bolts, and then remove the rear outer handle.

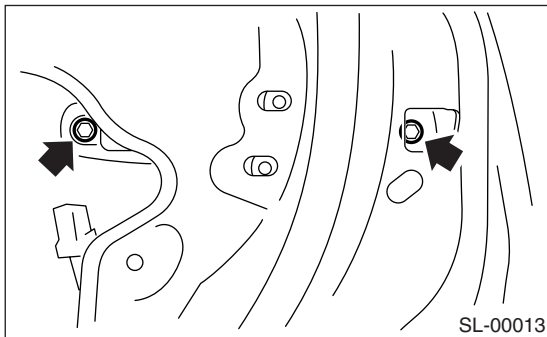

#### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the outer handle works properly after installation.

#### C: INSPECTION

1) Make sure the resinous lever is not deformed, damaged or cracked.

2) Make sure the resinous lever operates smoothly.