## **INSPECTION MODE**

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

## 8. Inspection Mode

## **A: OPERATION**

Shift the select lever to D range, and drive continuously for 10 seconds or more at 60 km/h (37 MPH).

## **WARNING:**

Observe the road traffic law.