


## 1. Starter

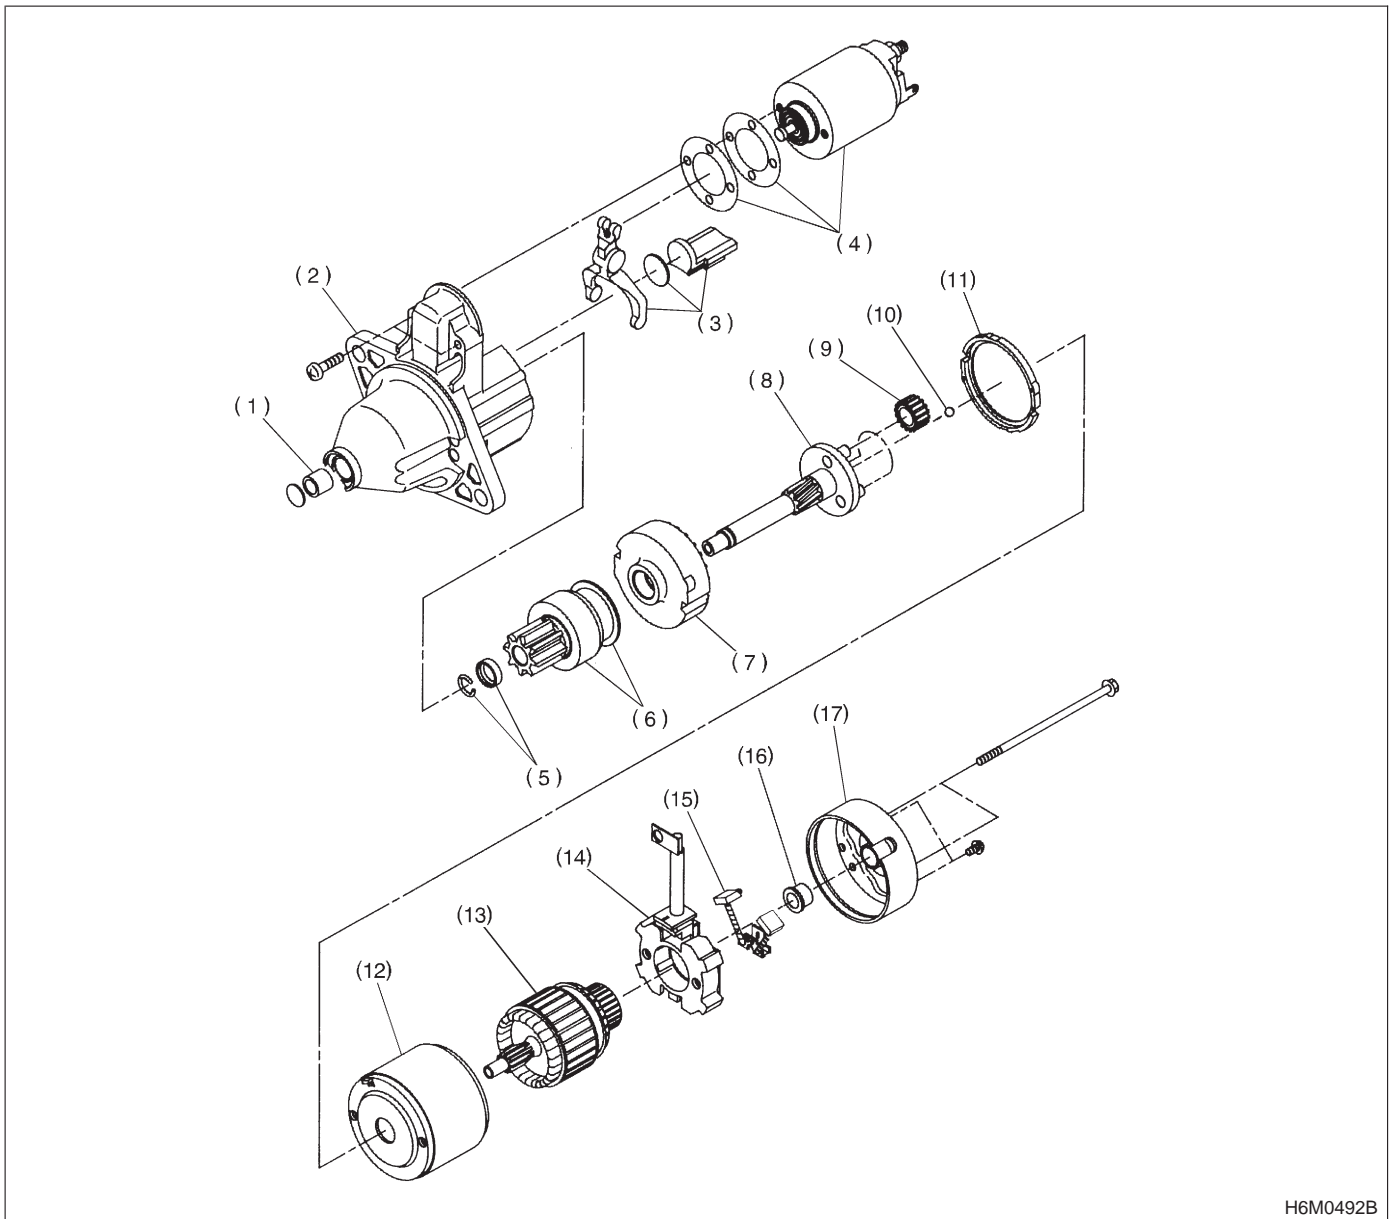

H6M0492B

- |                         |                        |                     |
|-------------------------|------------------------|---------------------|
| (1) Sleeve bearing      | (7) Internal gear ASSY | (13) Armature       |
| (2) Front bracket       | (8) Shaft ASSY         | (14) Brush holder   |
| (3) Lever set           | (9) Gear ASSY          | (15) Brush          |
| (4) Magnet switch ASSY  | (10) Ball              | (16) Sleeve bearing |
| (5) Stopper set         | (11) Packing           | (17) Rear bracket   |
| (6) Over running clutch | (12) Yoke              |                     |