


WIRING DIAGRAM

5. Wiring Diagram

A: POWER SUPPLY ROUTING

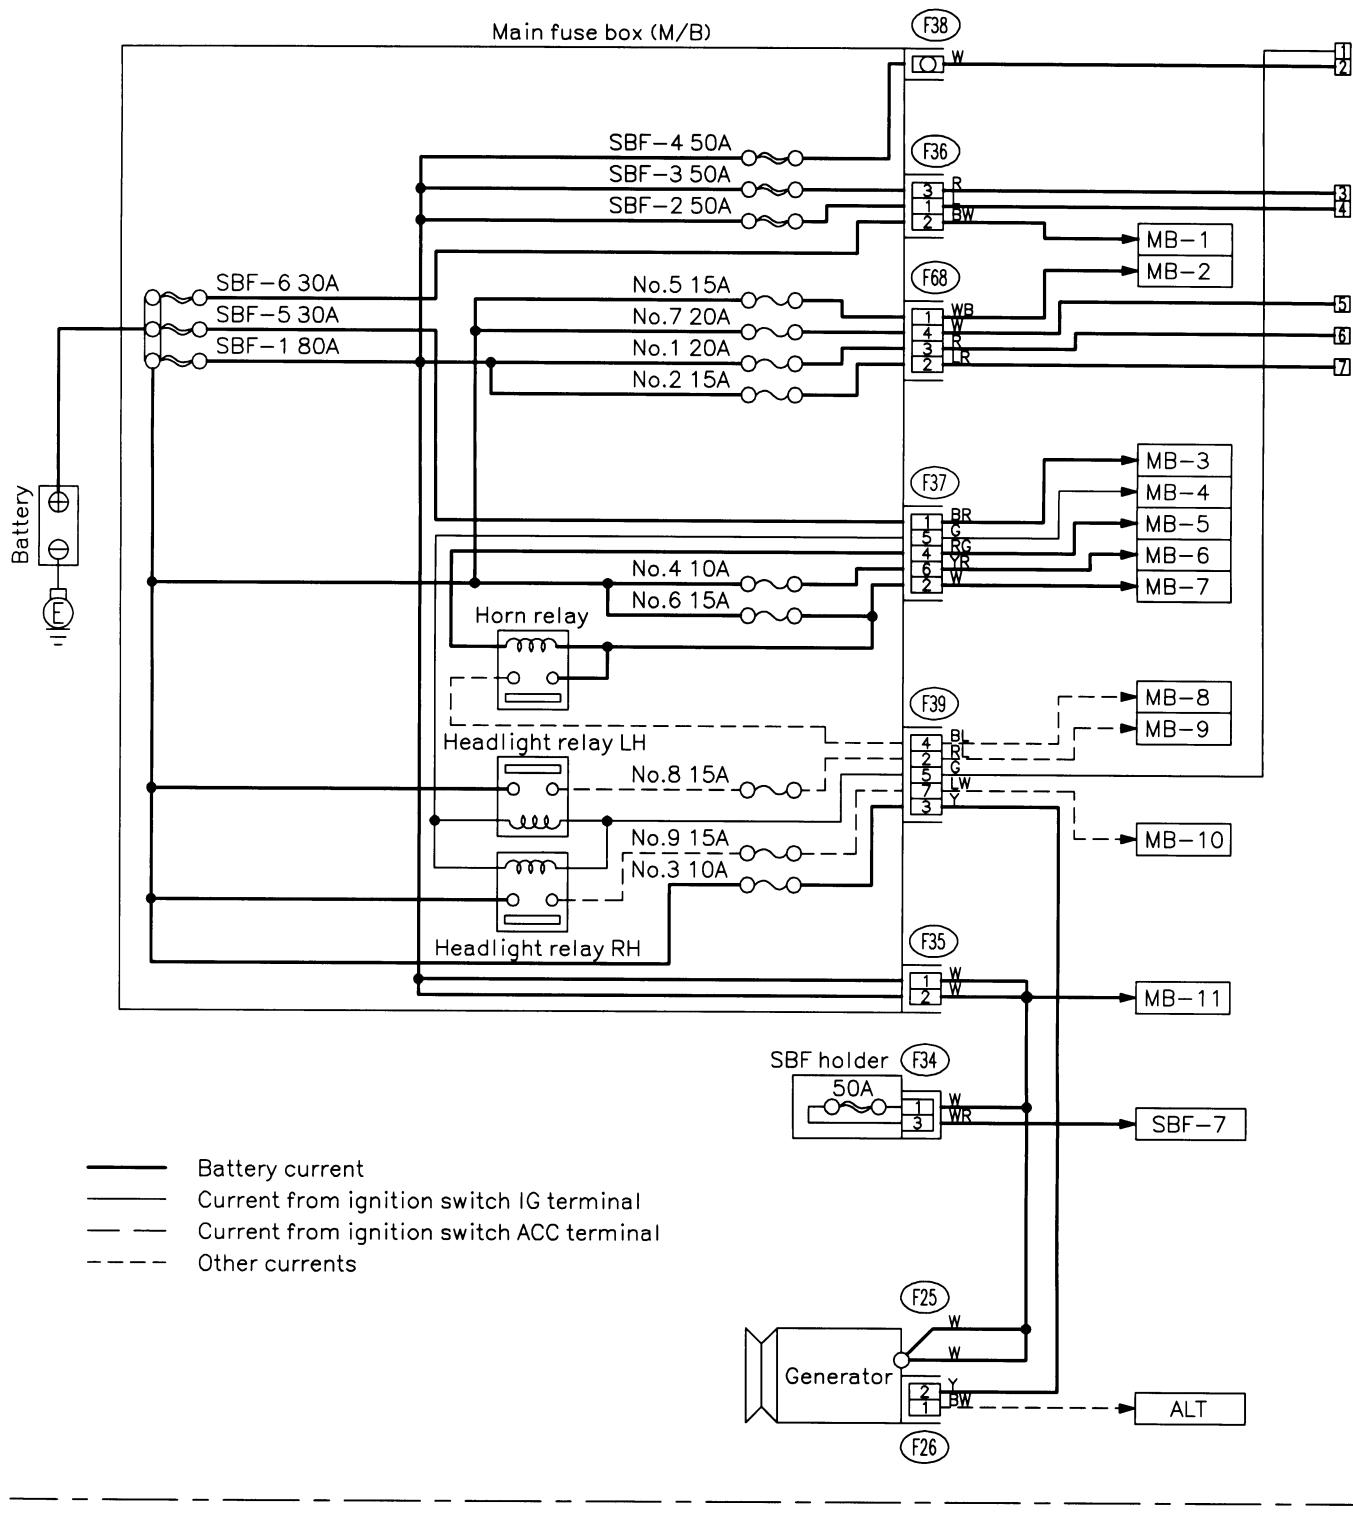

(F35)

(F26) (Green)

(F68) (Black)

(F37) (Black)

(F34)


(F39)

(F36)
1
21
2
3
41
2
3
41
2
3
42
1
4
31
2
3
4
5
6
7
8

WIRING DIAGRAM

[D5A0] 6-3

5. Wiring Diagram

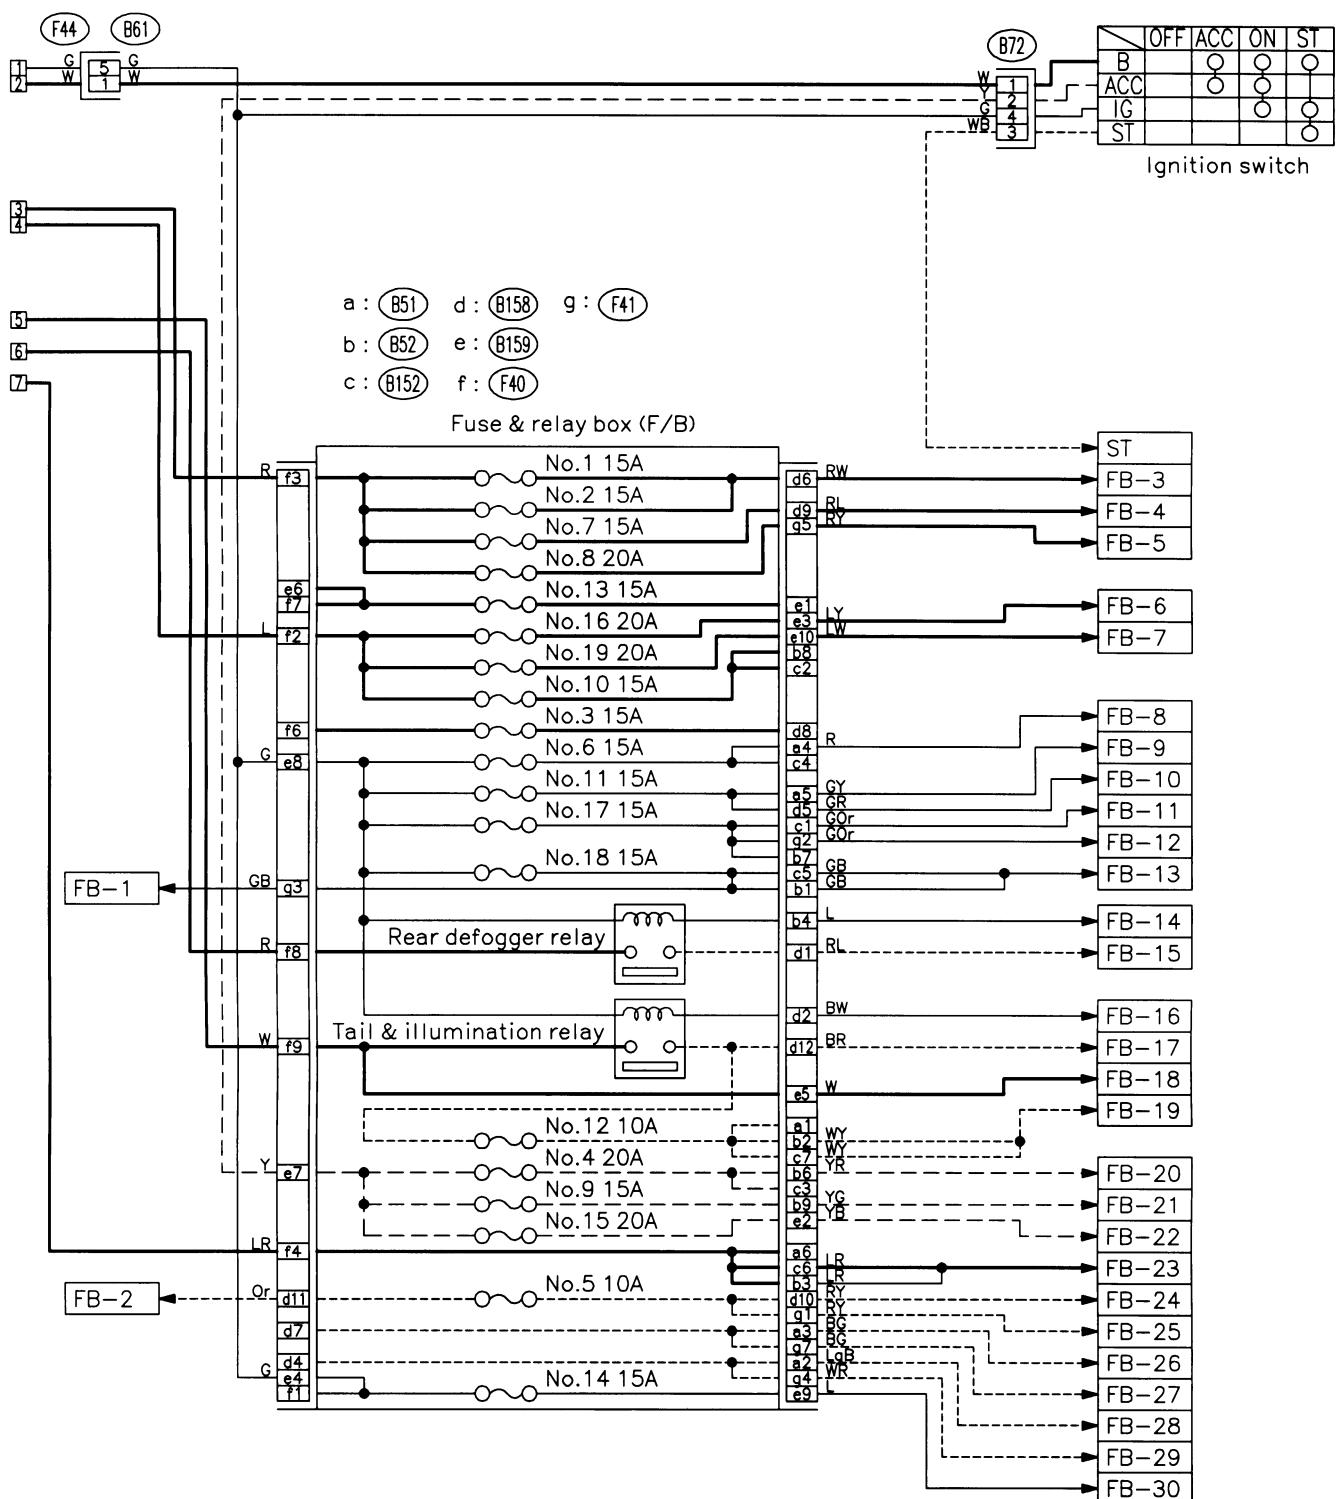

(B61)

(B72) (Blue) (B152)







(B51) (Blue)

(F40) (Brown)

(B159) (Gray)

(B52)

(B158)



6-3 [D5A0]

5. Wiring Diagram

WIRING DIAGRAM

No.	Load
MB-1	Power window and sunroof circuit breaker
MB-2	Door lock timer
MB-3	Data link connector Engine control module Fuel pump relay Main relay
MB-4	Daytime running light control module Diode (Daytime running light) Lighting switch
MB-5	Cruise control sub switch Horn switch
MB-6	Transmission control module
MB-7	AT shift lock control module Hazard switch Key warning switch
MB-8	Horn
MB-9	Headlight LH
MB-10	Combination meter Front fog light relay Front fog light switch Headlight RH
MB-11	A/C relay holder
SBF-7	ABS control module
ALT	Combination meter Daytime running light control module
ST	Engine control module (AT) Inhibitor switch (AT) Starter interlock relay (MT)
FB-1	Main fan relay
FB-2	Parking switch
FB-3	Blower motor relay
FB-4	Front fog light relay
FB-5	ABS control module
FB-6	Stop light switch
FB-7	Rear accessory power supply relay
FB-8	Airbag control module
FB-9	Airbag control module
FB-10	Engine control module Fuel pump relay Ignition coil Transmission control module
FB-11	Blower motor relay Mode control panel Rear defogger switch
FB-12	A/C relay Sub fan relay Thermal protector



No.	Load
FB-13	Back-up light switch (MT) Check connector Combination meter Daytime running light control module Daytime running light hi-beam relay Daytime running light relay Hazard switch Inhibitor switch (AT) Key warning module Power window and sunroof relay Vehicle speed sensor 2 (MT)
FB-14	Rear defogger switch
FB-15	Rear defogger Rear defogger switch
FB-16	Lighting switch
FB-17	Parking switch
FB-18	Parking switch
FB-19	Clock Illumination control module Illumination light
FB-20	AT shift lock control module Front accessory power supply Remote control rearview mirror switch Rear accessory power supply relay
FB-21	Radio
FB-22	Front washer motor Front wiper motor Front wiper & washer switch Rear washer motor Rear wiper motor Rear wiper relay
FB-23	Combination meter Radio Room light Spot light Trunk room light
FB-24	License plate light LH License plate light RH Tail light LH Tail light RH
FB-25	Front clearance light LH Front clearance light RH
FB-26	Combination meter Hazard switch Rear turn signal light LH Turn signal switch
FB-27	Front turn signal light LH Side turn signal light LH
FB-28	Combination meter Hazard switch Rear turn signal light RH Turn signal switch
FB-29	Front turn signal light RH Side turn signal light RH
FB-30	ABS control module AT shift lock control module Cruise control main switch Cruise control module

WIRING DIAGRAM

[D5B0] 6-3

5. Wiring Diagram

B: GROUND DISTRIBUTION

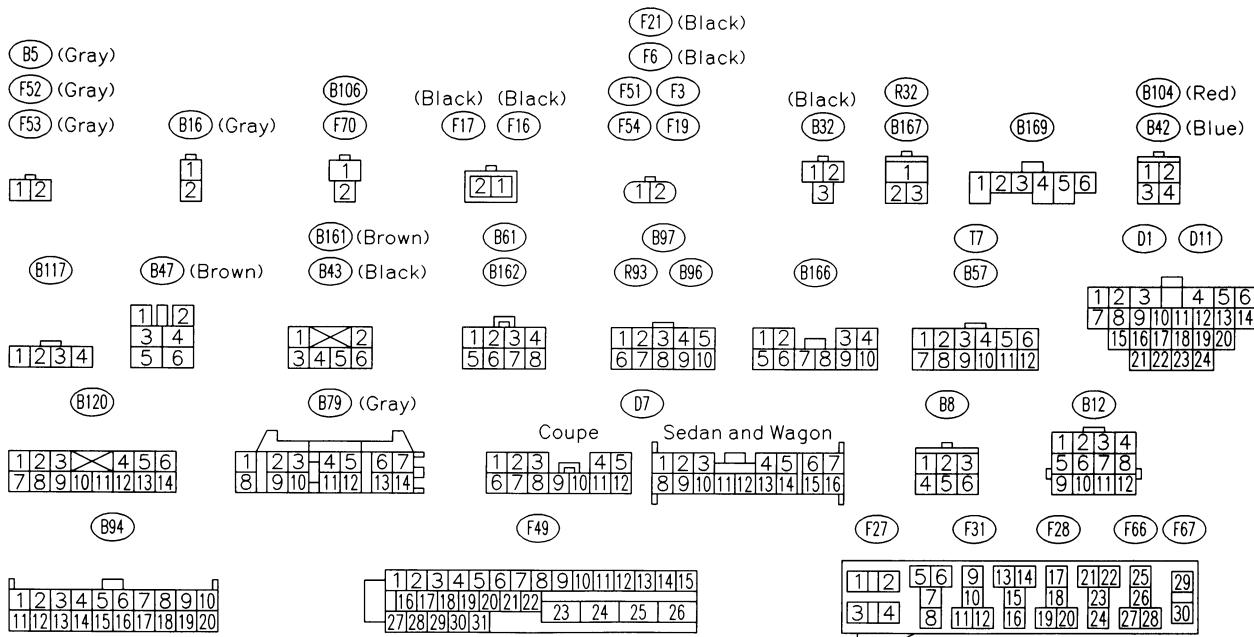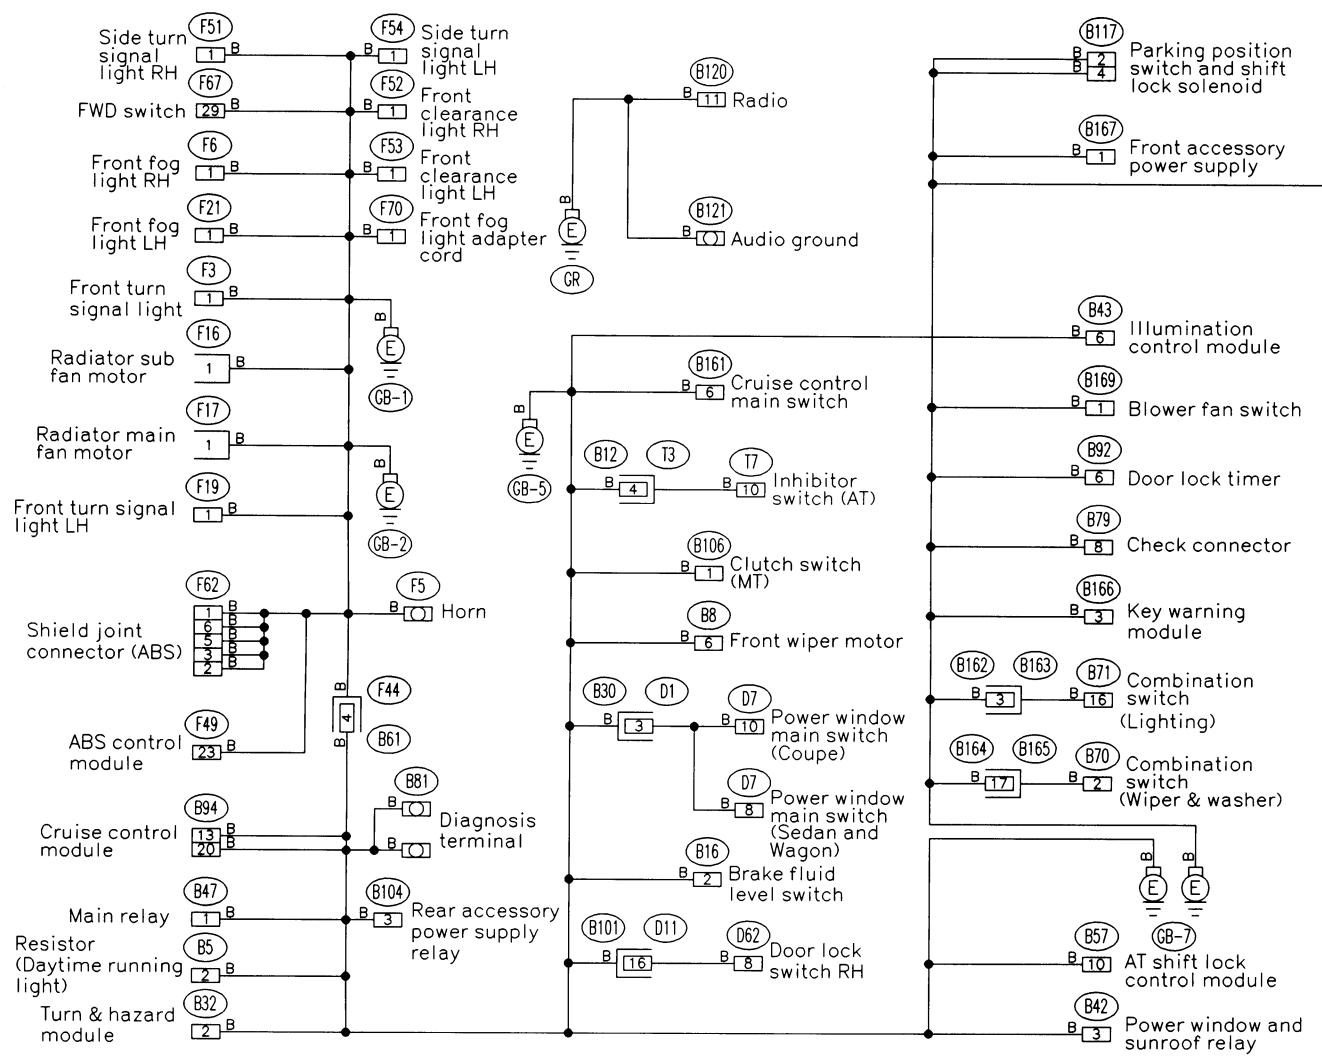


GU04-06A

6-3 [D5B0]

5. Wiring Diagram

WIRING DIAGRAM

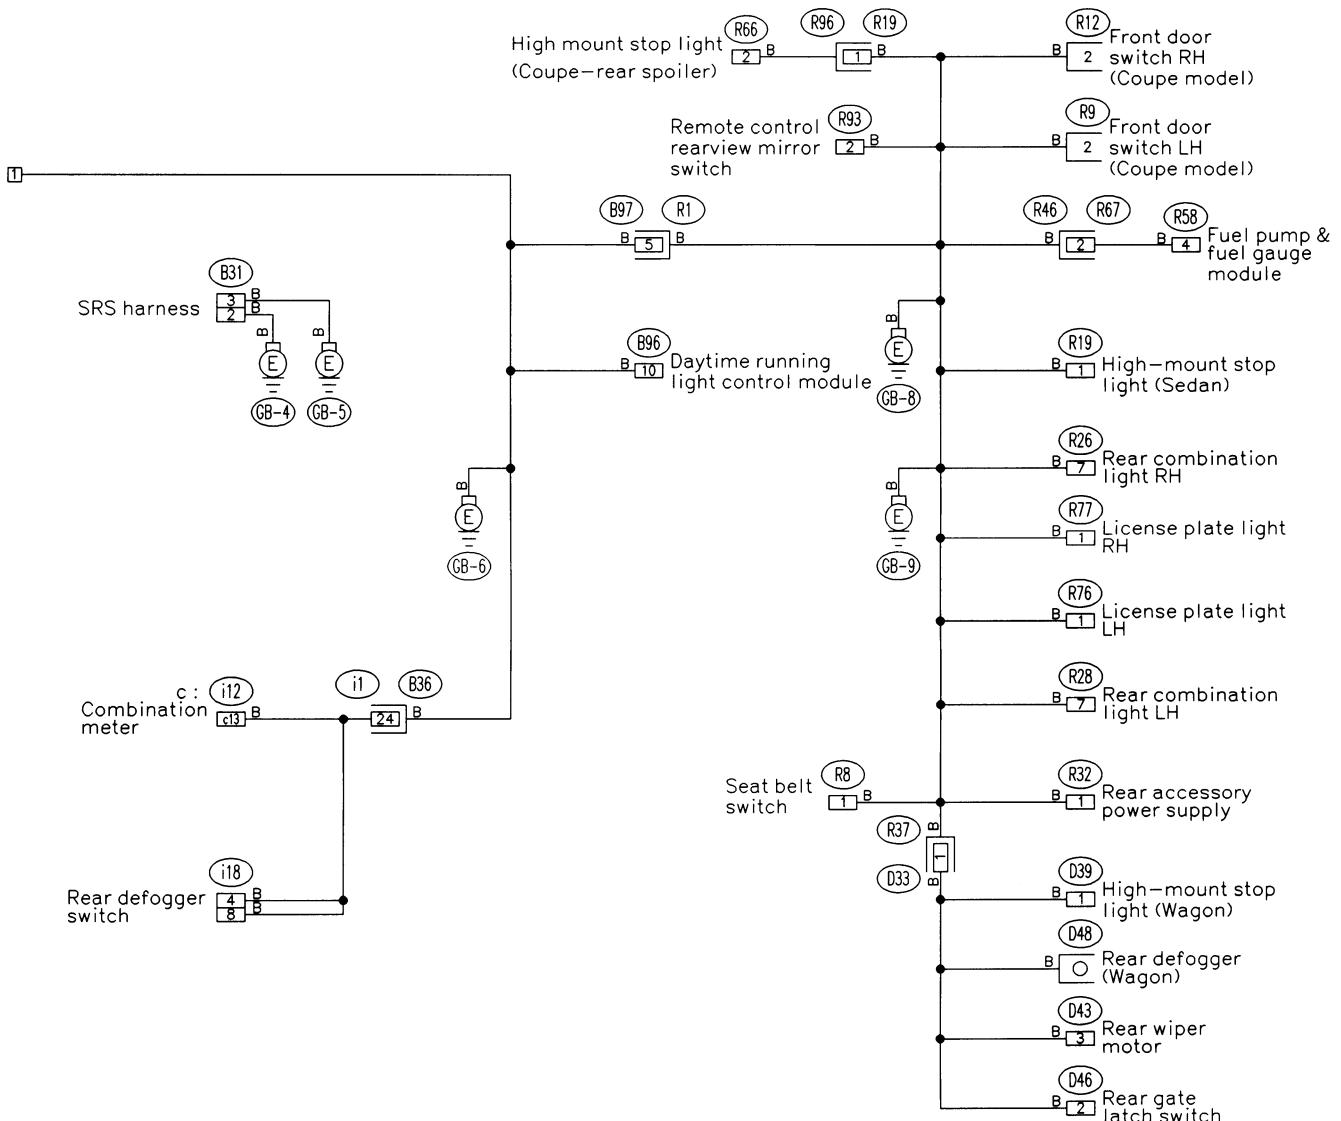

(D39)

(R77) (R76)

(R66) (Black)

(R12)

(R9)

(D43)

(R26) (R28)

(F62)

(R58)

[1] [2]

[1] [2]

[2] [1]

[2] [1]

[1] [2]
[3] [4]

[1] [2] [3]
[4] [5] [6] [7]

[1] [2] [3]
[4] [5] [6] [7]

(D46) (Black)

(R67)

(D33)

(R19)

(R8)

(B92)

(B31)

(i1) (Blue)

(i18) (D62)

[1]
[2]

[1]
[2]

[1] [2]

[1] [2] [3]
[4] [5] [6]

[1] [2] [3] [4]
[5] [6] [7]

[1] [2] [3] [4] [5] [6] [7] [8]
[9] [10] [11] [12] [13] [14] [15] [16] [17] [18] [19] [20] [21] [22] [23] [24]

[1] [2] [3]
[4] [5] [6] [7]

(B70)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18

(B164)

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

(B71)

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

(i12)



1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

GU04-06B

WIRING DIAGRAM

[D5B0] 6-3

5. Wiring Diagram

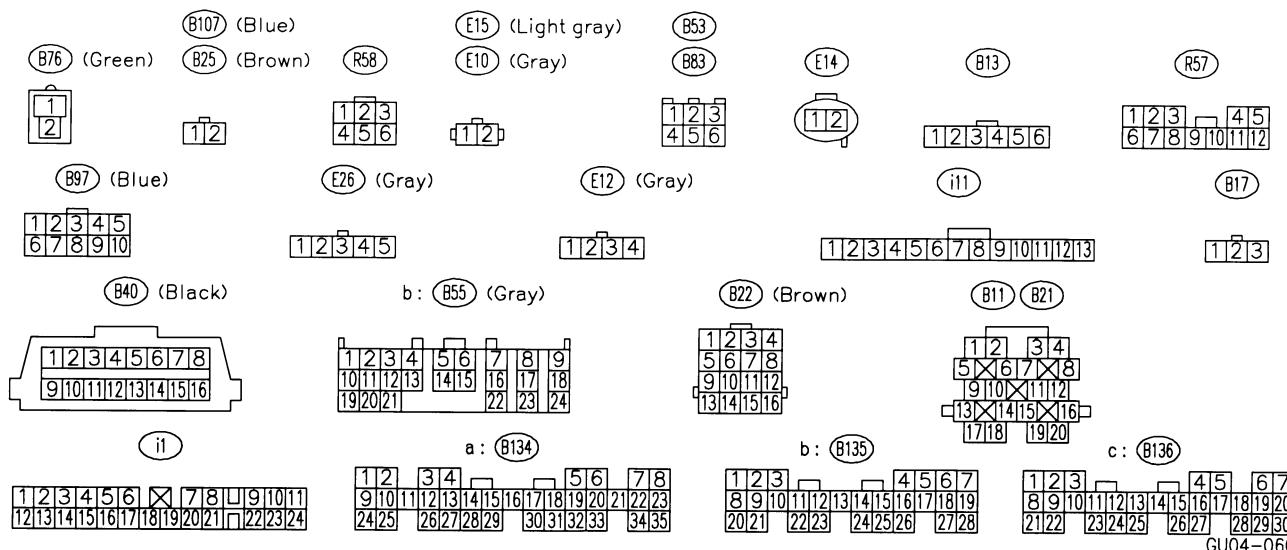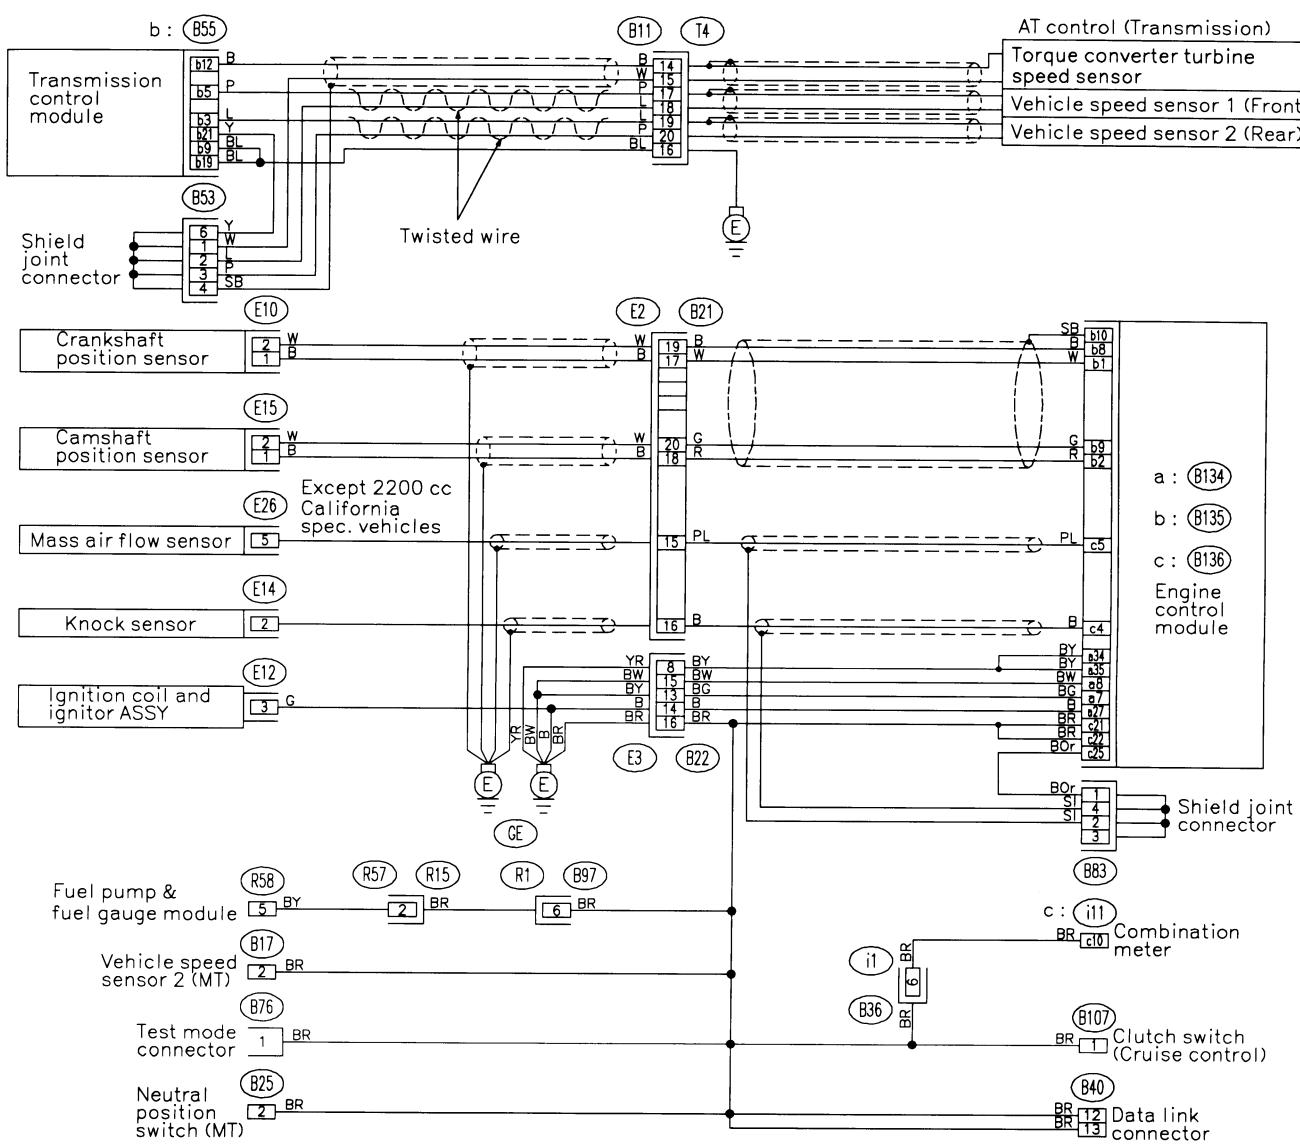


GU04-06C

6-3 [D5C0]

5. Wiring Diagram

WIRING DIAGRAM

C: AIRBAG SYSTEM

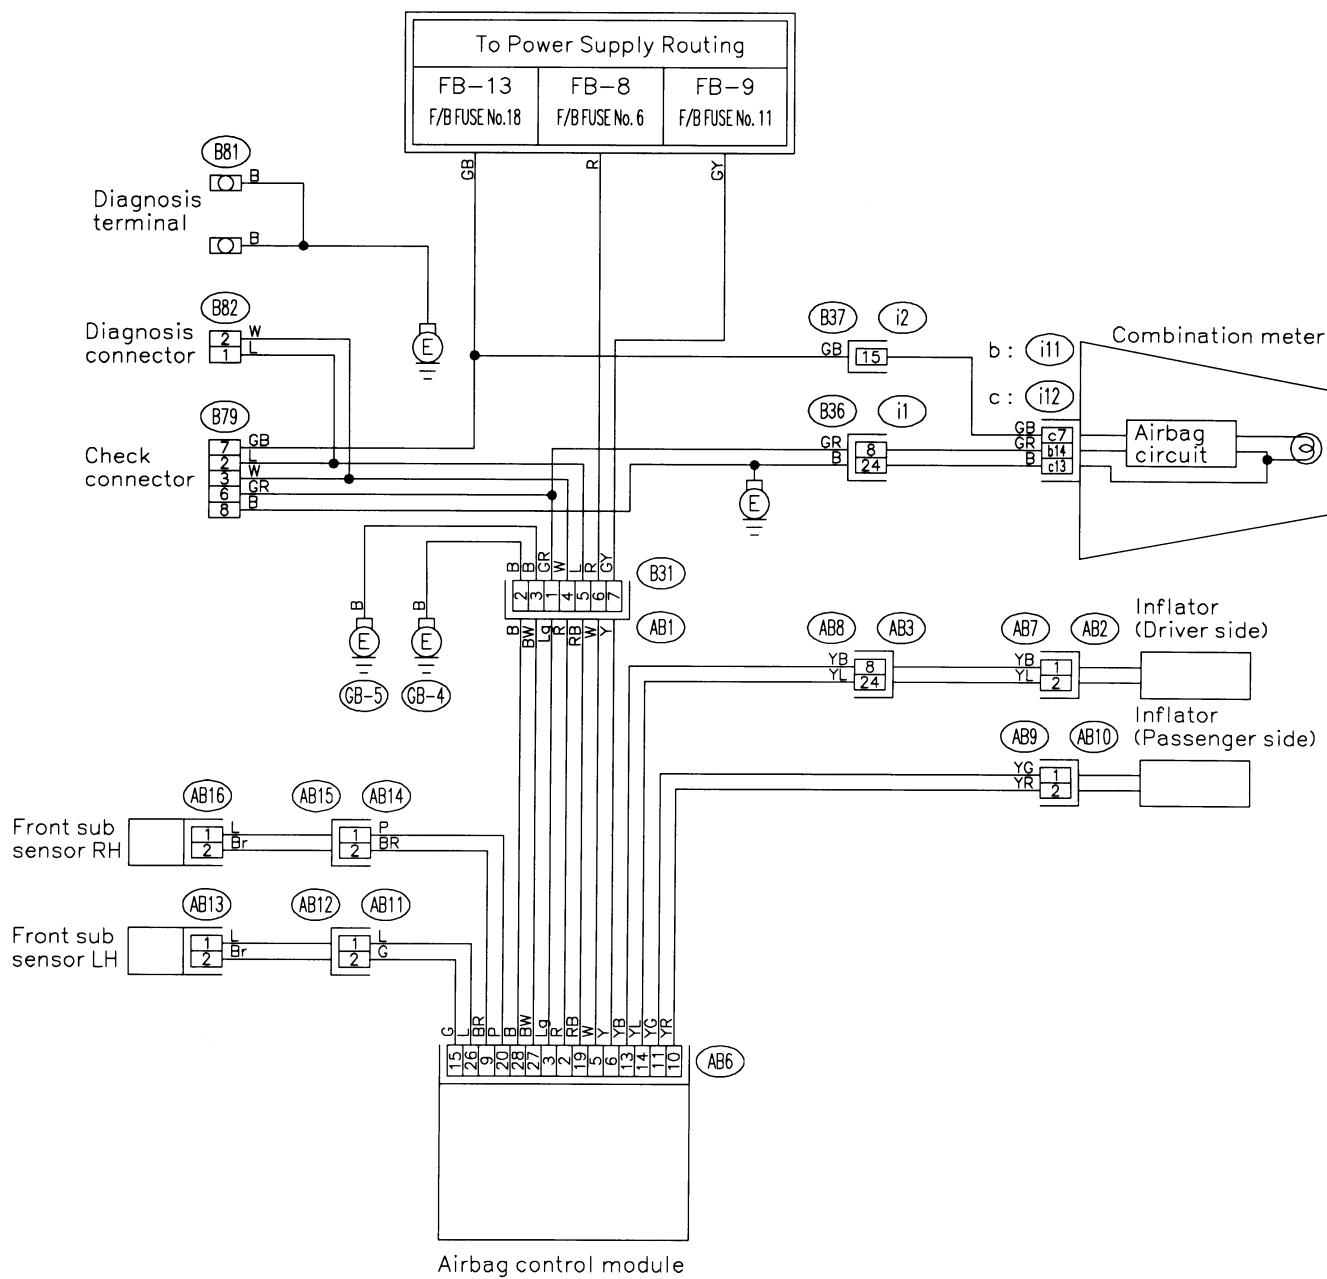

(B81)

(B82) (Black)

(B79) (Gray)





i2

AB9 (Yellow)

(Blue) AB11 AB8 (Yellow)

(Blue) AB14 AB7 (Yellow)

1 2



1 2

AB6 (Yellow)




i1 (Blue)

AB16 (Yellow)

AB13 (Yellow)

i11

i12




GU86-06

WIRING DIAGRAM

[D5D0] 6-3
5. Wiring Diagram

D: AIR CONDITIONING SYSTEM

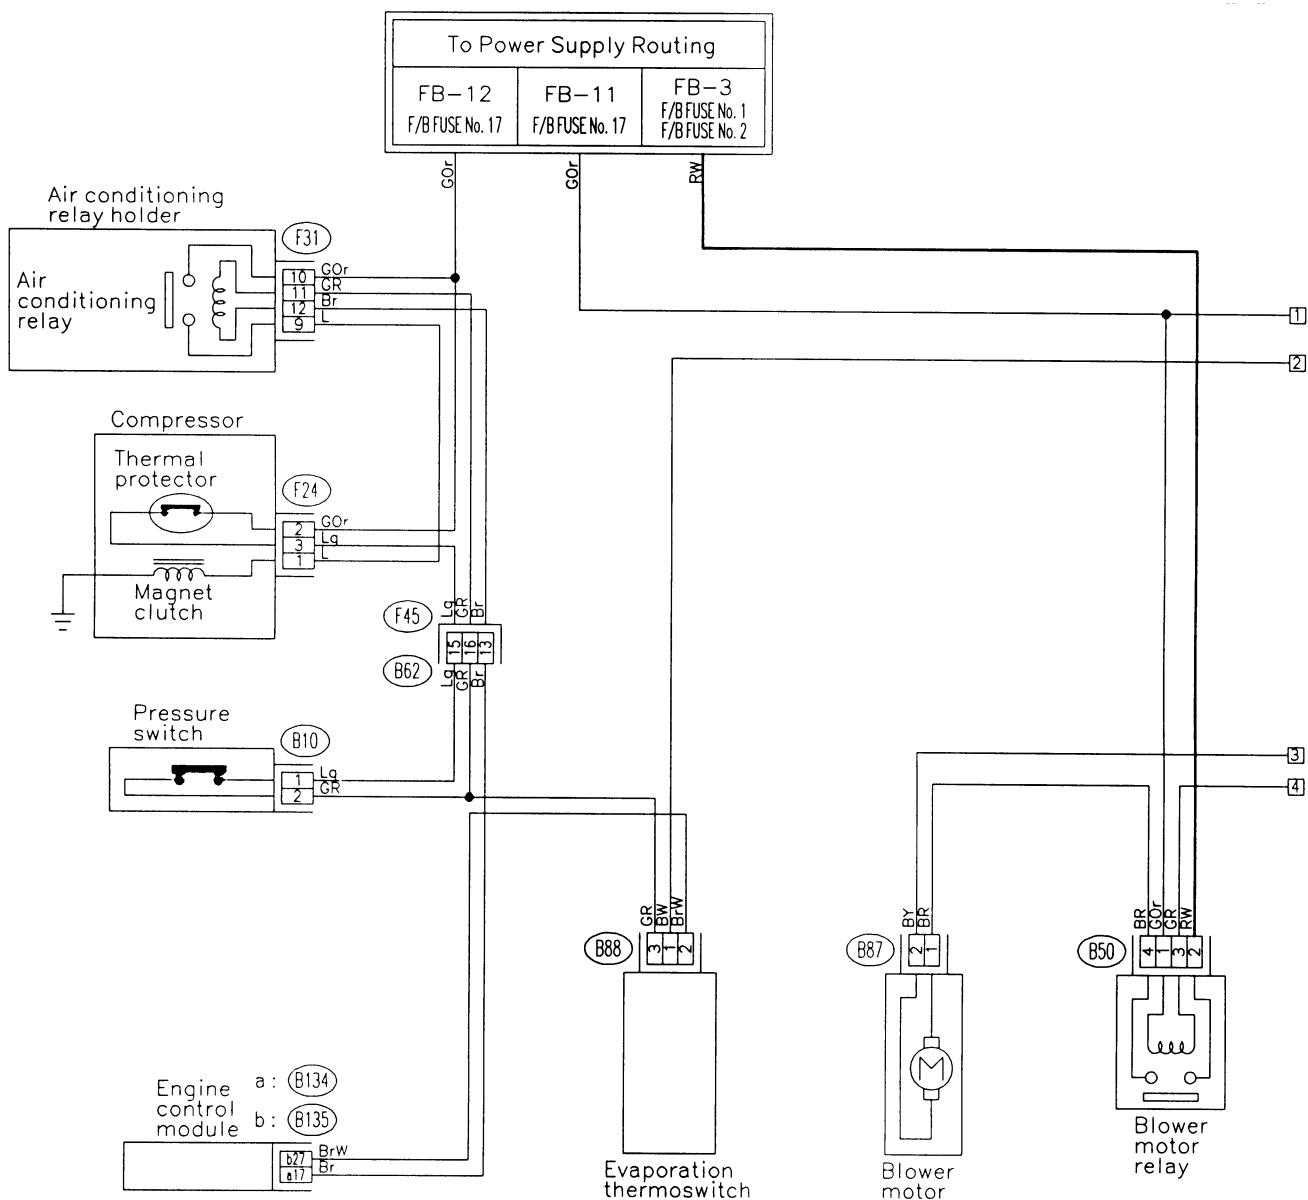

(B87)


(B10)
(Gray)

(F24)
(Gray)

(B88)
(Brown)

(B50)

(B62)



(F27)




(F31)

(F28)

(F66)
(F67)

a: (B134)


b: (B135)



6-3 [D5D0]

5. Wiring Diagram

WIRING DIAGRAM

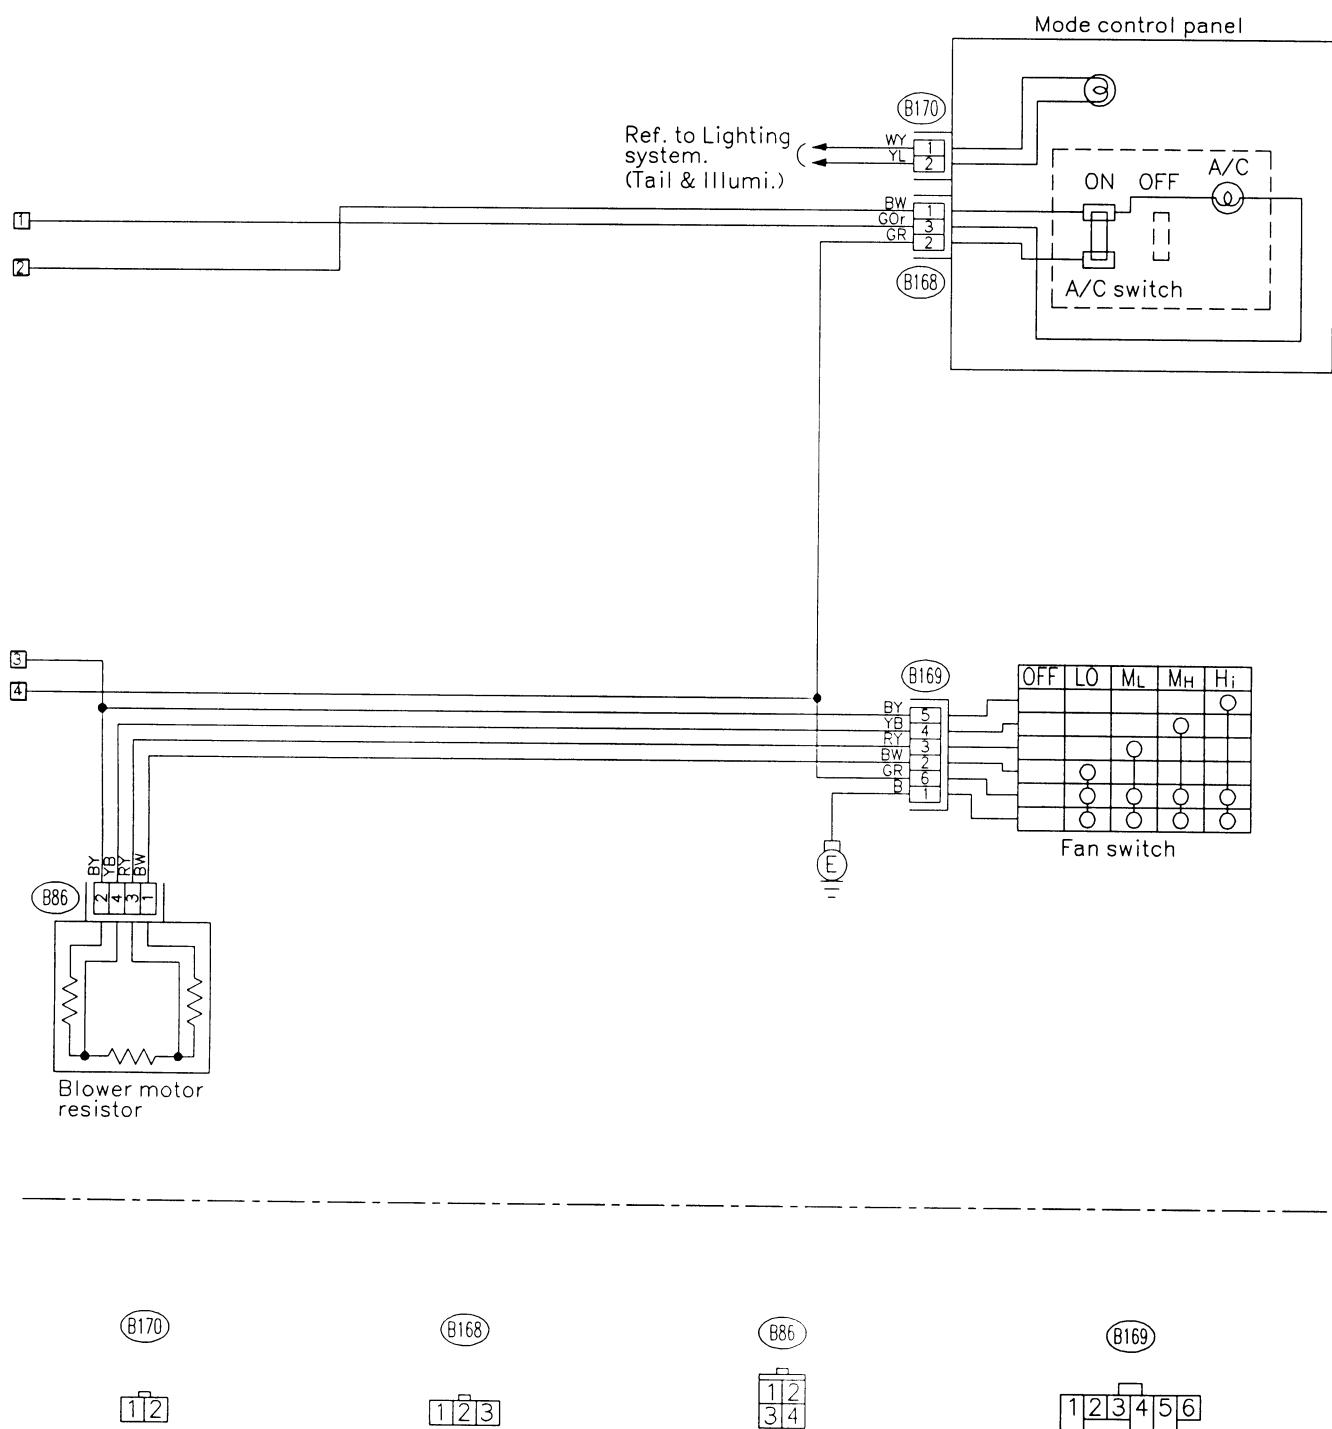


GU45-06B

WIRING DIAGRAM

[D5E0] 6-3
5. Wiring Diagram

E: ANTI-LOCK BRAKE SYSTEM

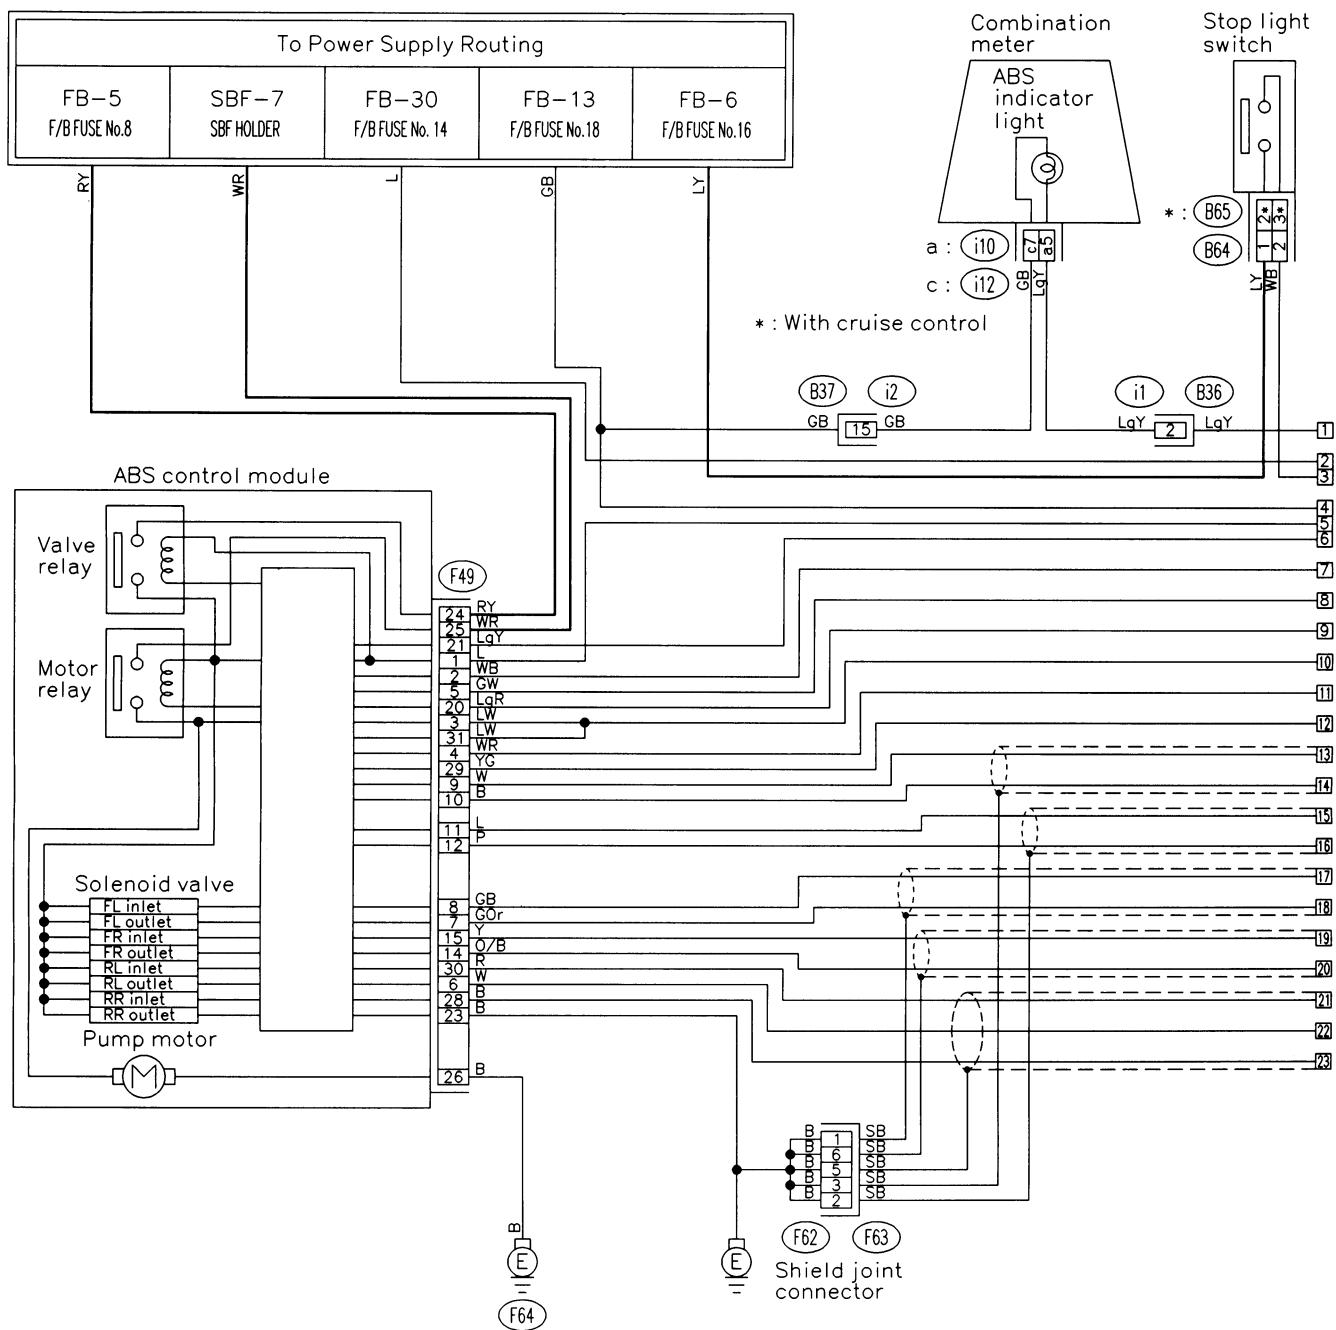

(B64) (Black)

(B65) (Black)

(F62)

(F49)

i10

1 2

1 2
3 4

1 2 3
4 5 6

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26				
27	28	29	30	31										

1 2 3 4 5 6 7 8 9 10

i1 (Blue)

1	2	3	4	5	6	7	8	9	10	11		
12	13	14	15	16	17	18	19	20	21	22	23	24

(B61)

1	2	3	4
5	6	7	8

i2

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

i12


1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

GU82-06A

6-3 [D5E0]

5. Wiring Diagram

WIRING DIAGRAM



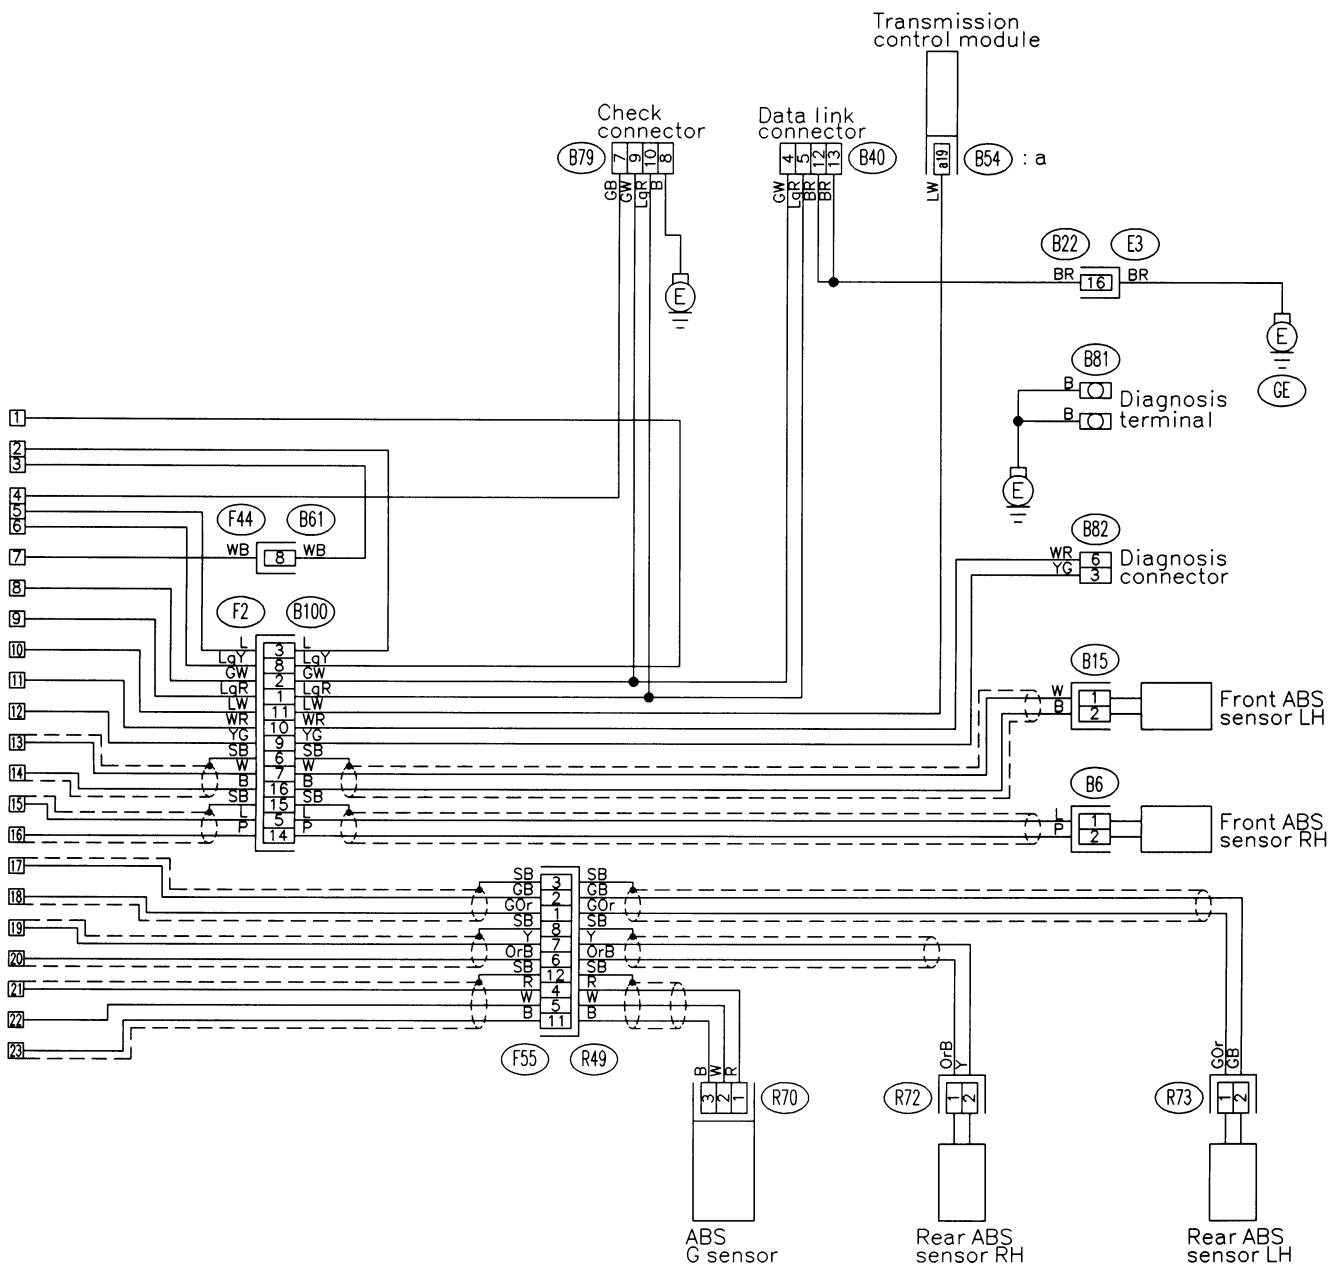


(Gray) (B6) (B15) (Gray)

(Gray) (R73) (R72) (Gray) (R70) (Black) (B82) (Black)

(F55)

(B40) (Black)







(B22) (Brown)

(B79) (Gray)

(B100) (Blue)

a : (B54) (White)




GU82-06B

WIRING DIAGRAM

[D5F0] 6-3
5. Wiring Diagram


F: A/T CONTROL SYSTEM

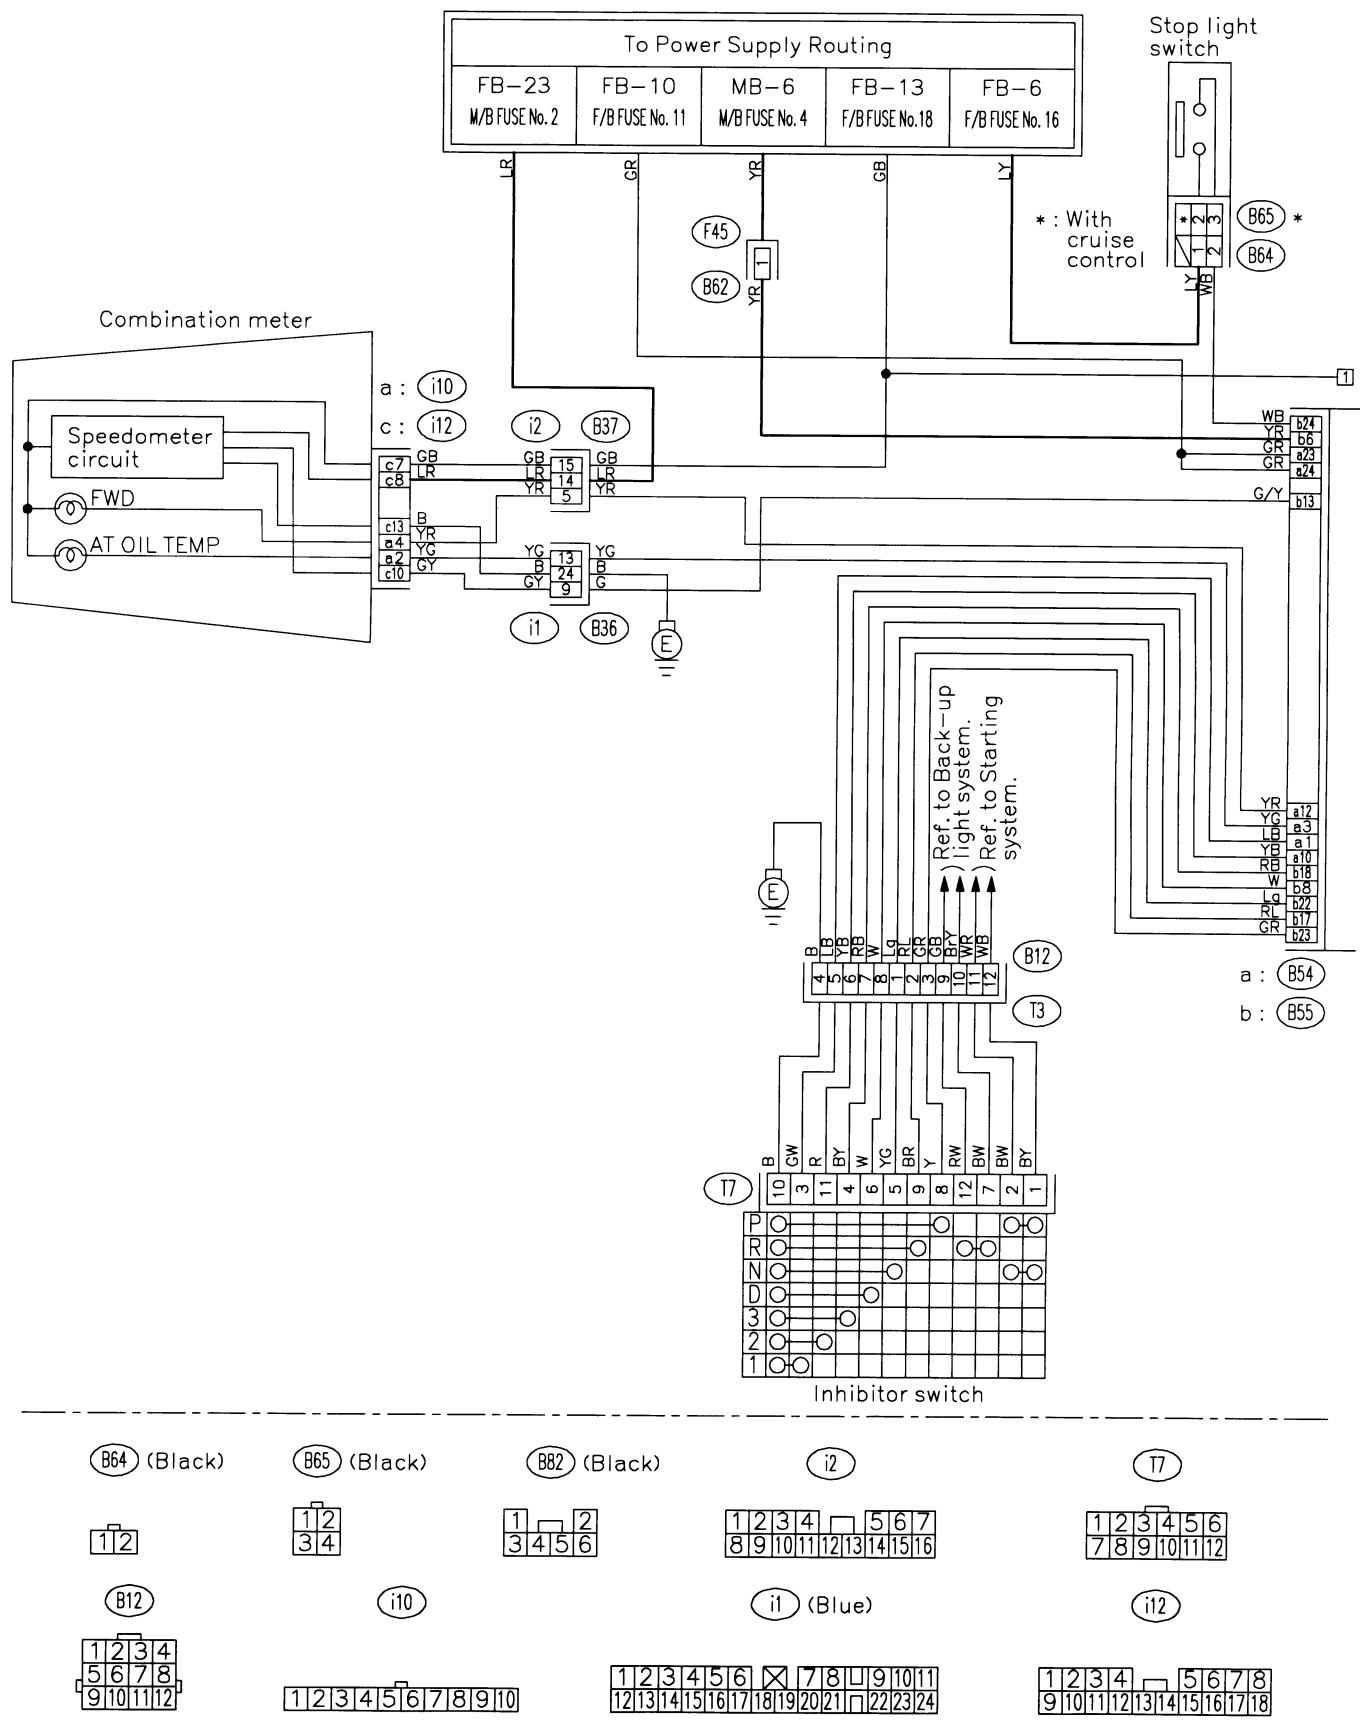

6-3 [D5F0]

5. Wiring Diagram

WIRING DIAGRAM

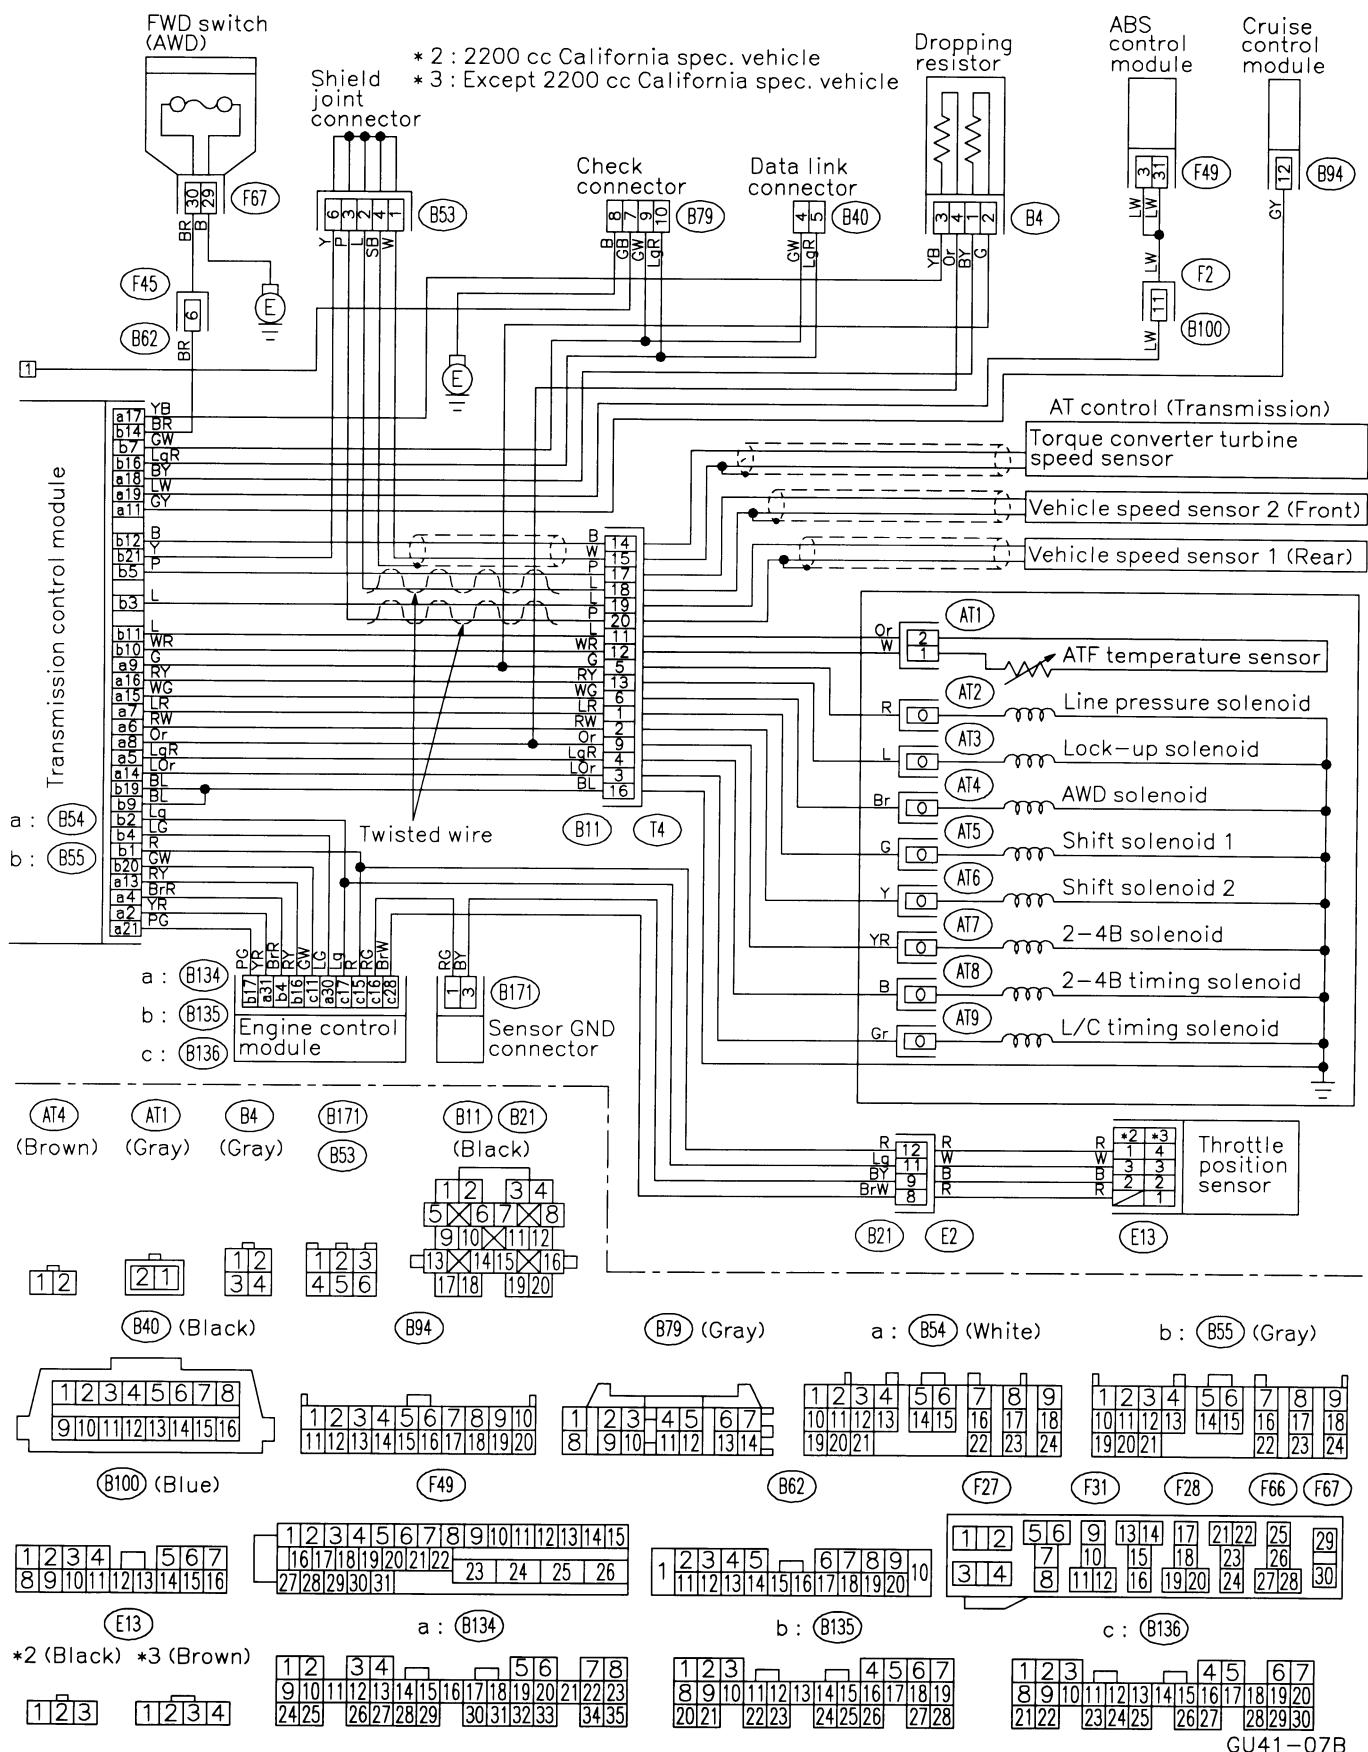


WIRING DIAGRAM

[D5G0] 6-3

5. Wiring Diagram

G: A/T SHIFT LOCK SYSTEM

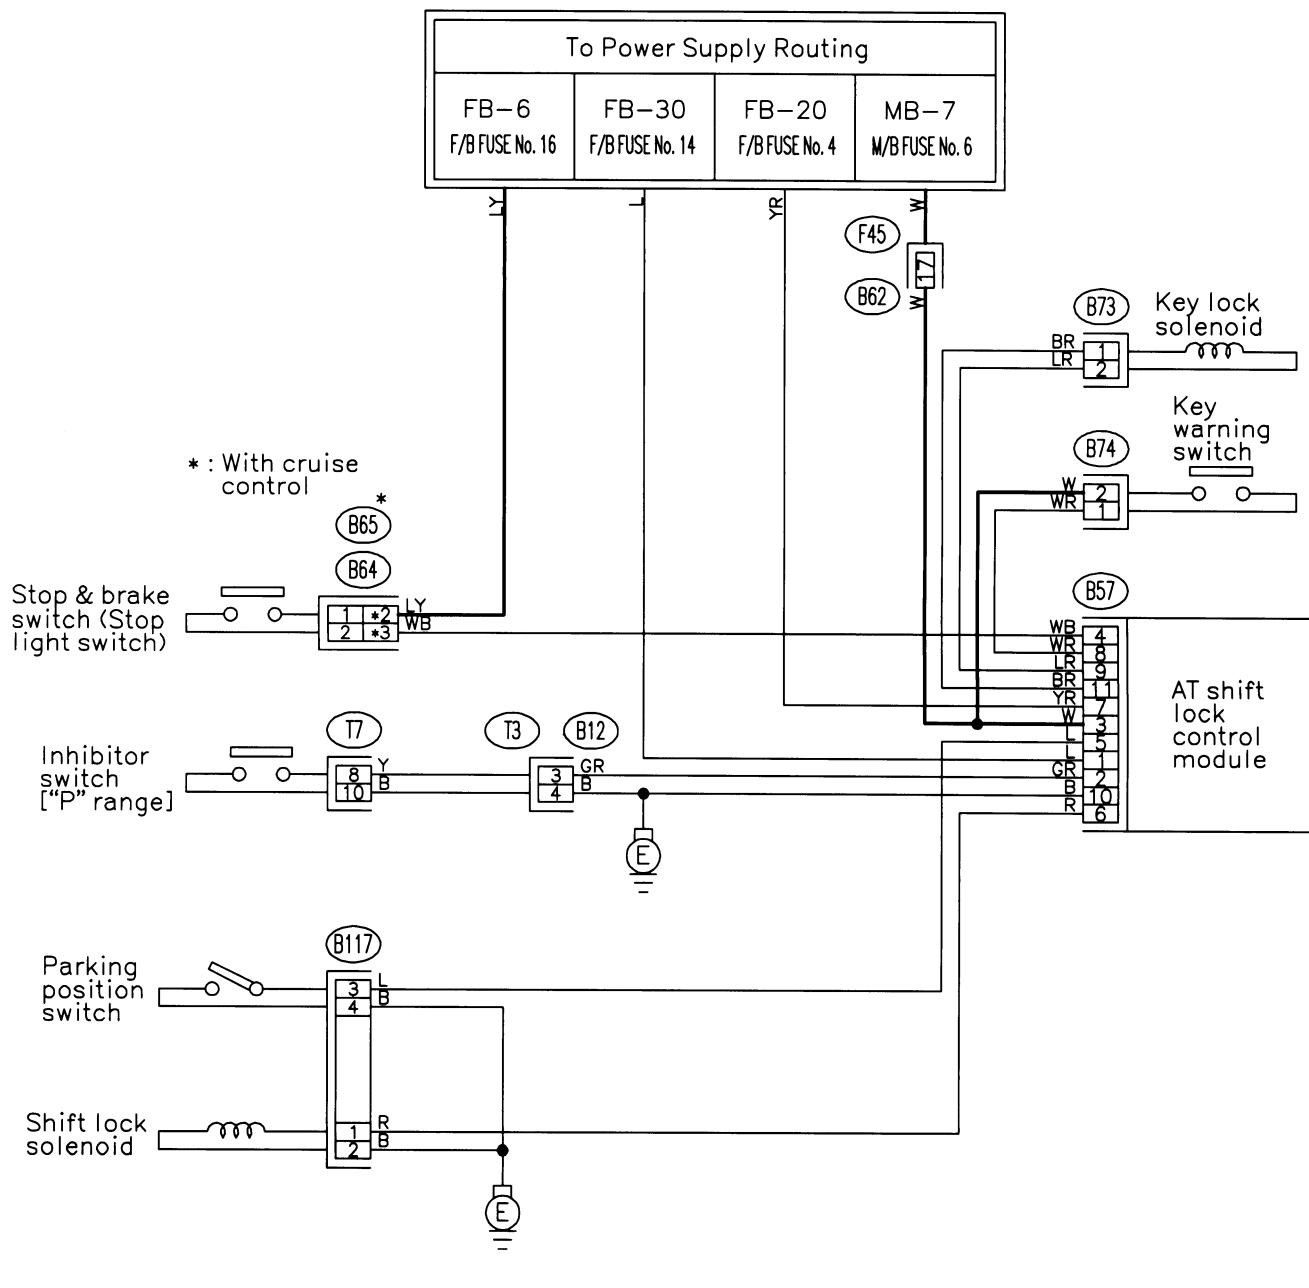

(B74) (Black)



(B73)




(B64) (Black)




(B65) (Black)



(B117)




(T7) (B57)



(B62)



(B12)




GU42-05

6-3 [D5H0]

5. Wiring Diagram

WIRING DIAGRAM

H: AUDIO SYSTEM

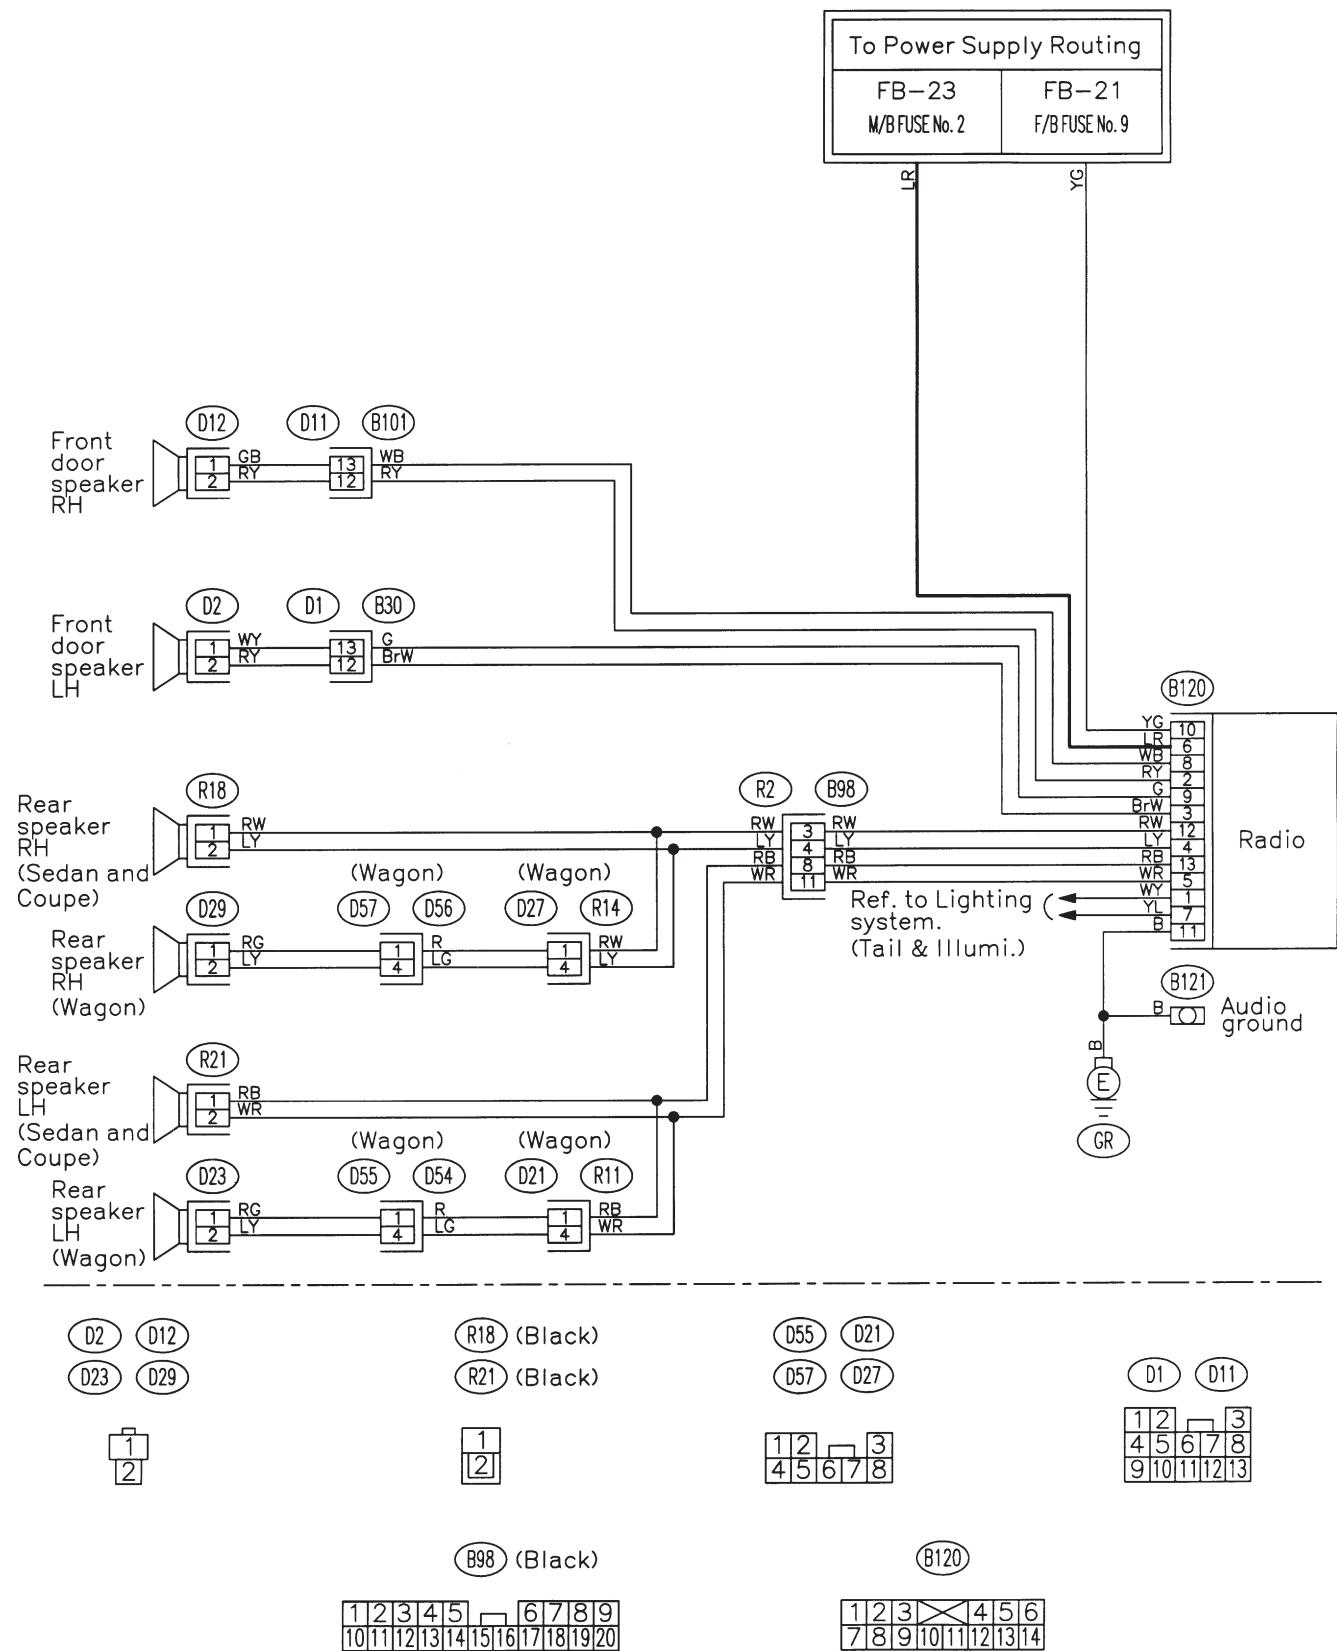


WIRING DIAGRAM

[D510] 6-3

5. Wiring Diagram

I: CHARGING SYSTEM

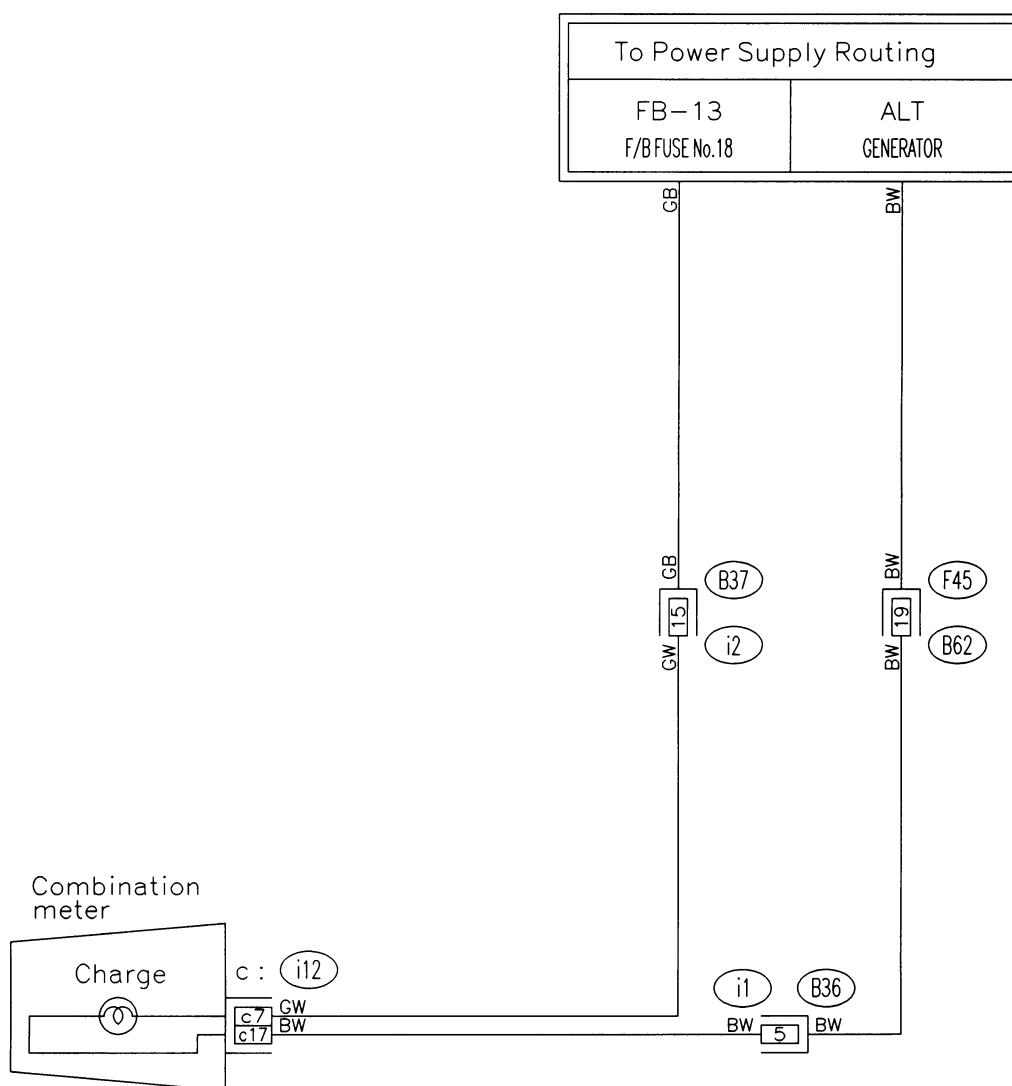

1	2	3	4	5	□	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	

1	2	3	4	5	6	☒	7	8	□	9	10	11	
12	13	14	15	16	17	18	19	20	21	□	22	23	24

1	2	3	4	□	5	6	7	8
8	9	10	11	12	13	14	15	16

(B62)

(i1) (Blue)

(i2)

1	2	3	4	□	5	6	7	8	
9	10	11	12	13	14	15	16	17	18

(i12)


GU02-05

6-3 [D5J0]

5. Wiring Diagram

WIRING DIAGRAM

J: COMBINATION METER

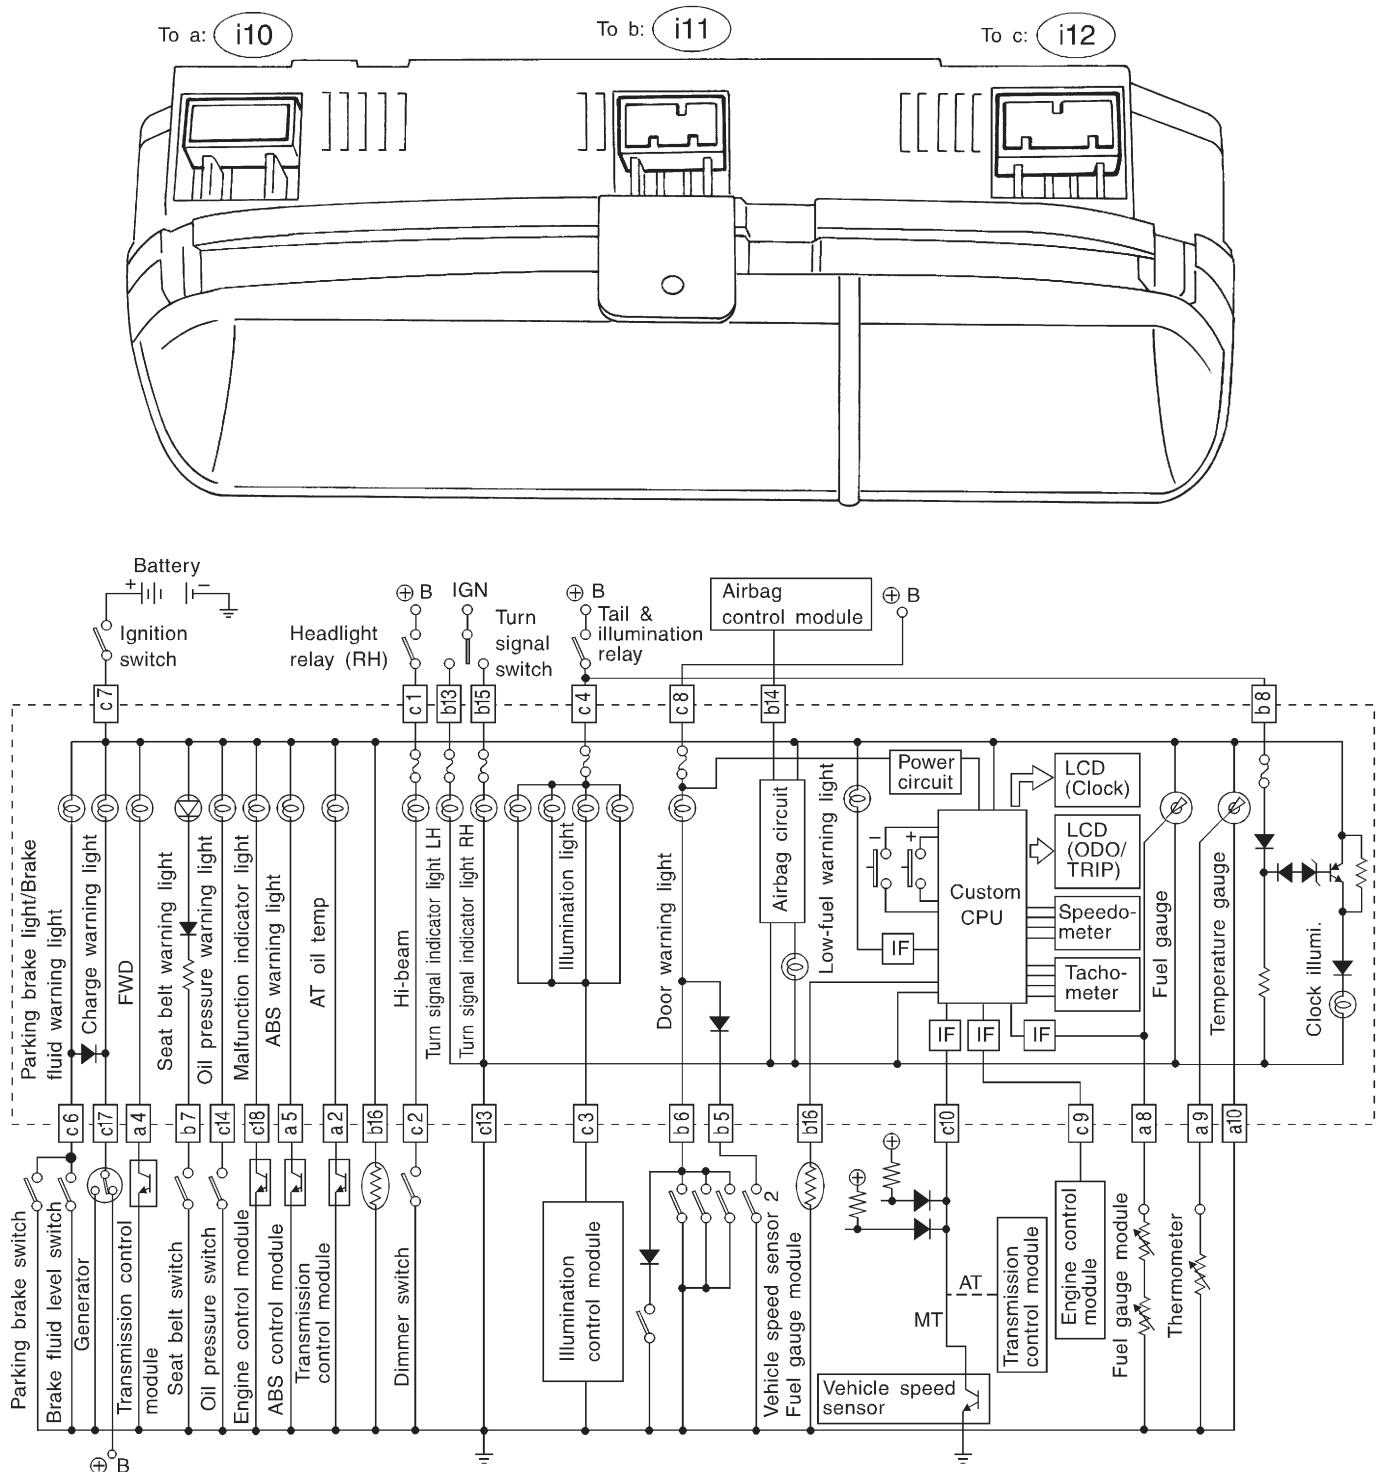


WIRING DIAGRAM


[D5K0] 6-3

5. Wiring Diagram

K: DOOR LOCK SYSTEM

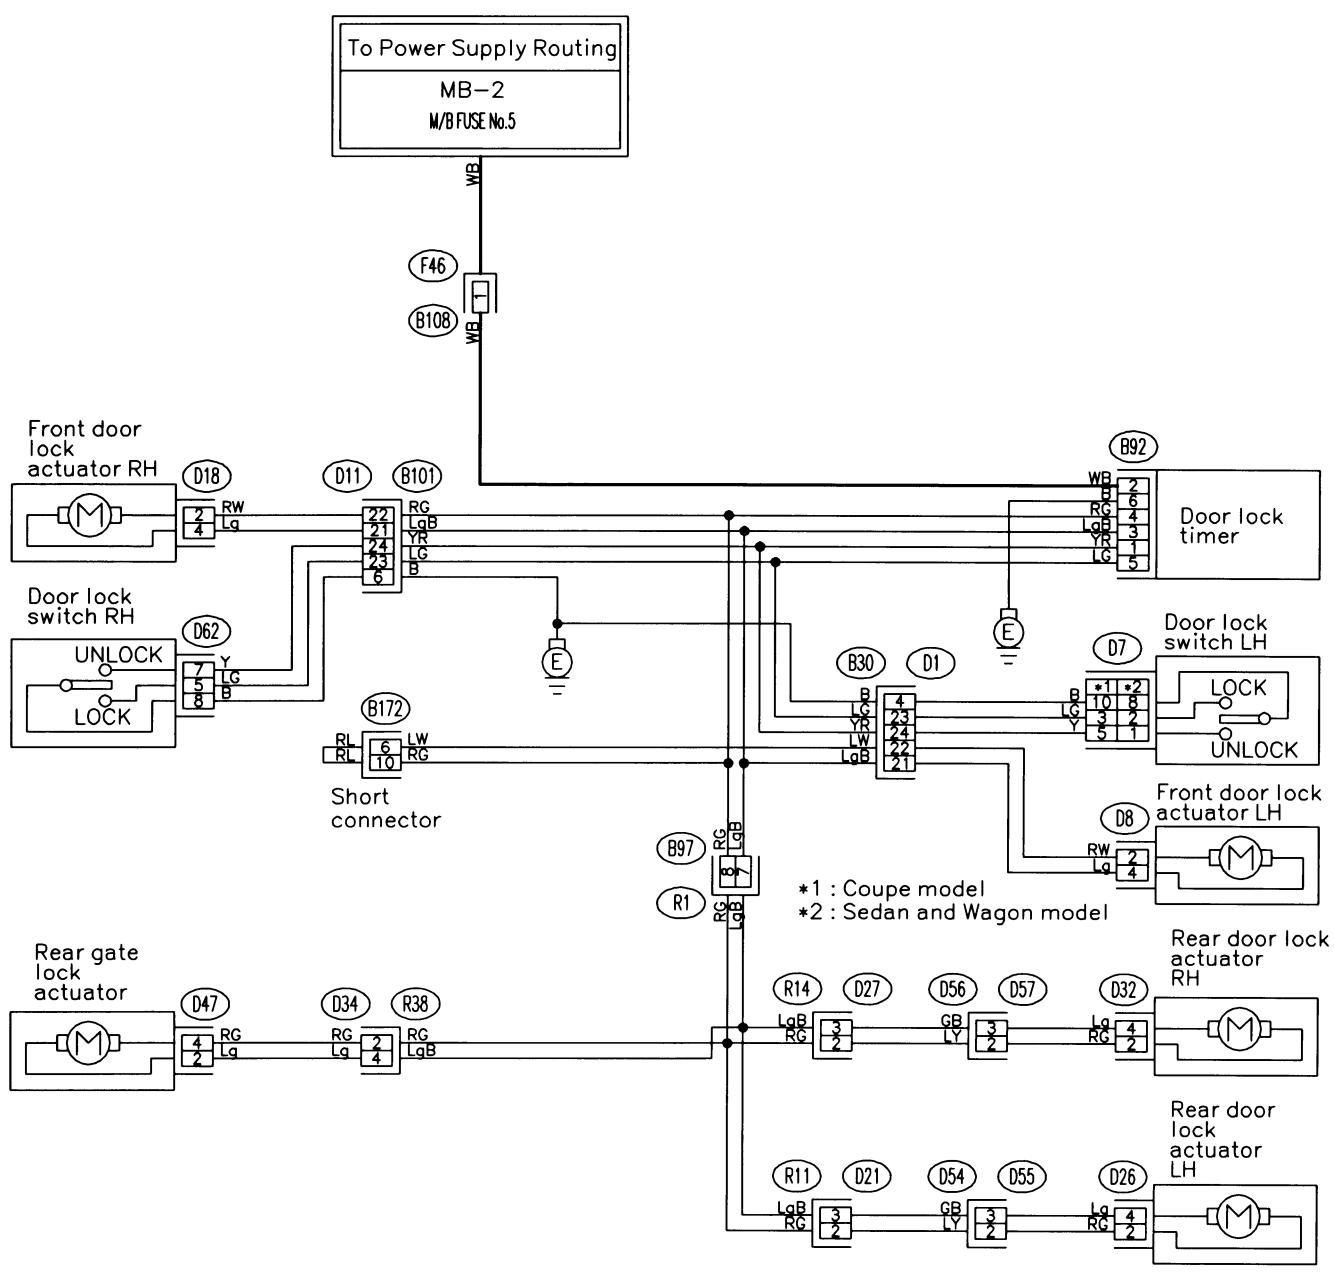

*1 : Coupe model
*2 : Sedan and Wagon model

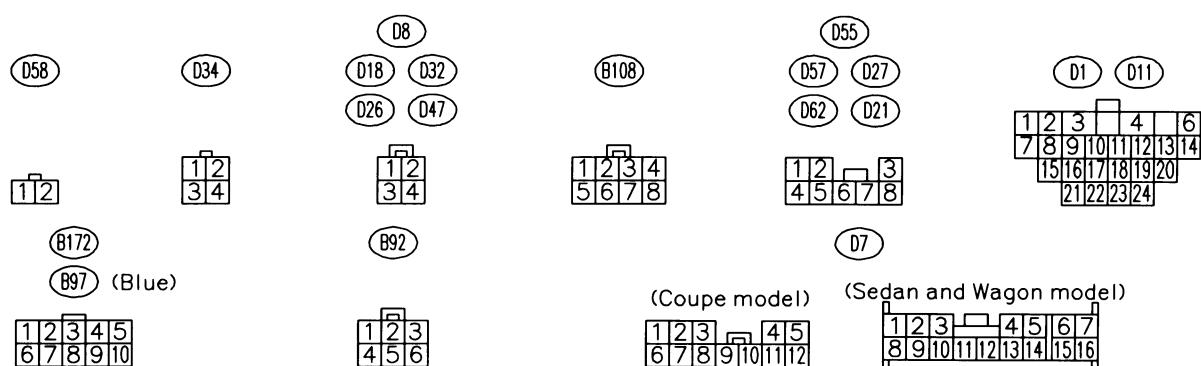

GU73-05


6-3 [D5L1]

5. Wiring Diagram

WIRING DIAGRAM


L: ENGINE ELECTRICAL SYSTEM

1. 2200 cc CALIFORNIA SPEC. VEHICLES

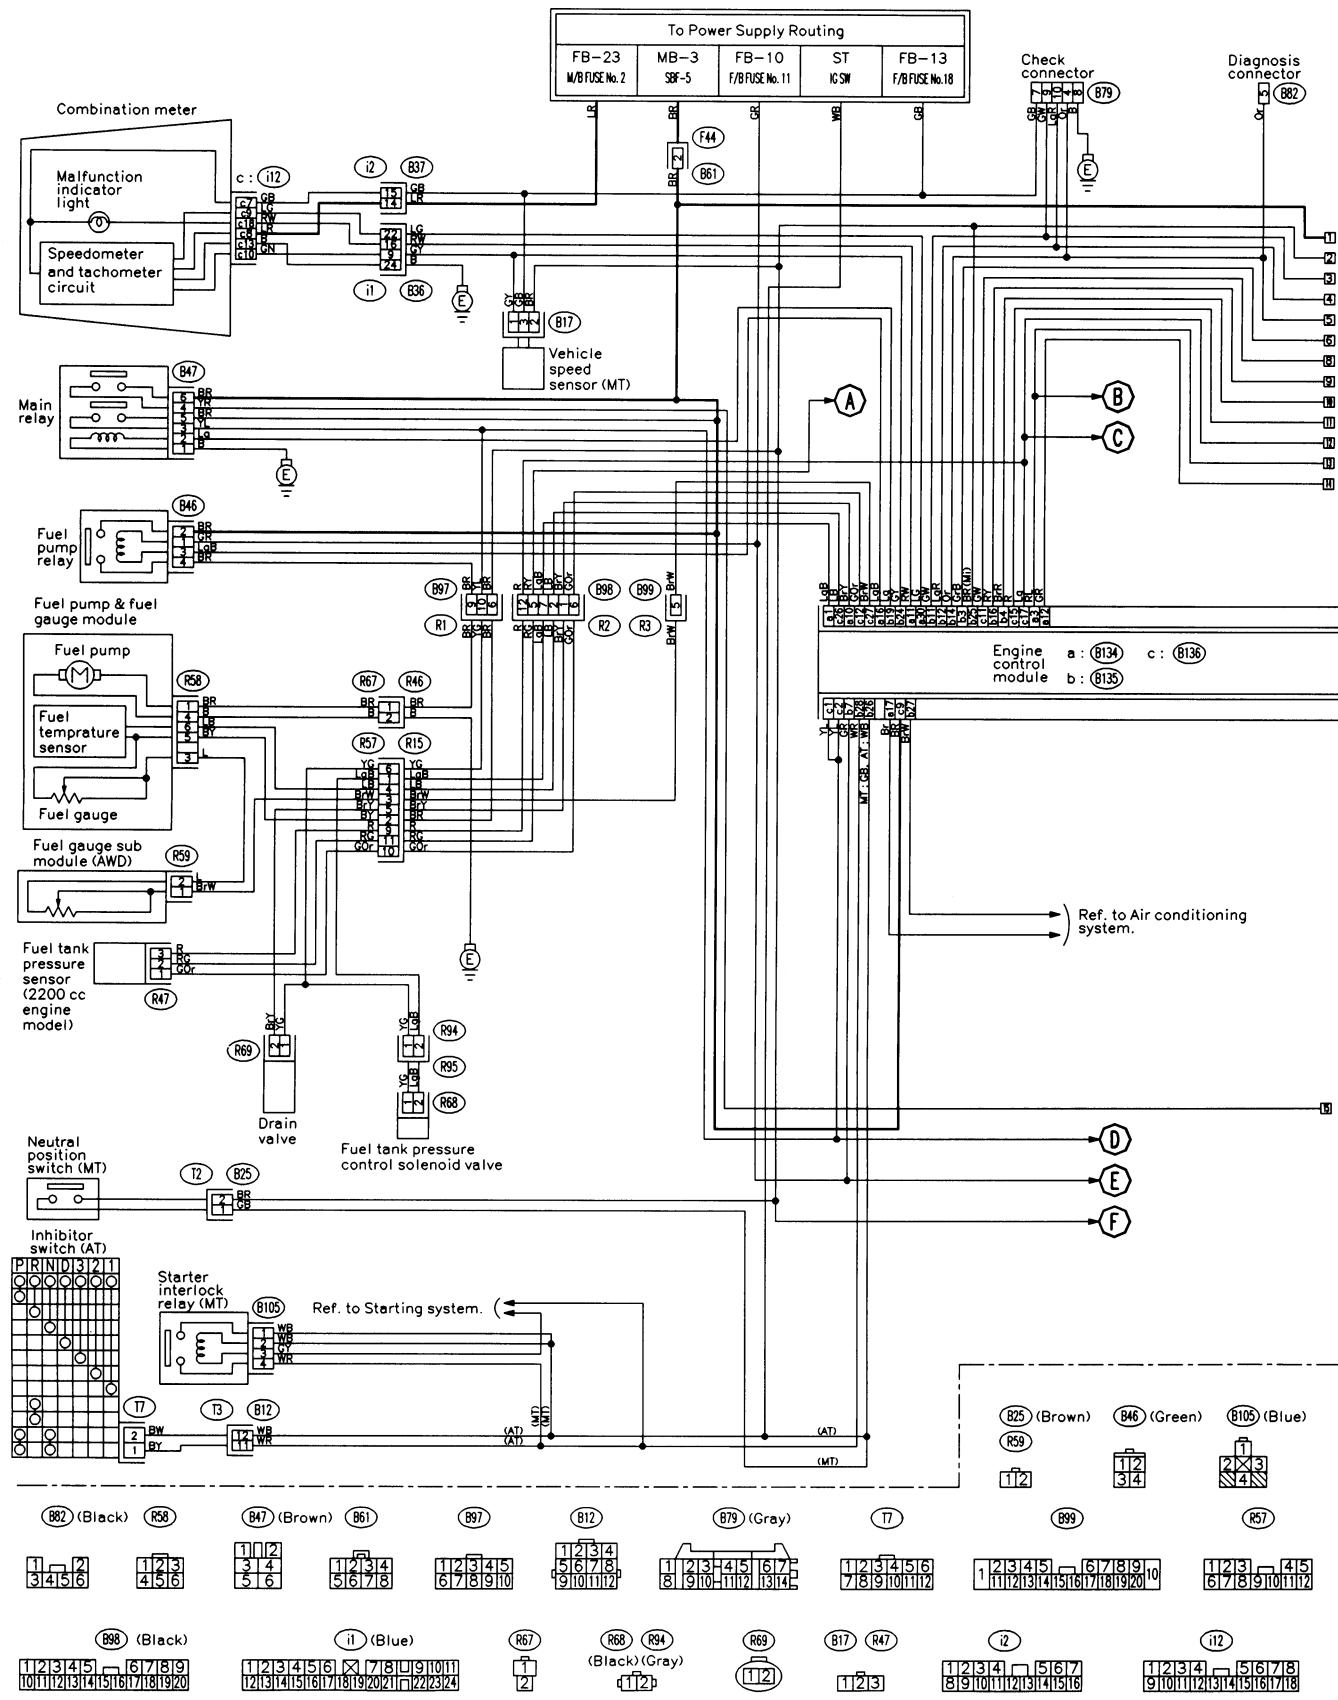

WIRING DIAGRAM

[D5L1] 6-3
5. Wiring Diagram

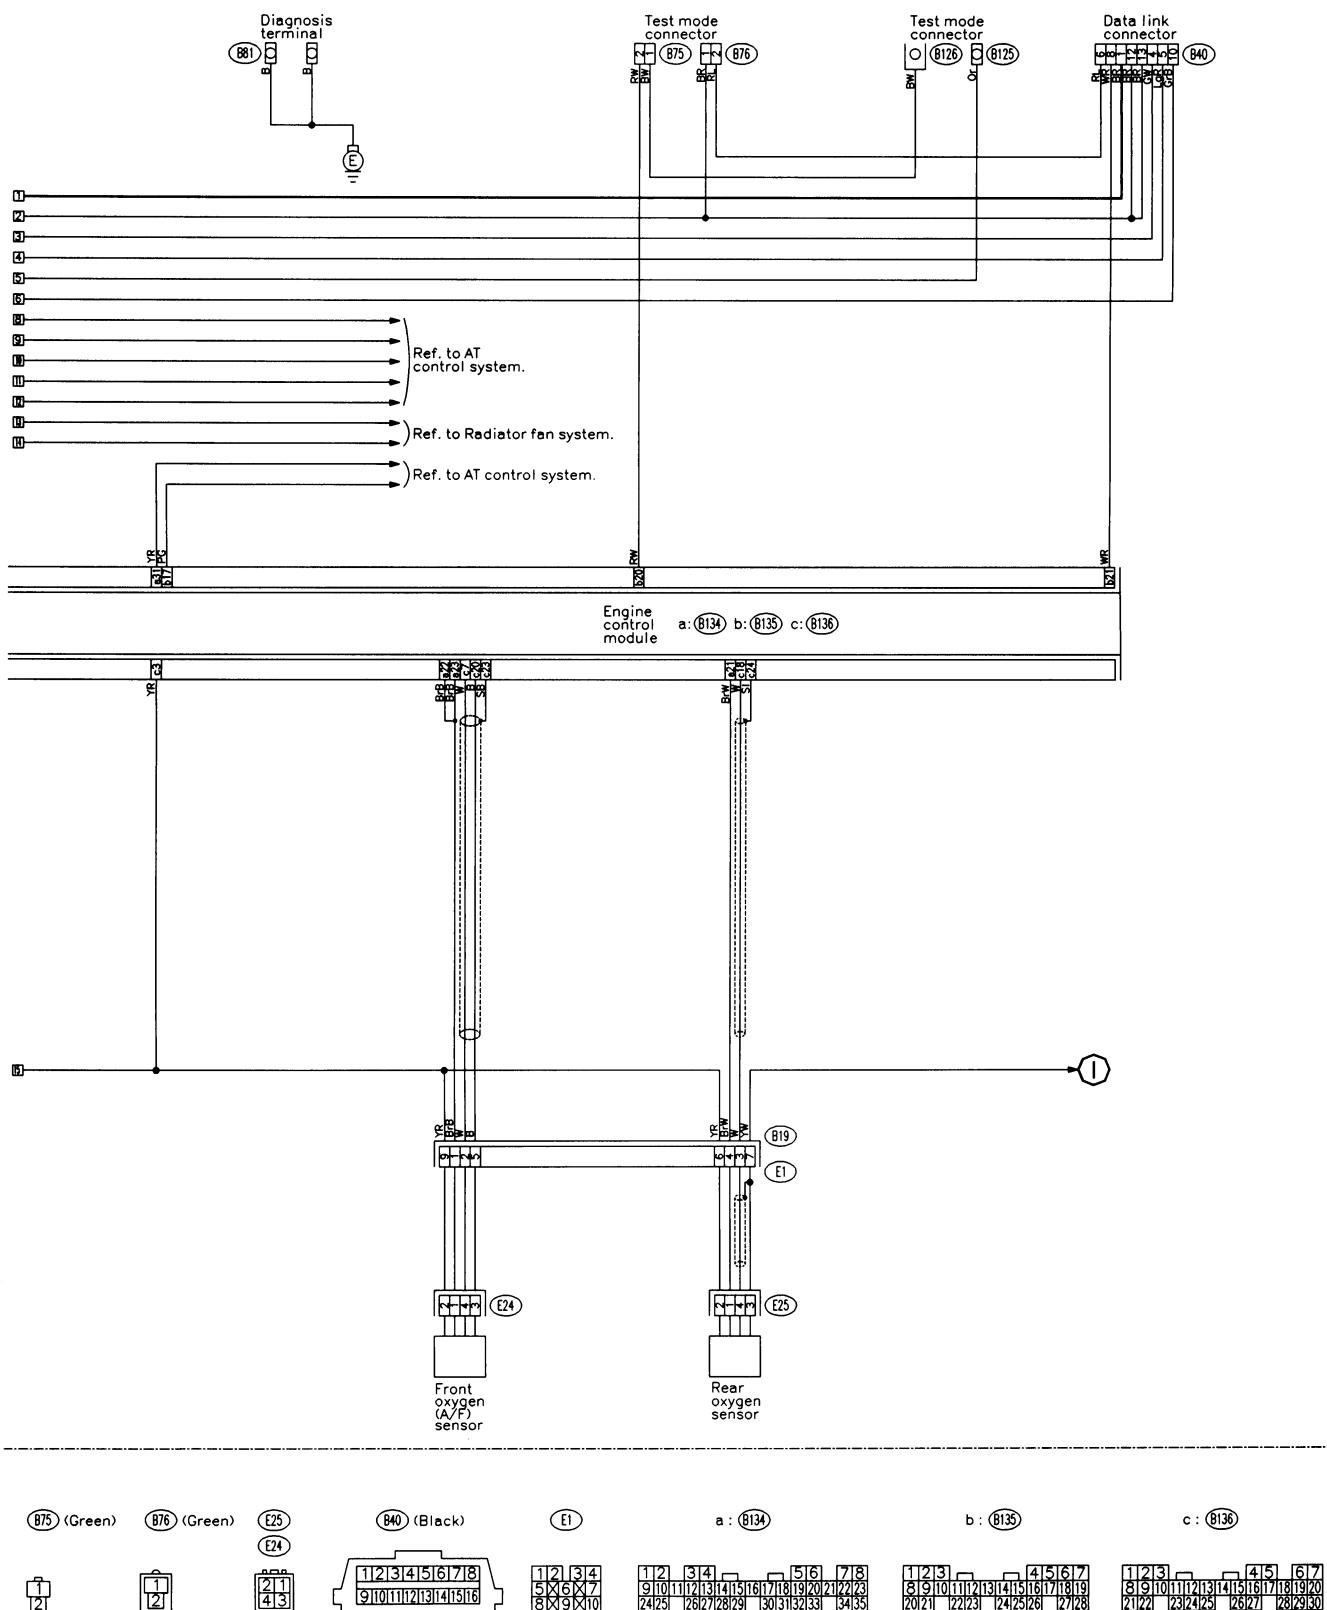


GU10-12B

6-3 [D5L1]

5. Wiring Diagram


WIRING DIAGRAM

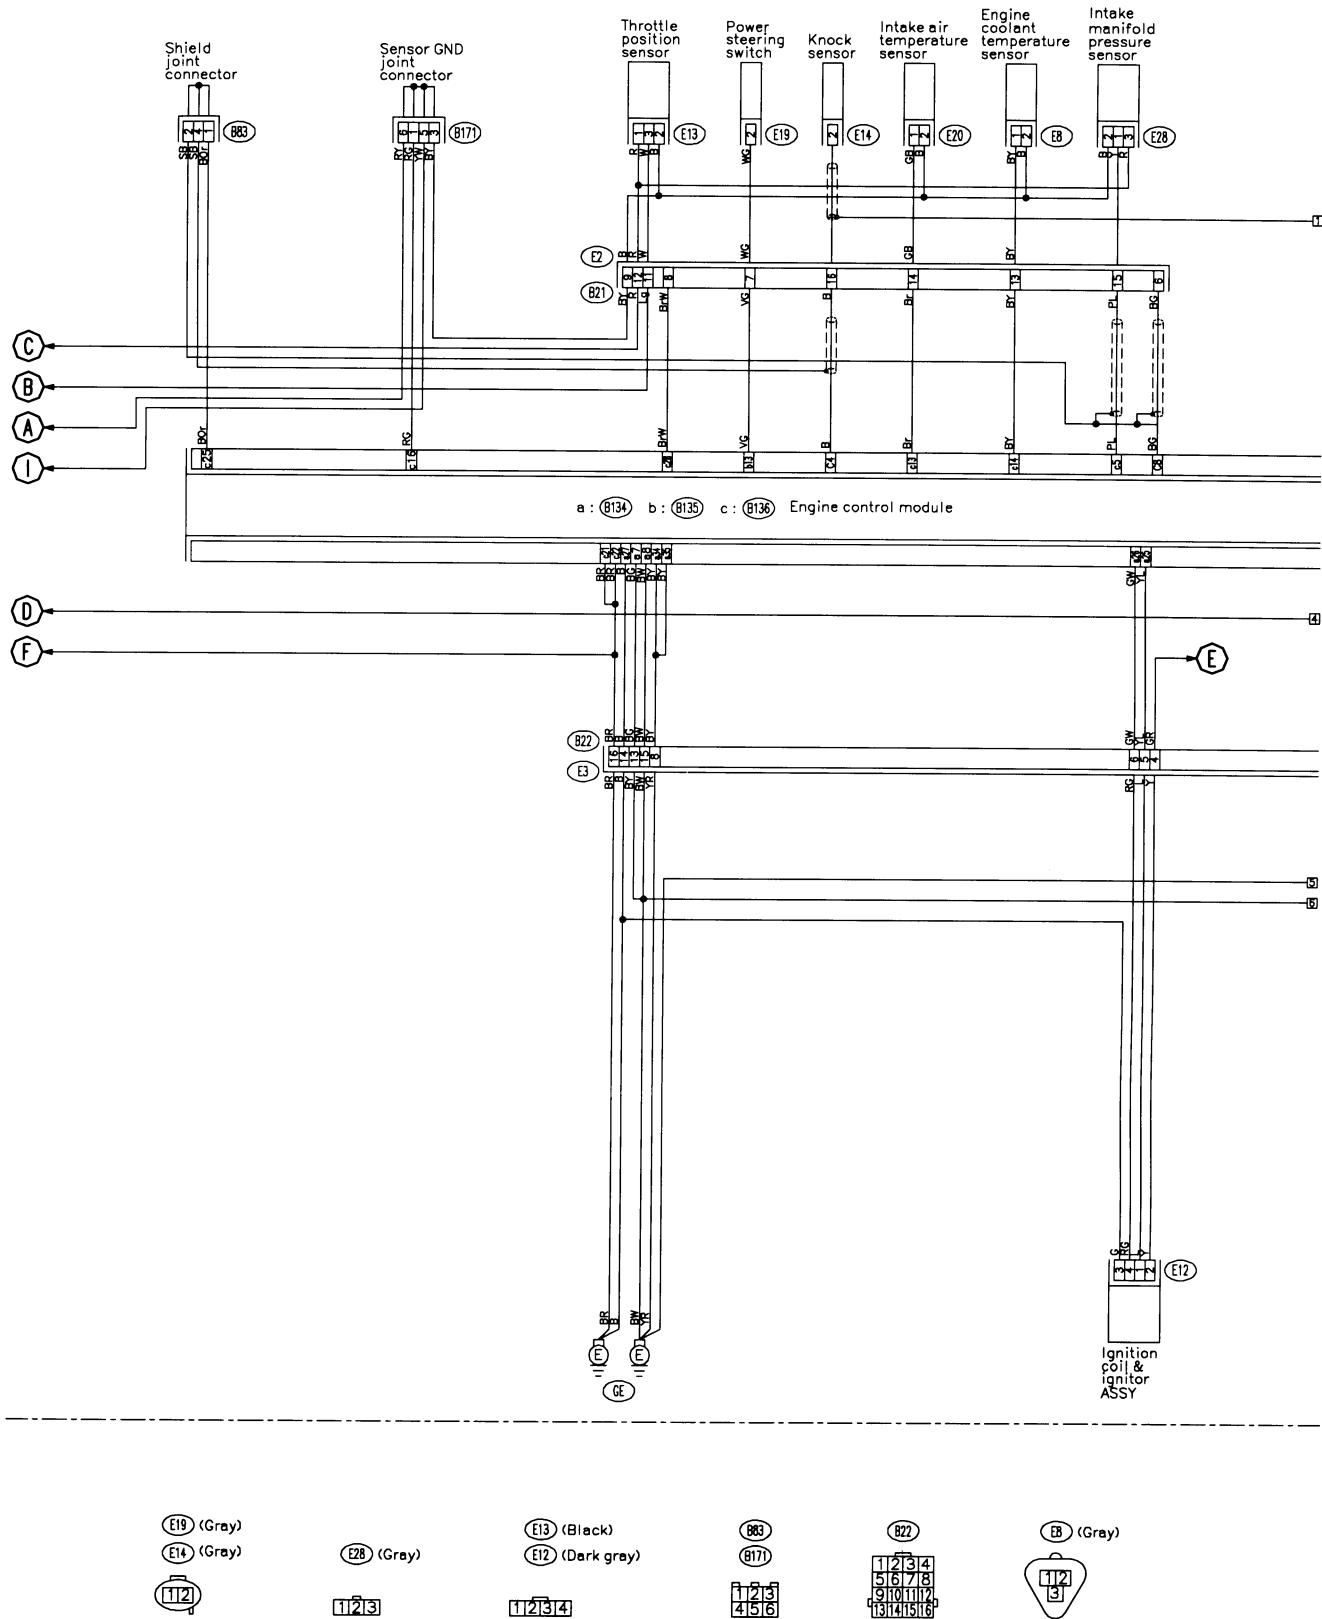

GU10-12C

WIRING DIAGRAM

[D5L1] 6-3
5. Wiring Diagram

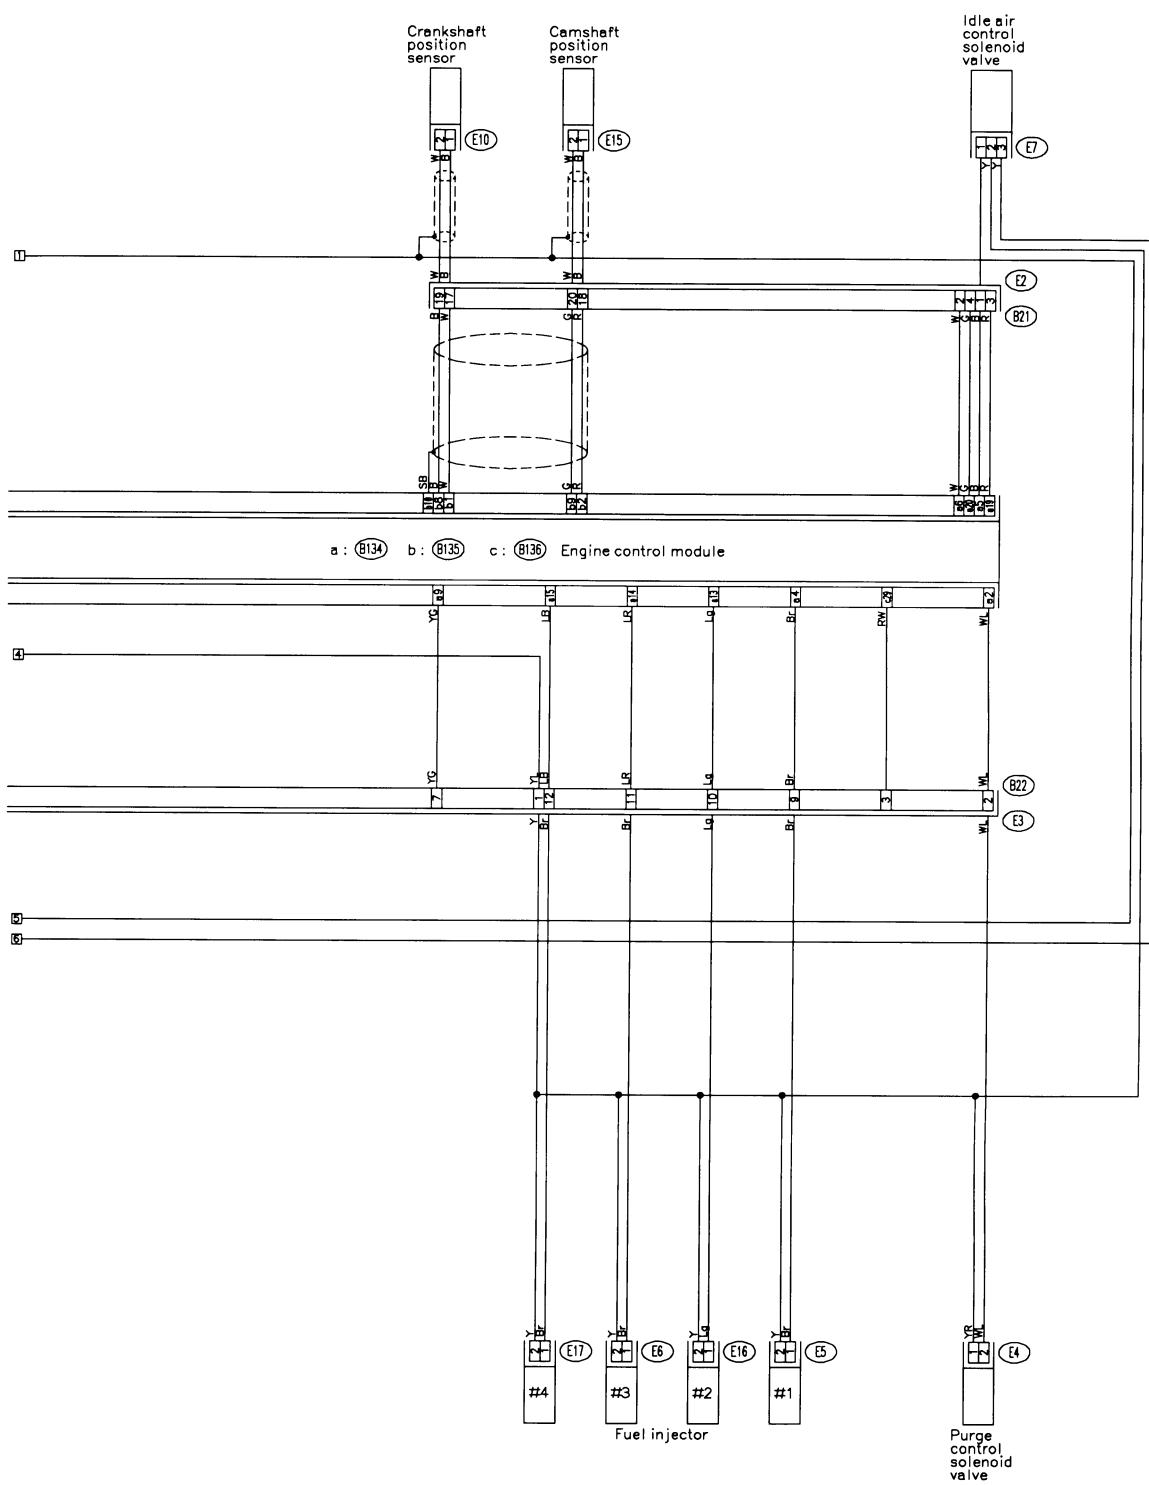

(Black) (E10) (E15) (Black)
(Black) (E5) (E16) (Black)
(Black) (E6) (E17) (Black)

(E22) (Grey)
(E4) (Black)

(E7)

(B21)
[1 2] [3 4]
[5 X 6] [7 X 8]

a : (8134)

b : (8135)

c : (8136)

(112)

(112)

(1123)

[1 2] [3 4]
[5 X 6] [7 X 8]

[1 2] [3 4]
[5 X 6] [7 X 8]

[1 2] [3 4]
[5 X 6] [7 X 8]


[1 2] [3 4]
[5 X 6] [7 X 8]

6-3 [D5L2]

5. Wiring Diagram


WIRING DIAGRAM

2. EXCEPT 2200 cc CALIFORNIA SPEC. VEHICLES

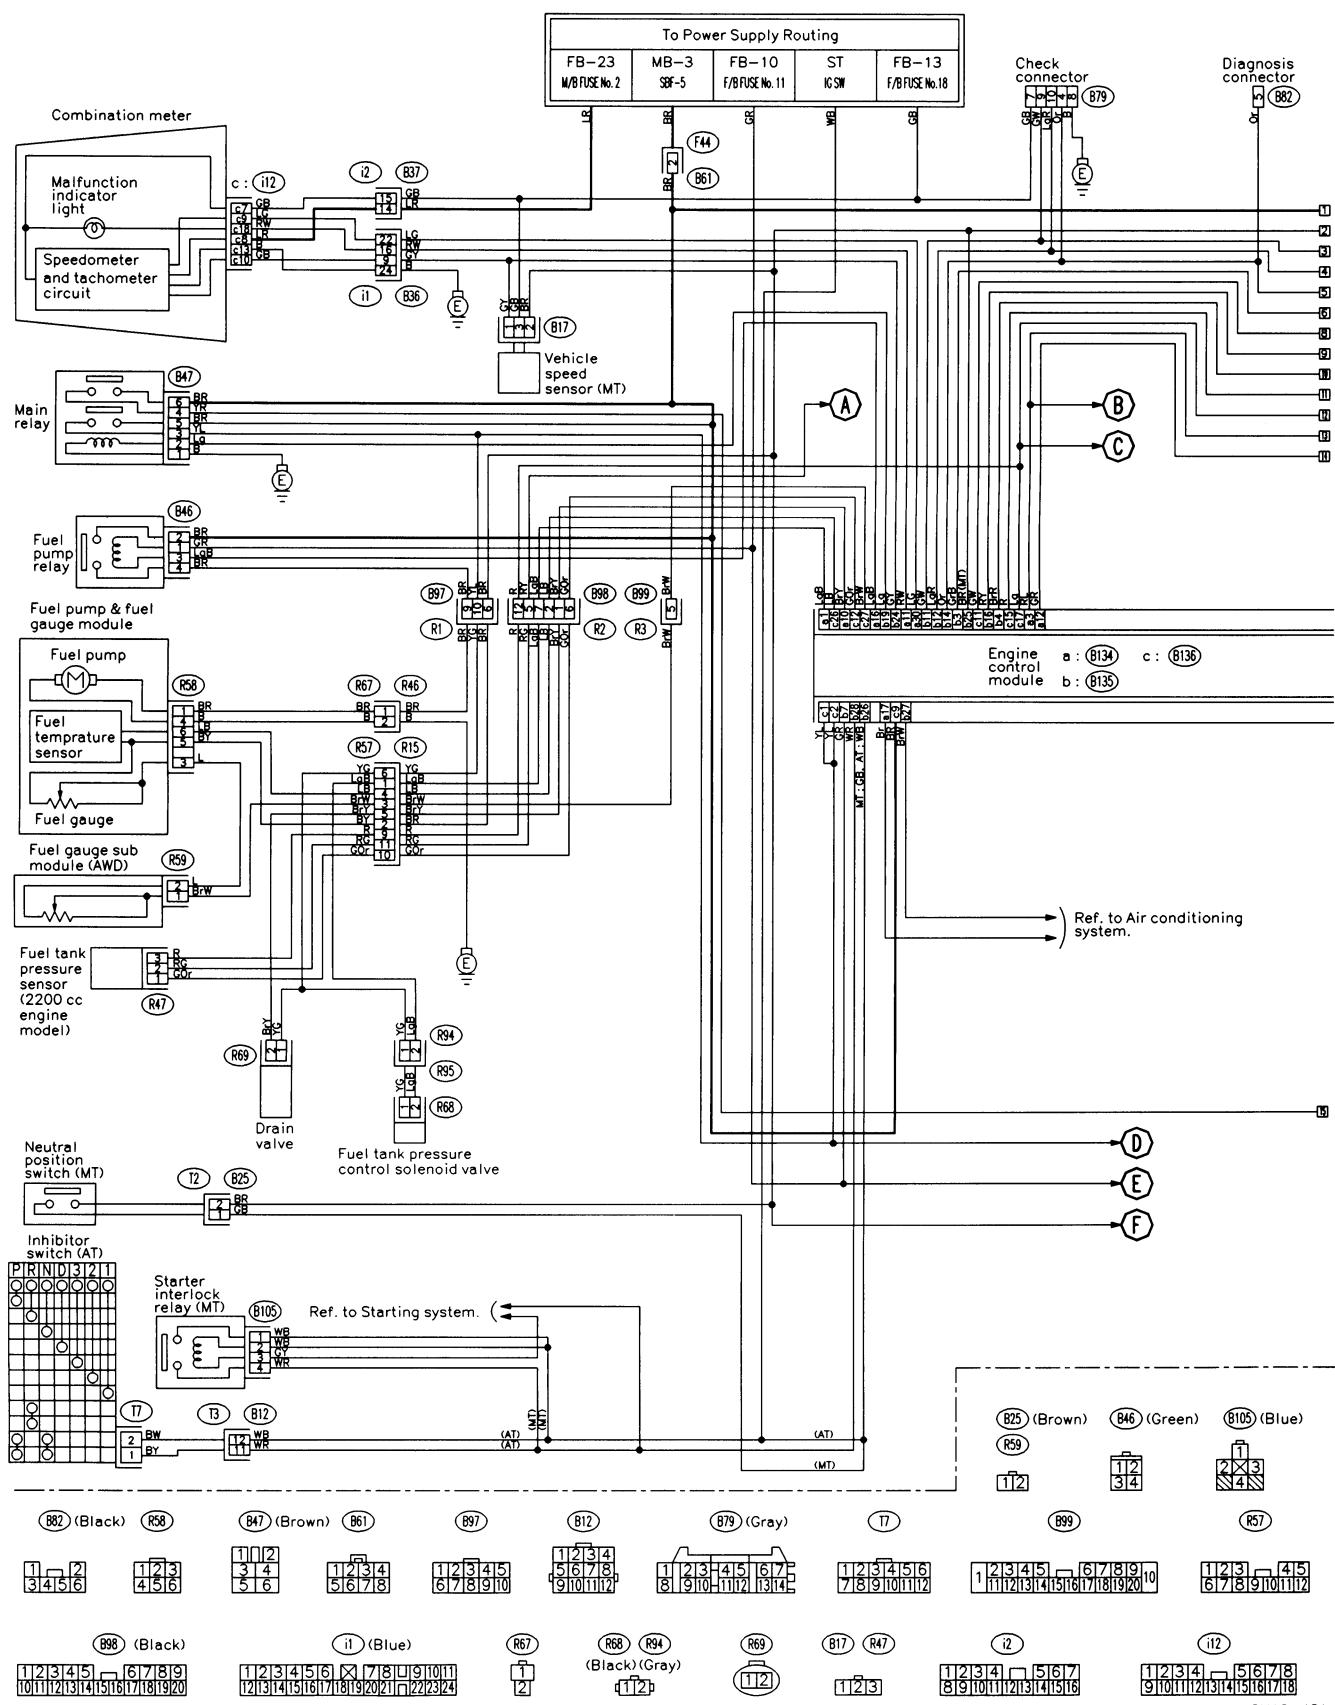

WIRING DIAGRAM


[D5L2] 6-3
5. Wiring Diagram

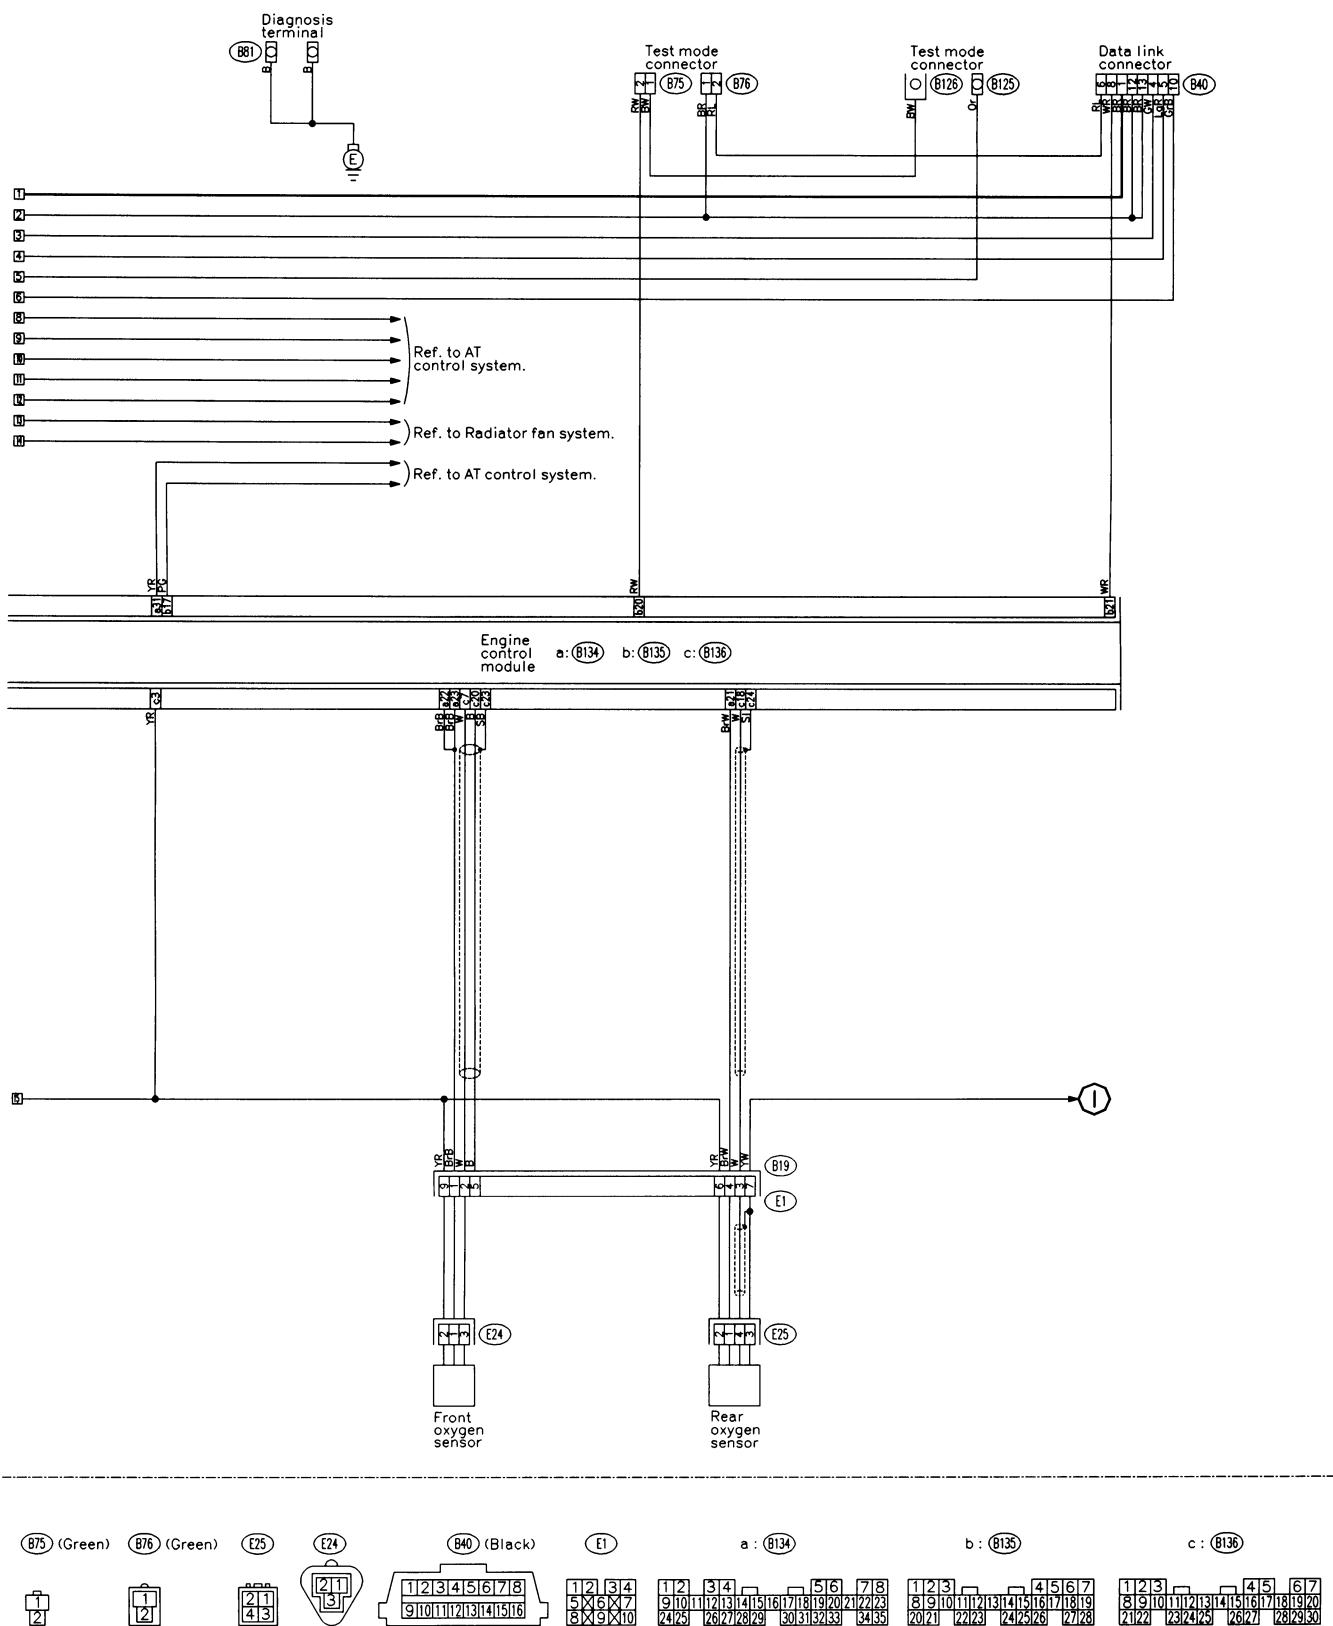

6-3 [D5L2]

5. Wiring Diagram


WIRING DIAGRAM

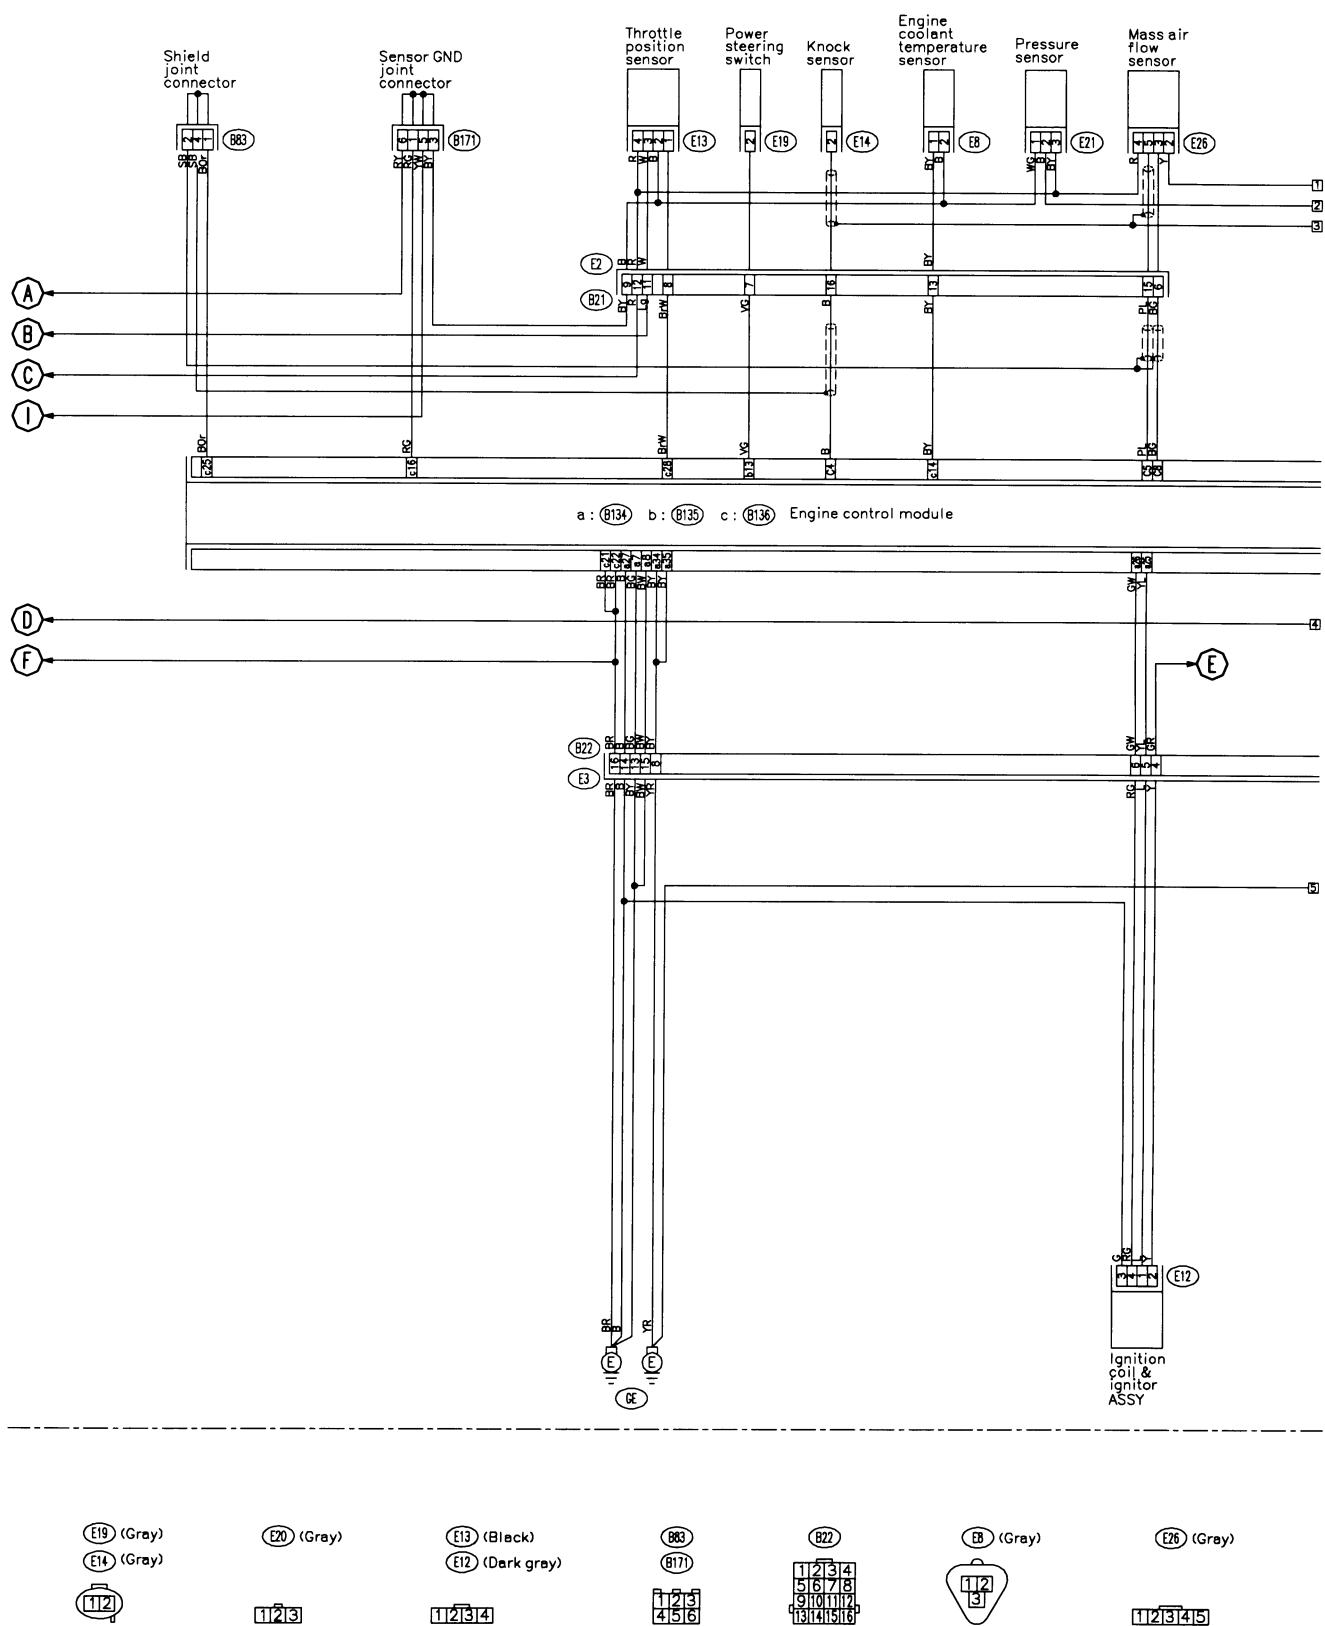

GU10-13C

WIRING DIAGRAM

[D5L2] 6-3
5. Wiring Diagram

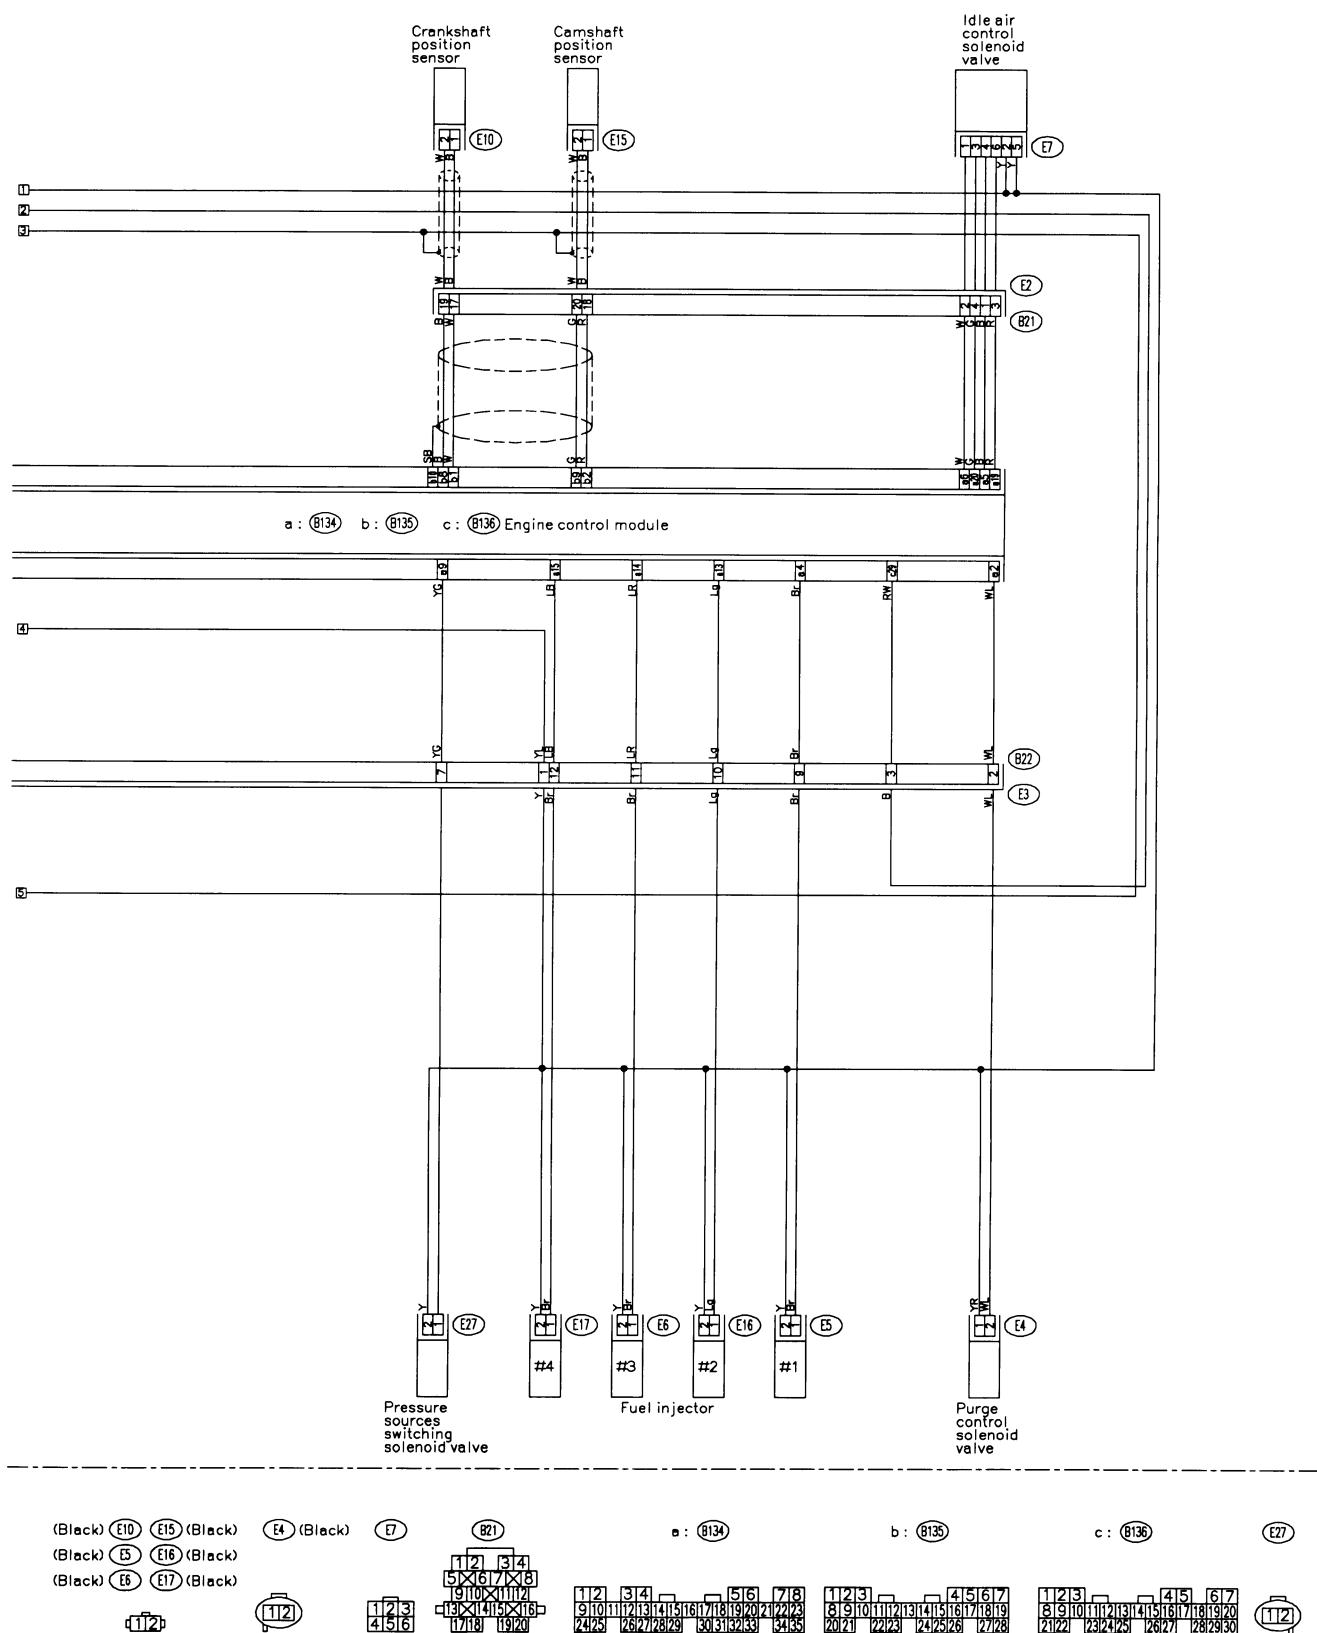


6-3 [D5M0]

5. Wiring Diagram

WIRING DIAGRAM


M: FUEL GAUGE SYSTEM

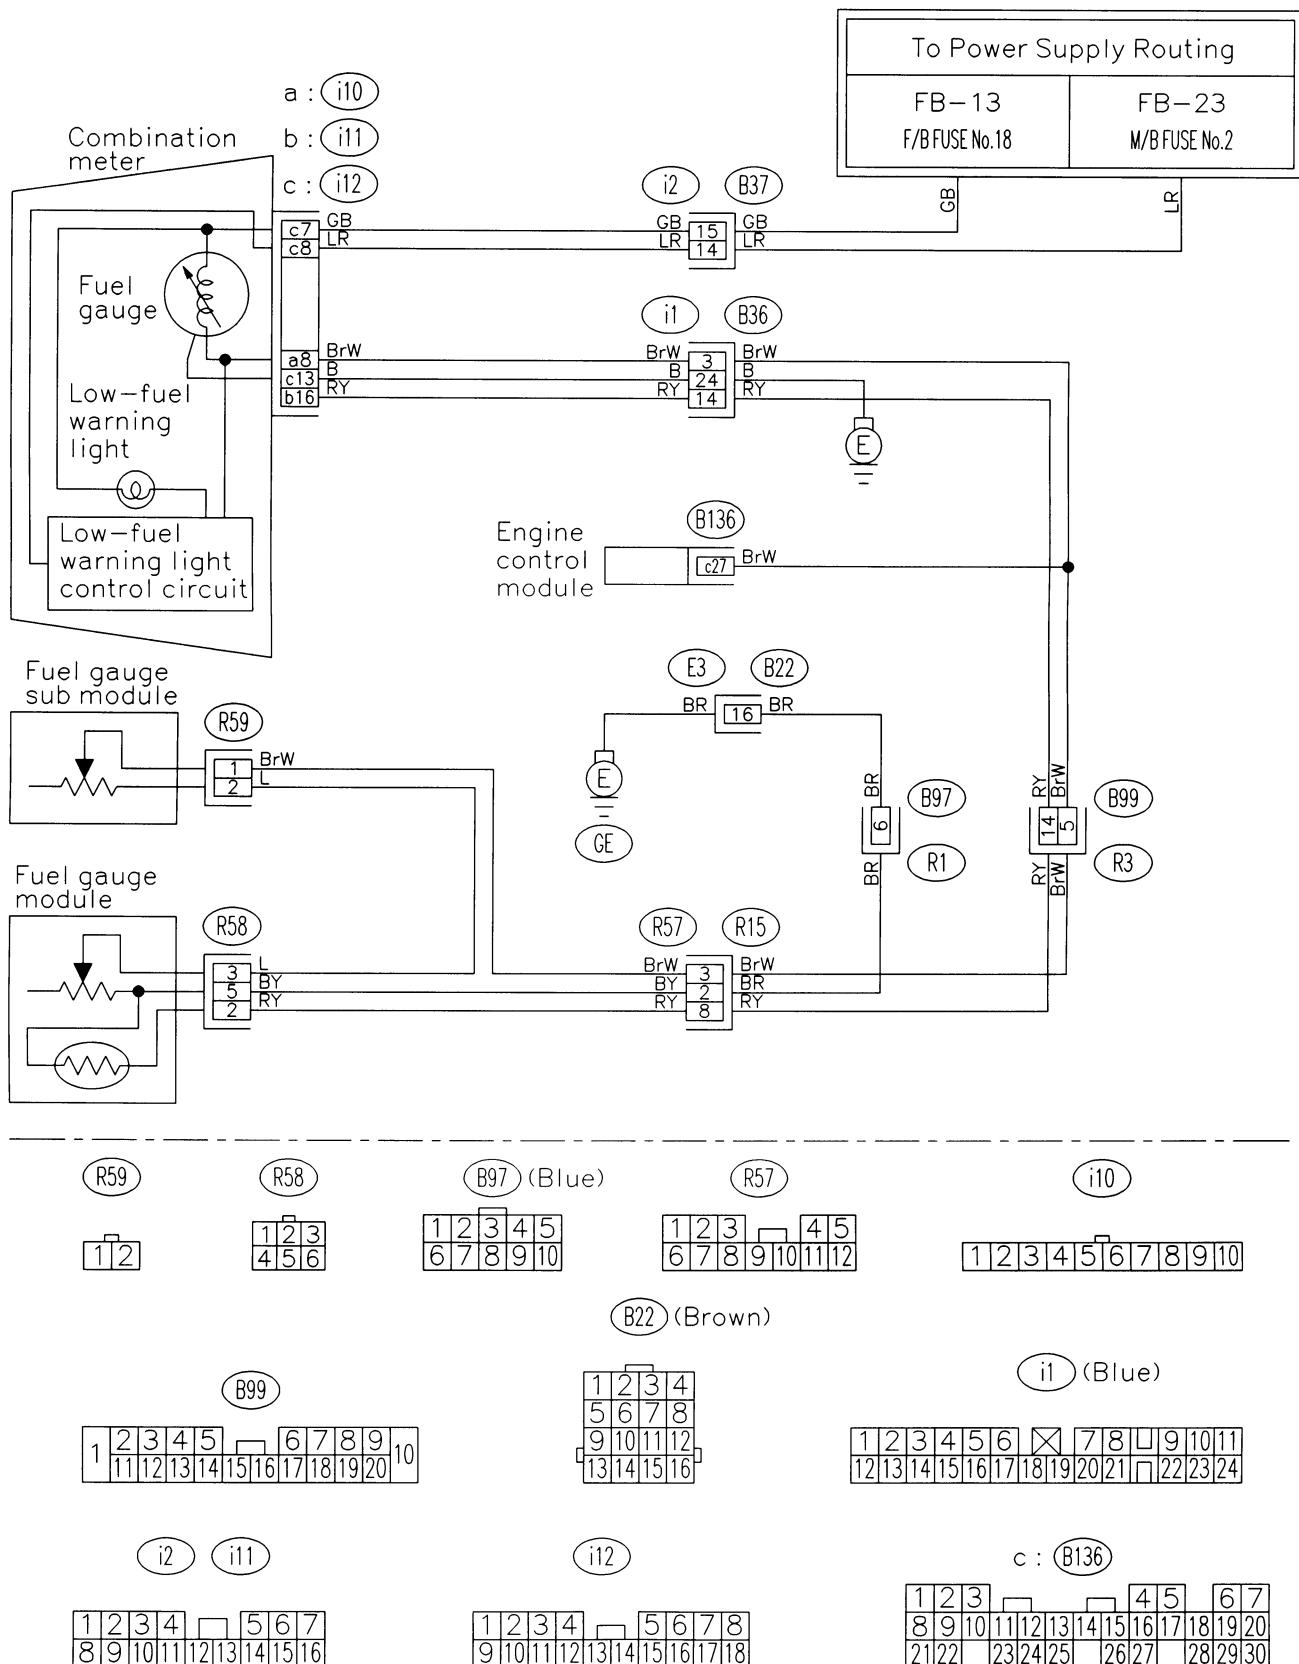

WIRING DIAGRAM

[D5N0] 6-3
5. Wiring Diagram


N: HORN AND FRONT ACCESSORY POWER SUPPLY SYSTEM

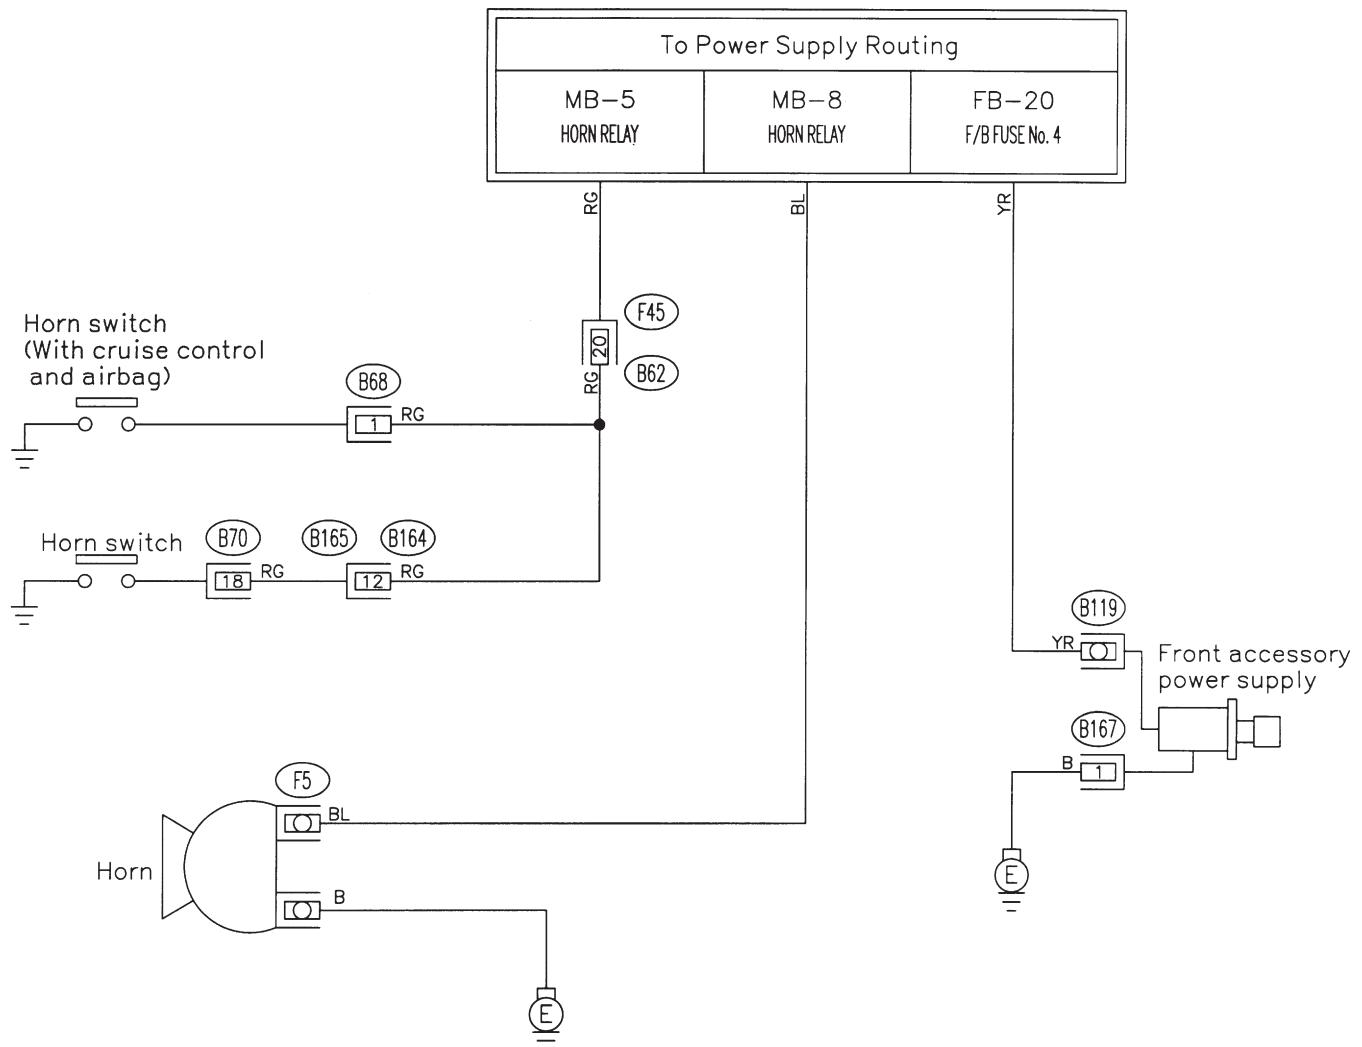

(B167)



(B68) (Black)

(B70)



(B164)

(B62)




GU74-04

6-3 [D500]

5. Wiring Diagram

WIRING DIAGRAM

O: LIGHTING SYSTEM (BACK-UP LIGHT)

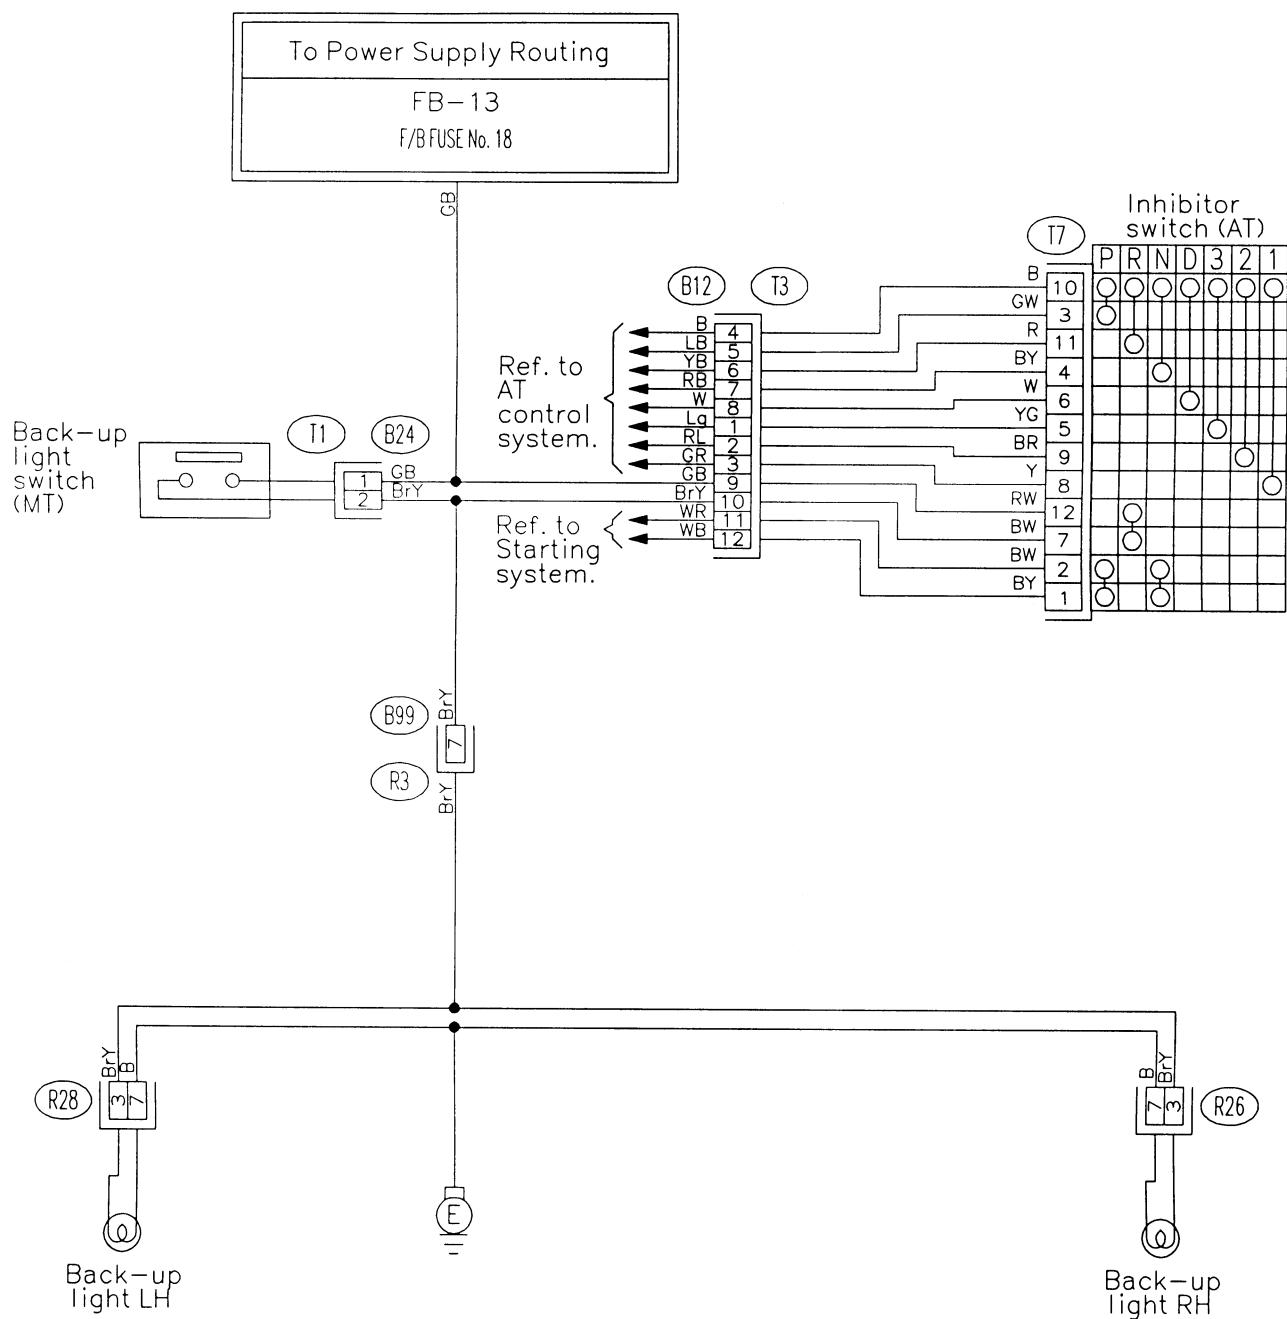



(B24) (Gray)

(B12)

(R26)

(B99)

[12]




GU29-04

WIRING DIAGRAM

[D5P0] 6-3
5. Wiring Diagram


P: LIGHTING SYSTEM (CLEARANCE LIGHT AND ILLUMINATION LIGHT)

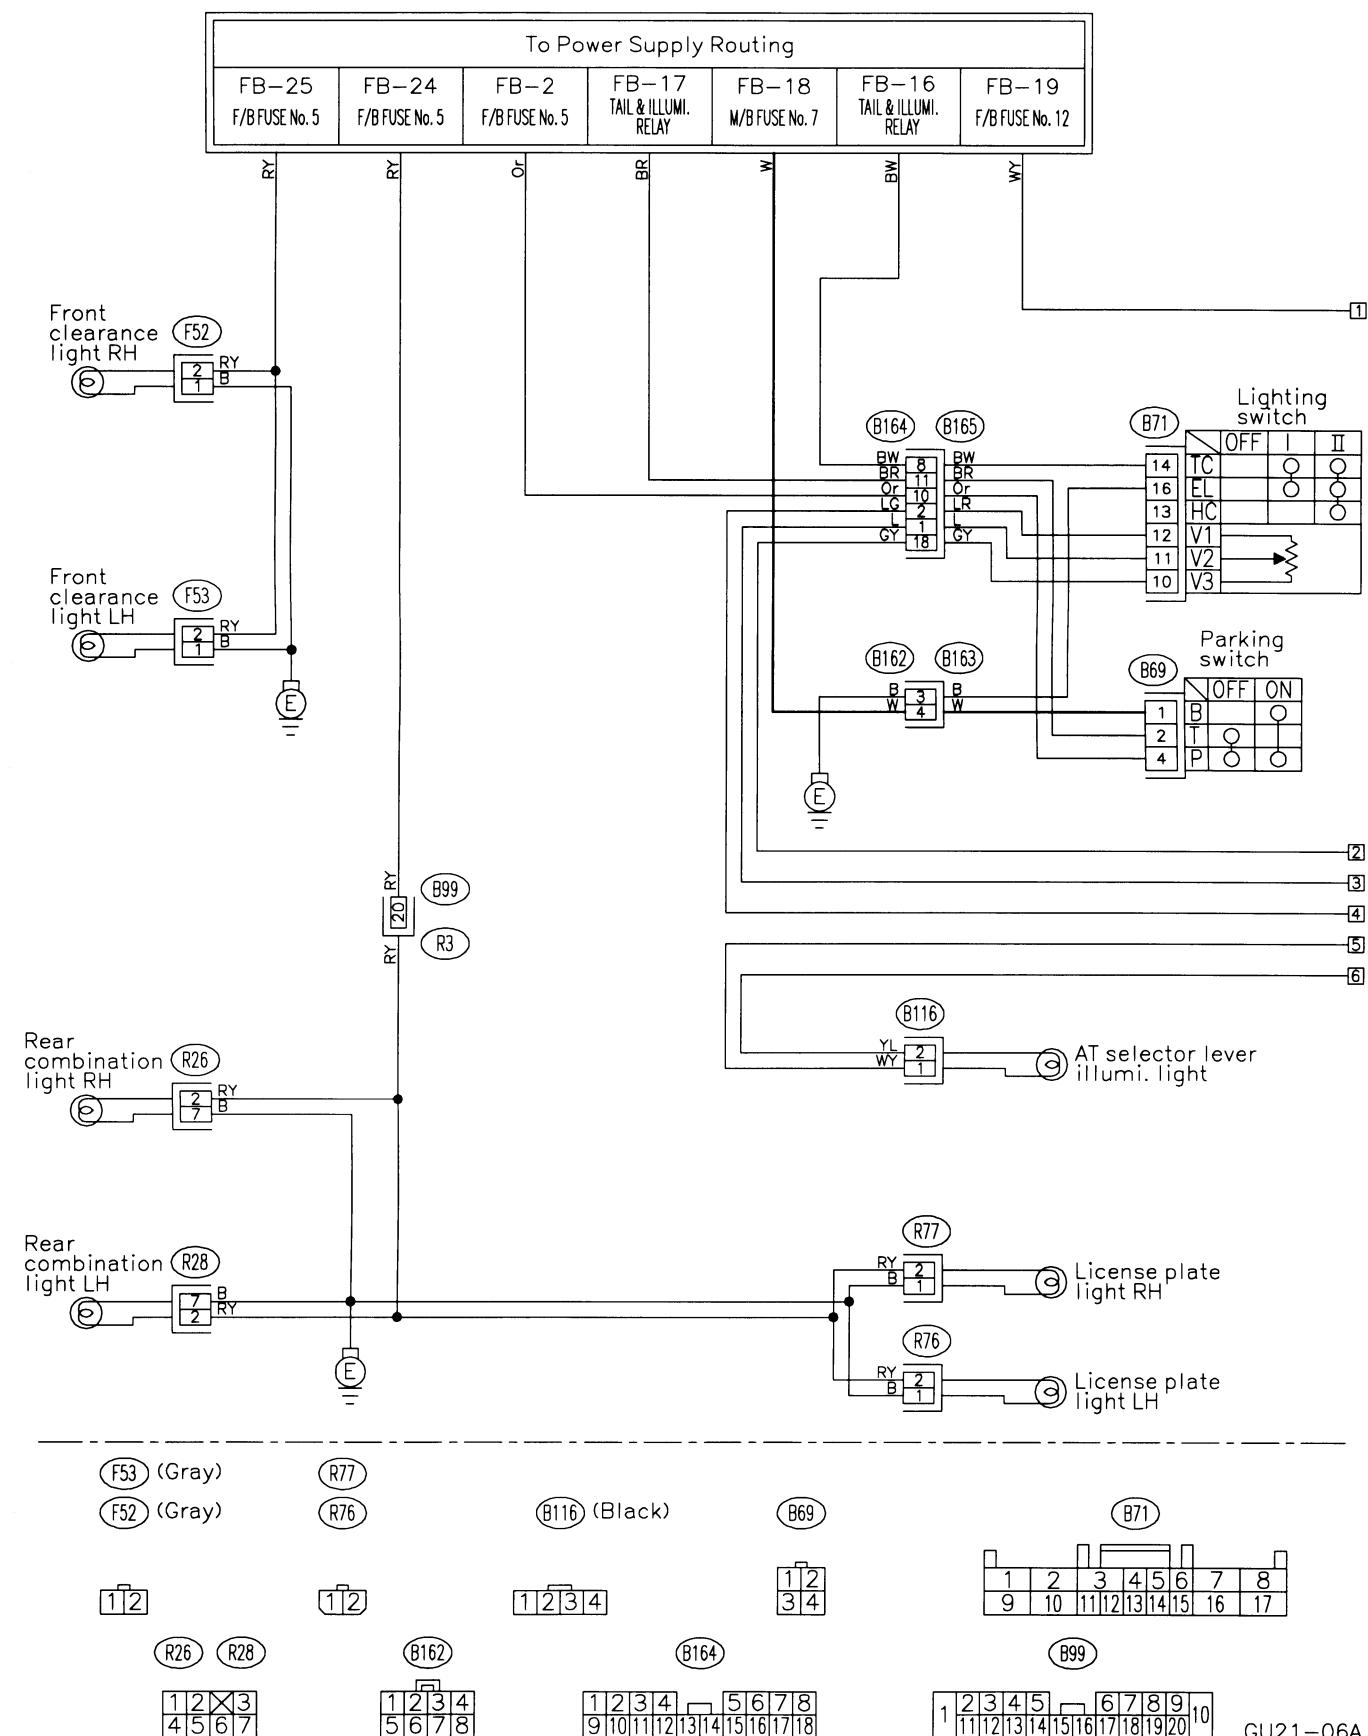

6-3 [D5P0]

5. Wiring Diagram

WIRING DIAGRAM

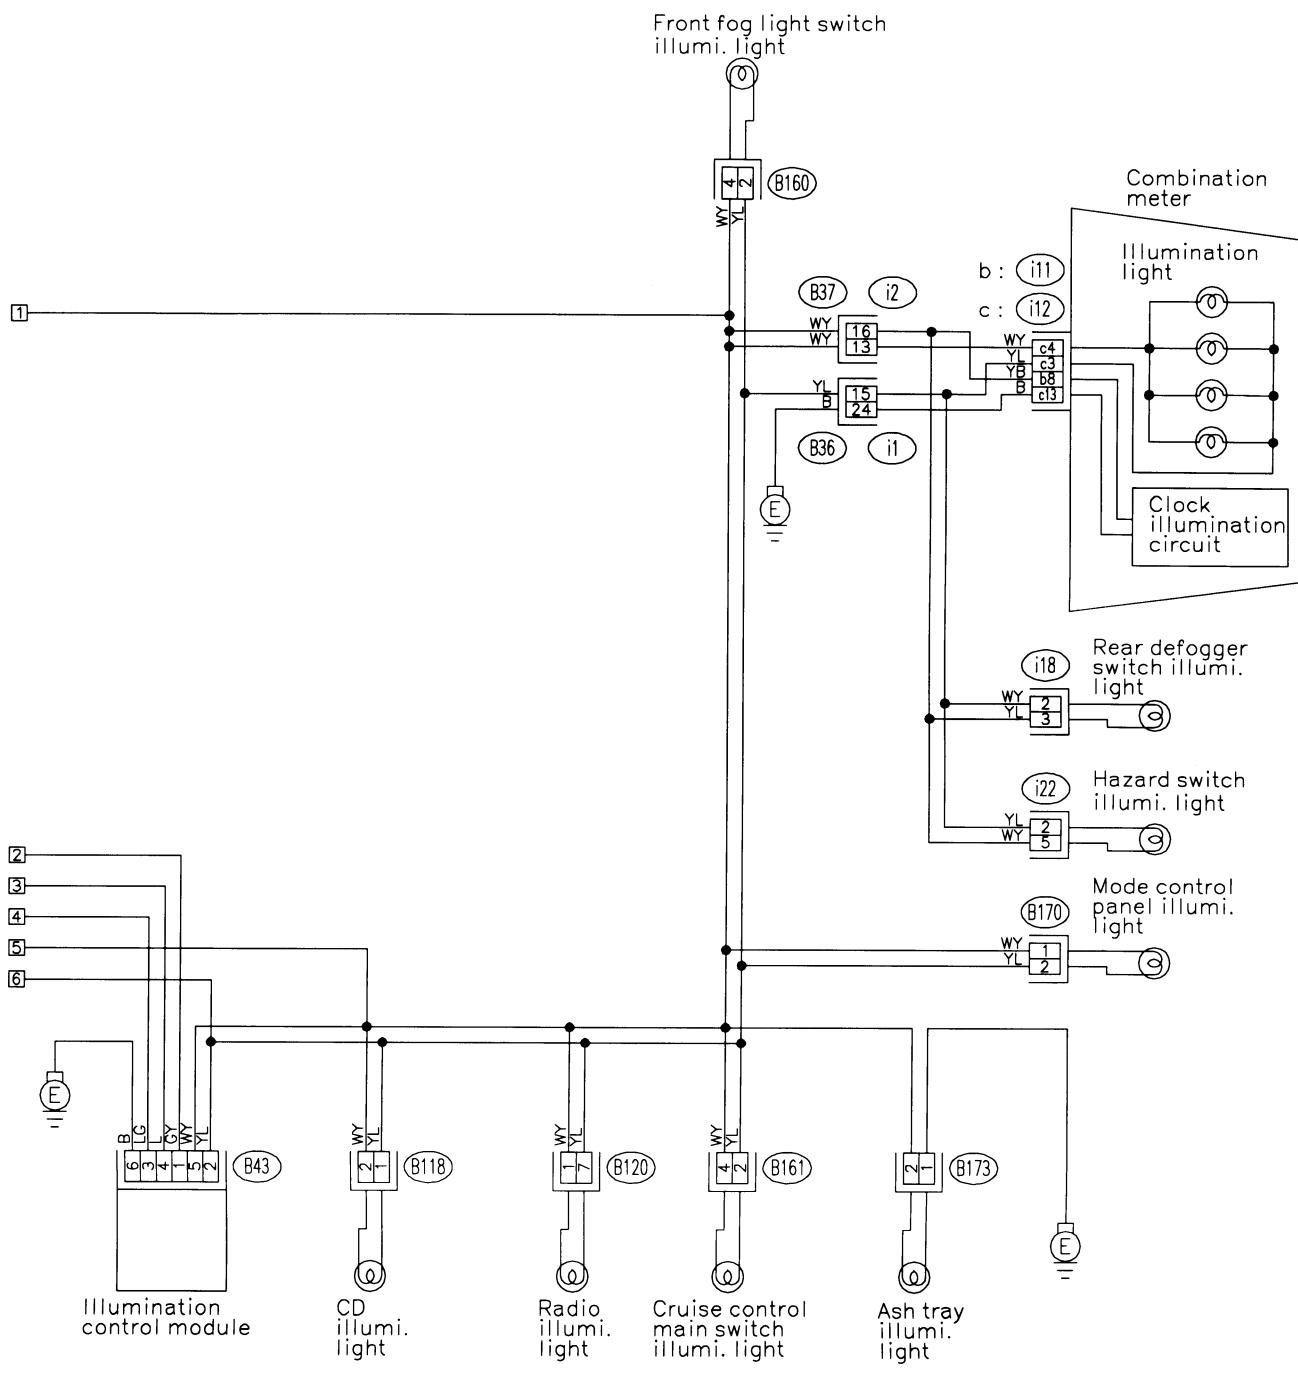

(B170)	(B118) (B173)	(Brown)	(B161) (B43) (Black)	(B160) (Gray)	(i22)	(i18)	(i2)
1 2	1 2		1 2 3 4 3 4 5 6	1 2 3 4 5 6 7 8	1 2 3 4 4 5 6 7 8	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	
1 2 3 4 5 6 7 8 9 10 11 12 13 14			1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18	i12


WIRING DIAGRAM

[D5Q1] 6-3

5. Wiring Diagram

Q: LIGHTING SYSTEM (FRONT FOG LIGHT)

1. WITHOUT DAYTIME RUNNING LIGHT MODEL

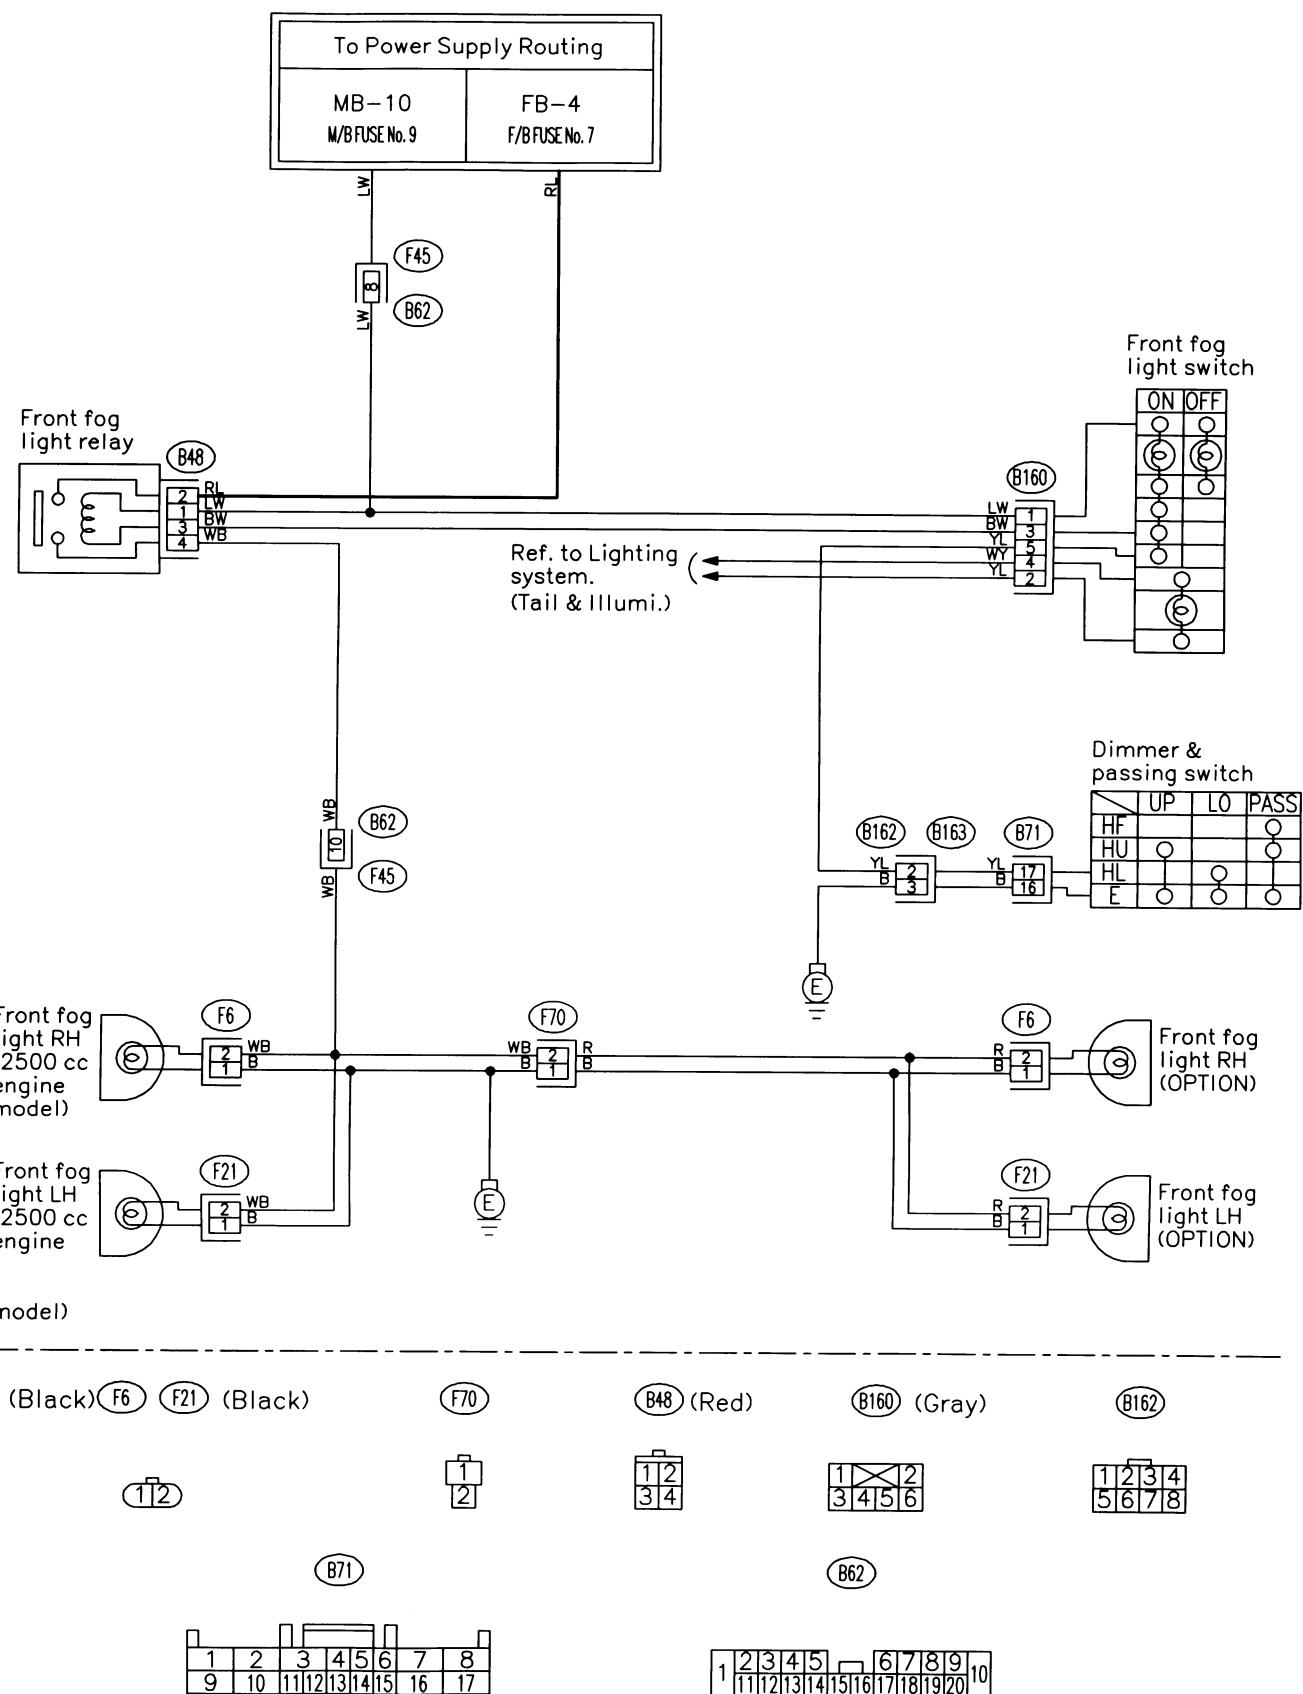


GU22-04

6-3 [D5Q2]

5. Wiring Diagram

WIRING DIAGRAM

2. WITH DAYTIME RUNNING LIGHT MODEL








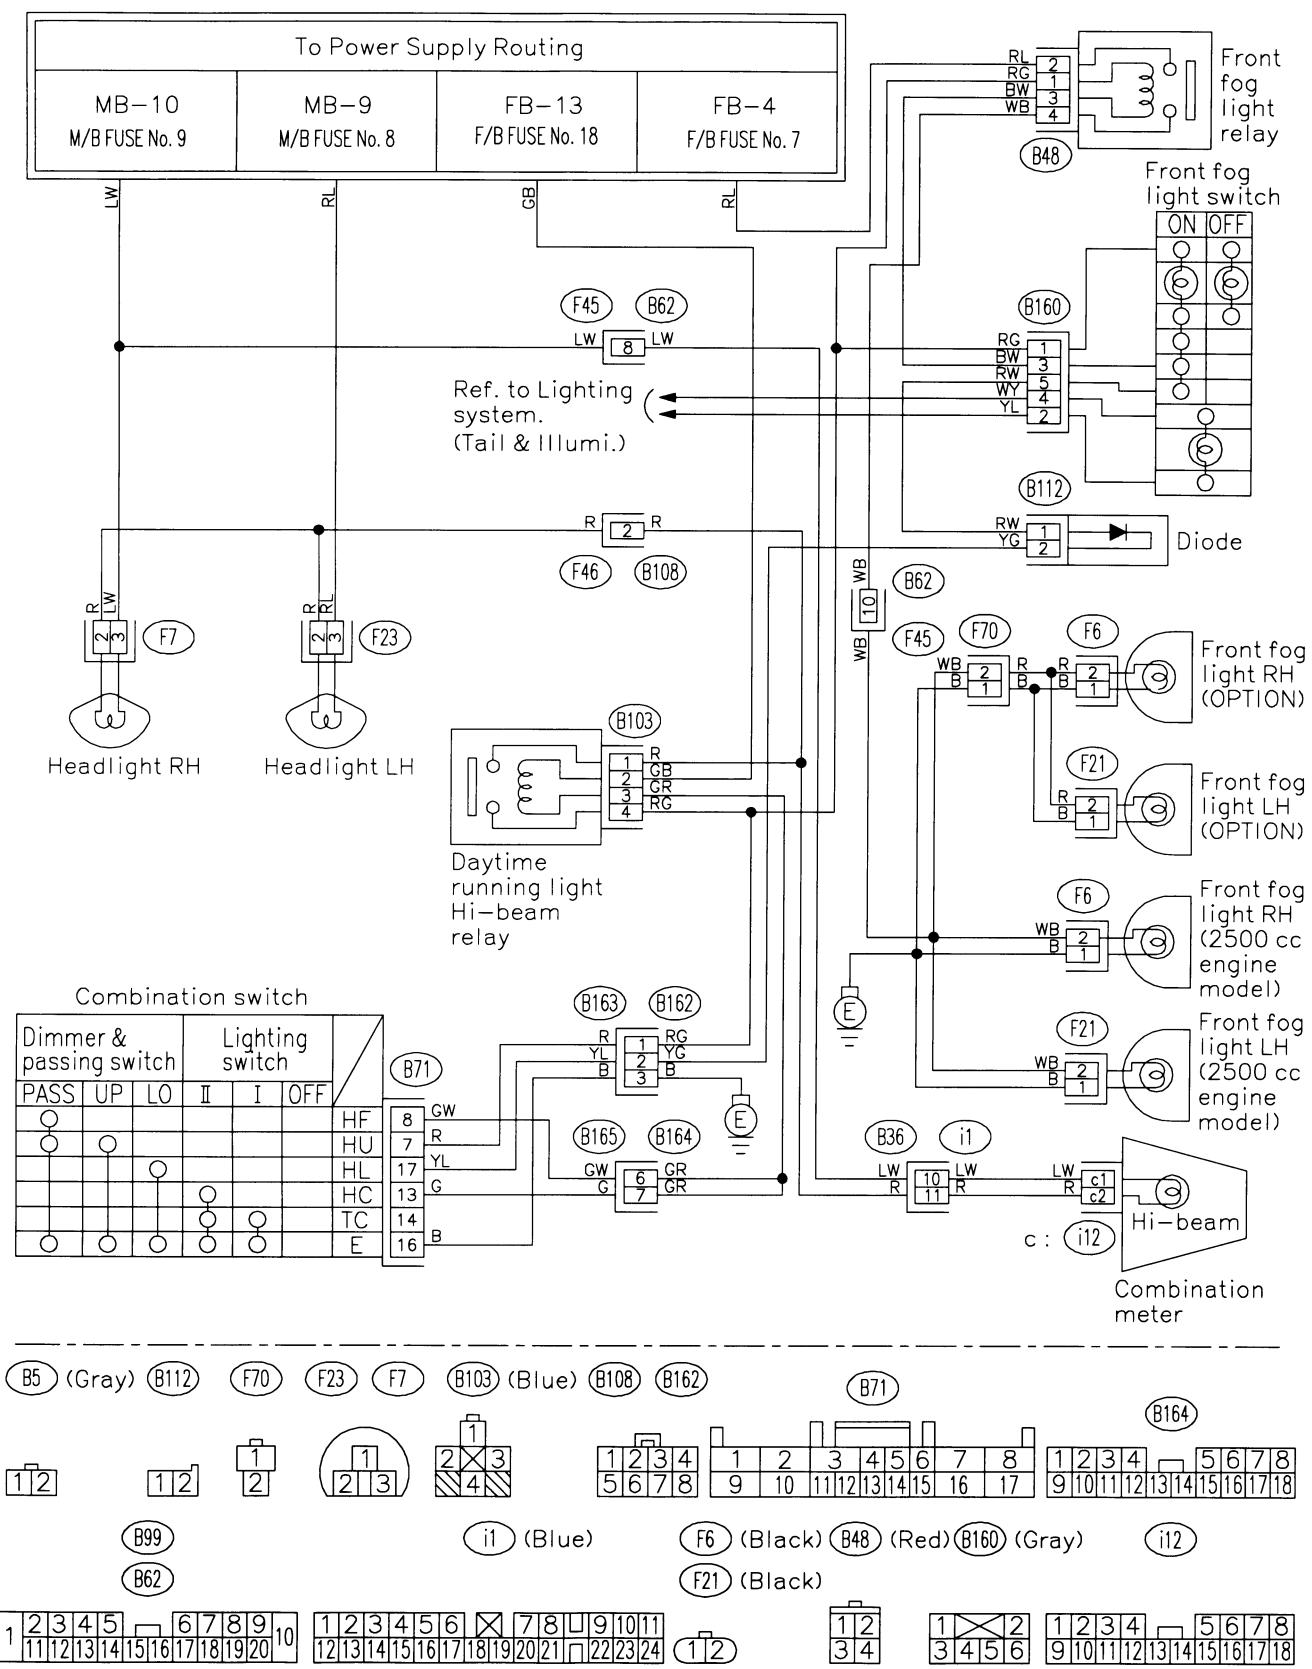


WIRING DIAGRAM

[D5R1] 6-3
5. Wiring Diagram

R: LIGHTING SYSTEM (HEADLIGHT)

1. WITHOUT DAYTIME RUNNING LIGHT MODEL

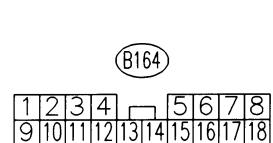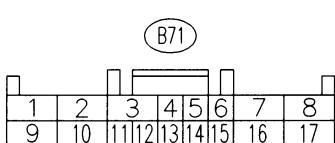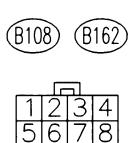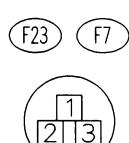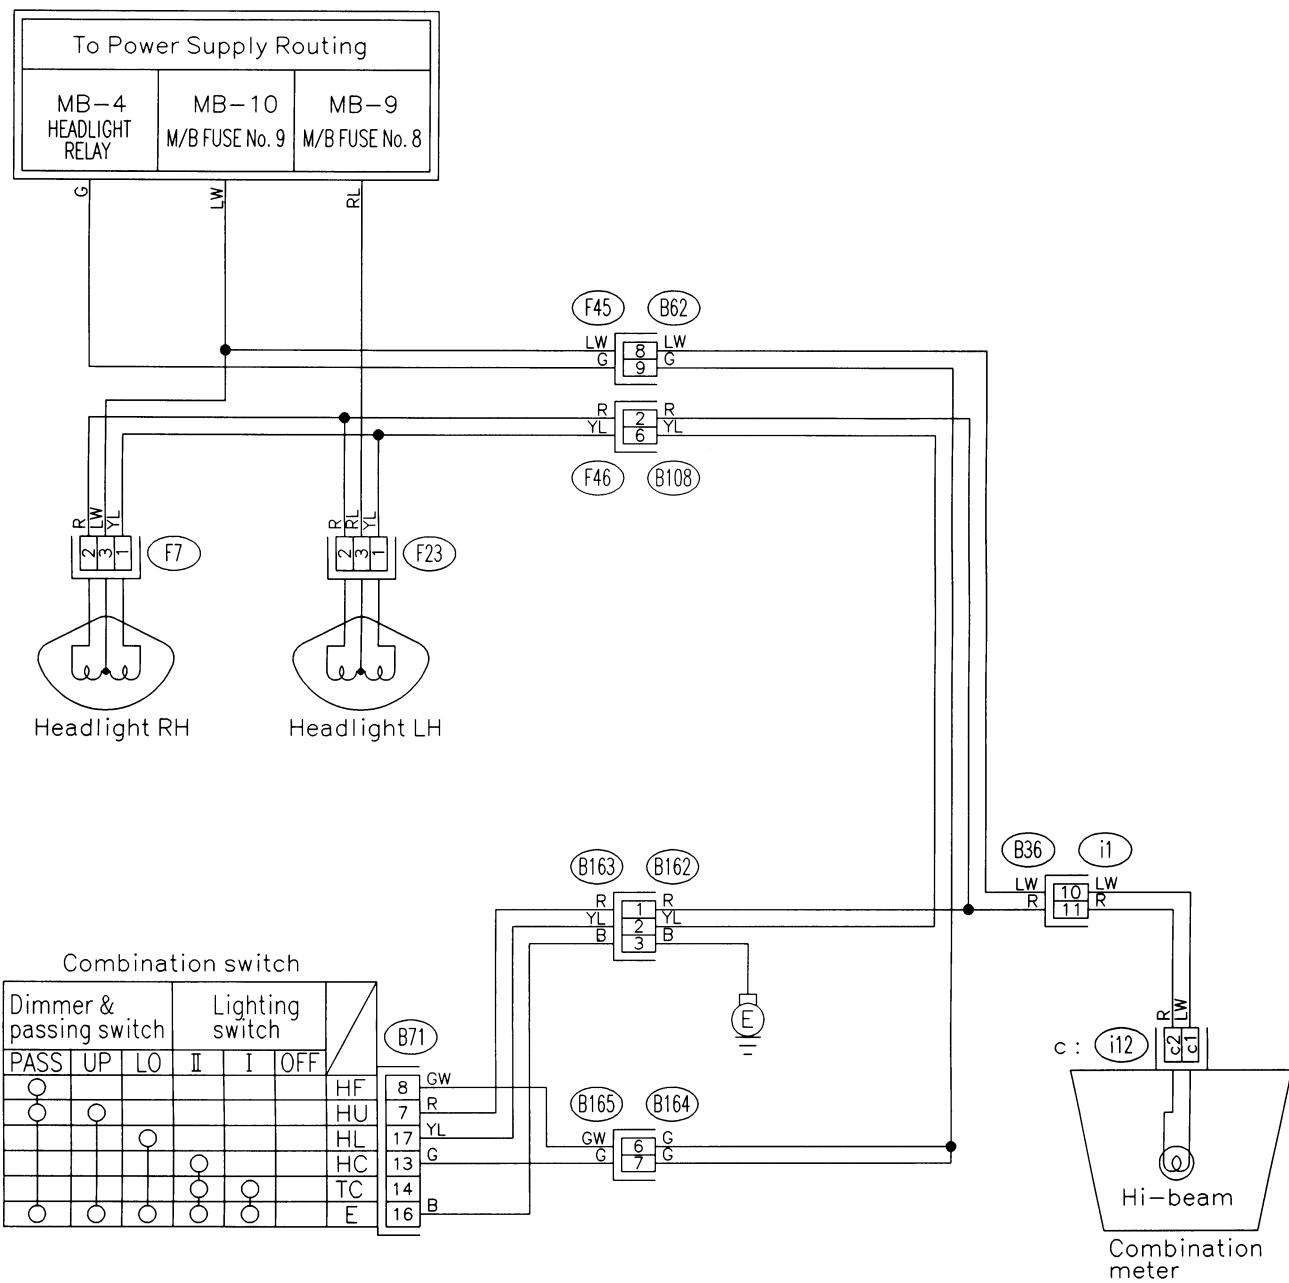

i1 (Blue)

i12


GU20-06

6-3 [D5R2]

5. Wiring Diagram

WIRING DIAGRAM

2. WITH DAYTIME RUNNING LIGHT MODEL

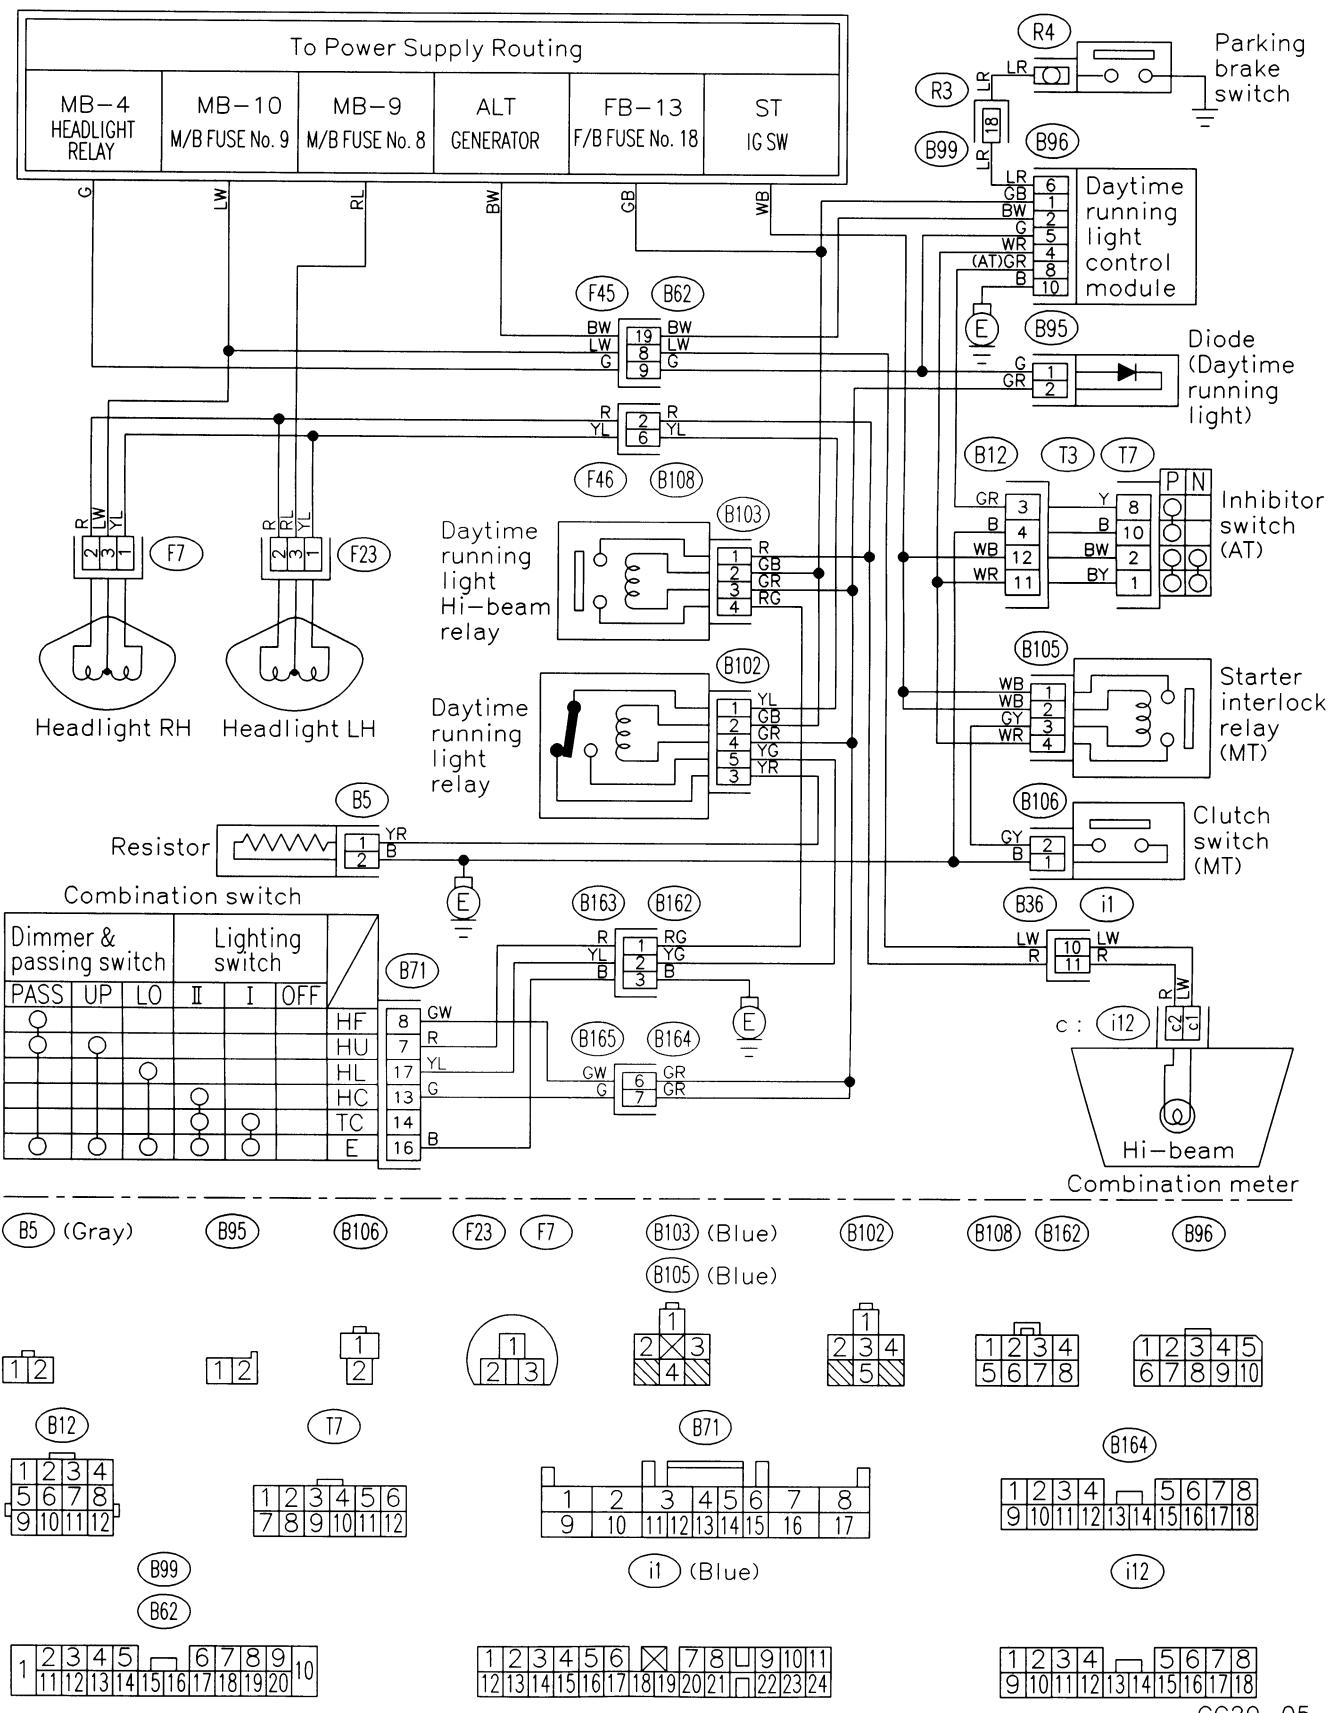


GC20-05

WIRING DIAGRAM

[D5S0] 6-3
5. Wiring Diagram

S: LIGHTING SYSTEM (IN COMPARTMENT)

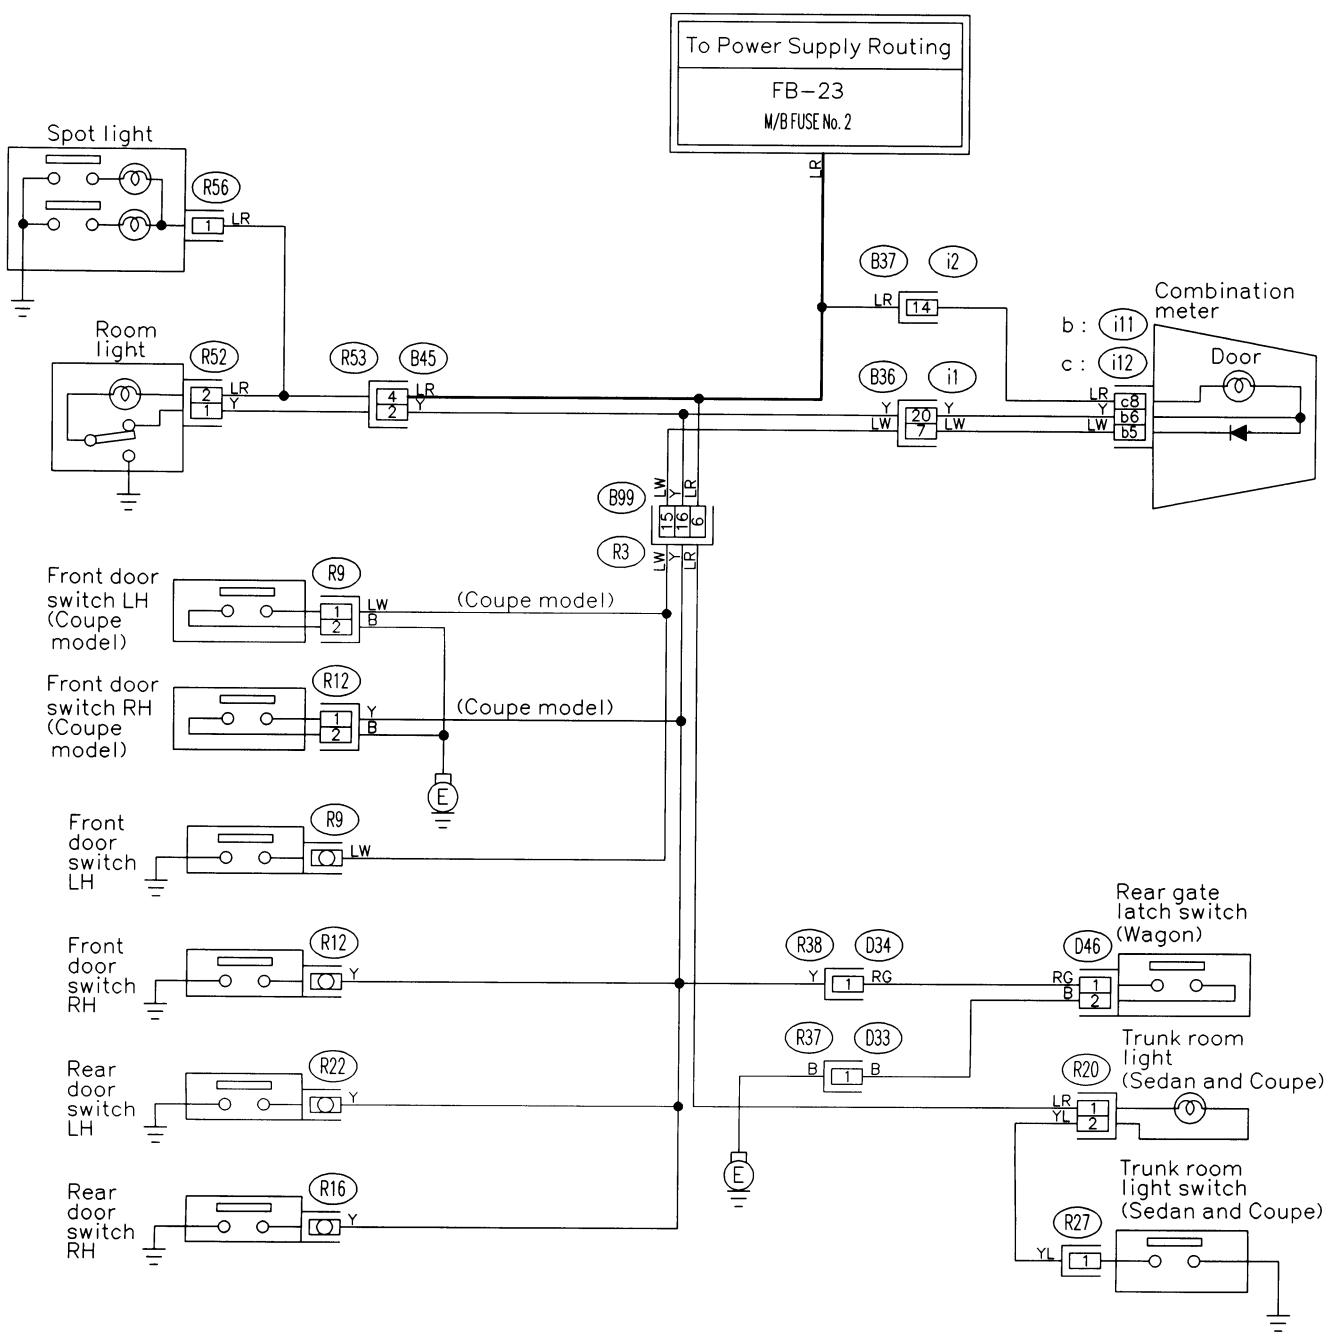

(R20) (Black) (D46) (Black)
(D33) (R52) (R9) (R12) (R27) (D34)

(R56) (B45) (i2) (B99)

--	--	--	--	--	--	--	--	--	--	--

i1 (Blue)

i11

i12

1	2	3	4	5	6	X	7	8	9	10	11	
12	13	14	15	16	17	18	19	20	21	22	23	24

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16


1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

6-3 [D5T0]

5. Wiring Diagram

WIRING DIAGRAM

T: LIGHTING SYSTEM (STOP LIGHT)

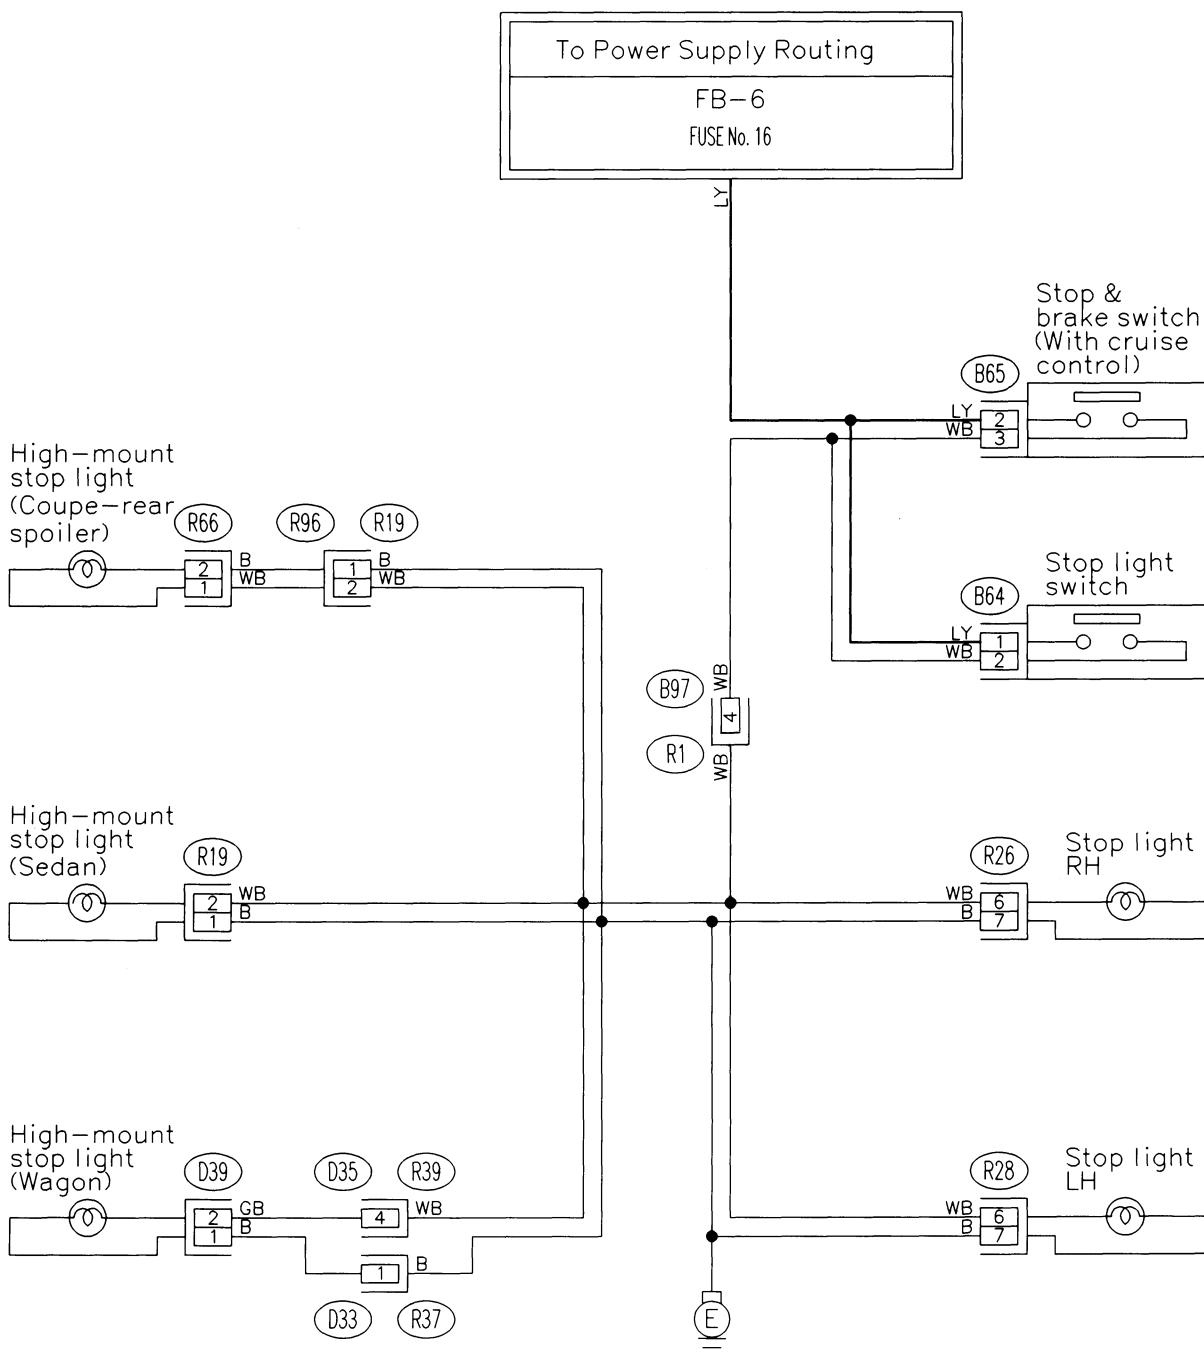

(R66) (Black)

(D33)

(D39)


(B64) (Black)

(B65) (Black)

(D35)

(B26) (Blue)


(R28)



WIRING DIAGRAM

[D5U0] 6-3
5. Wiring Diagram


U: LIGHTING SYSTEM (TURN SIGNAL LIGHT AND HAZARD LIGHT)

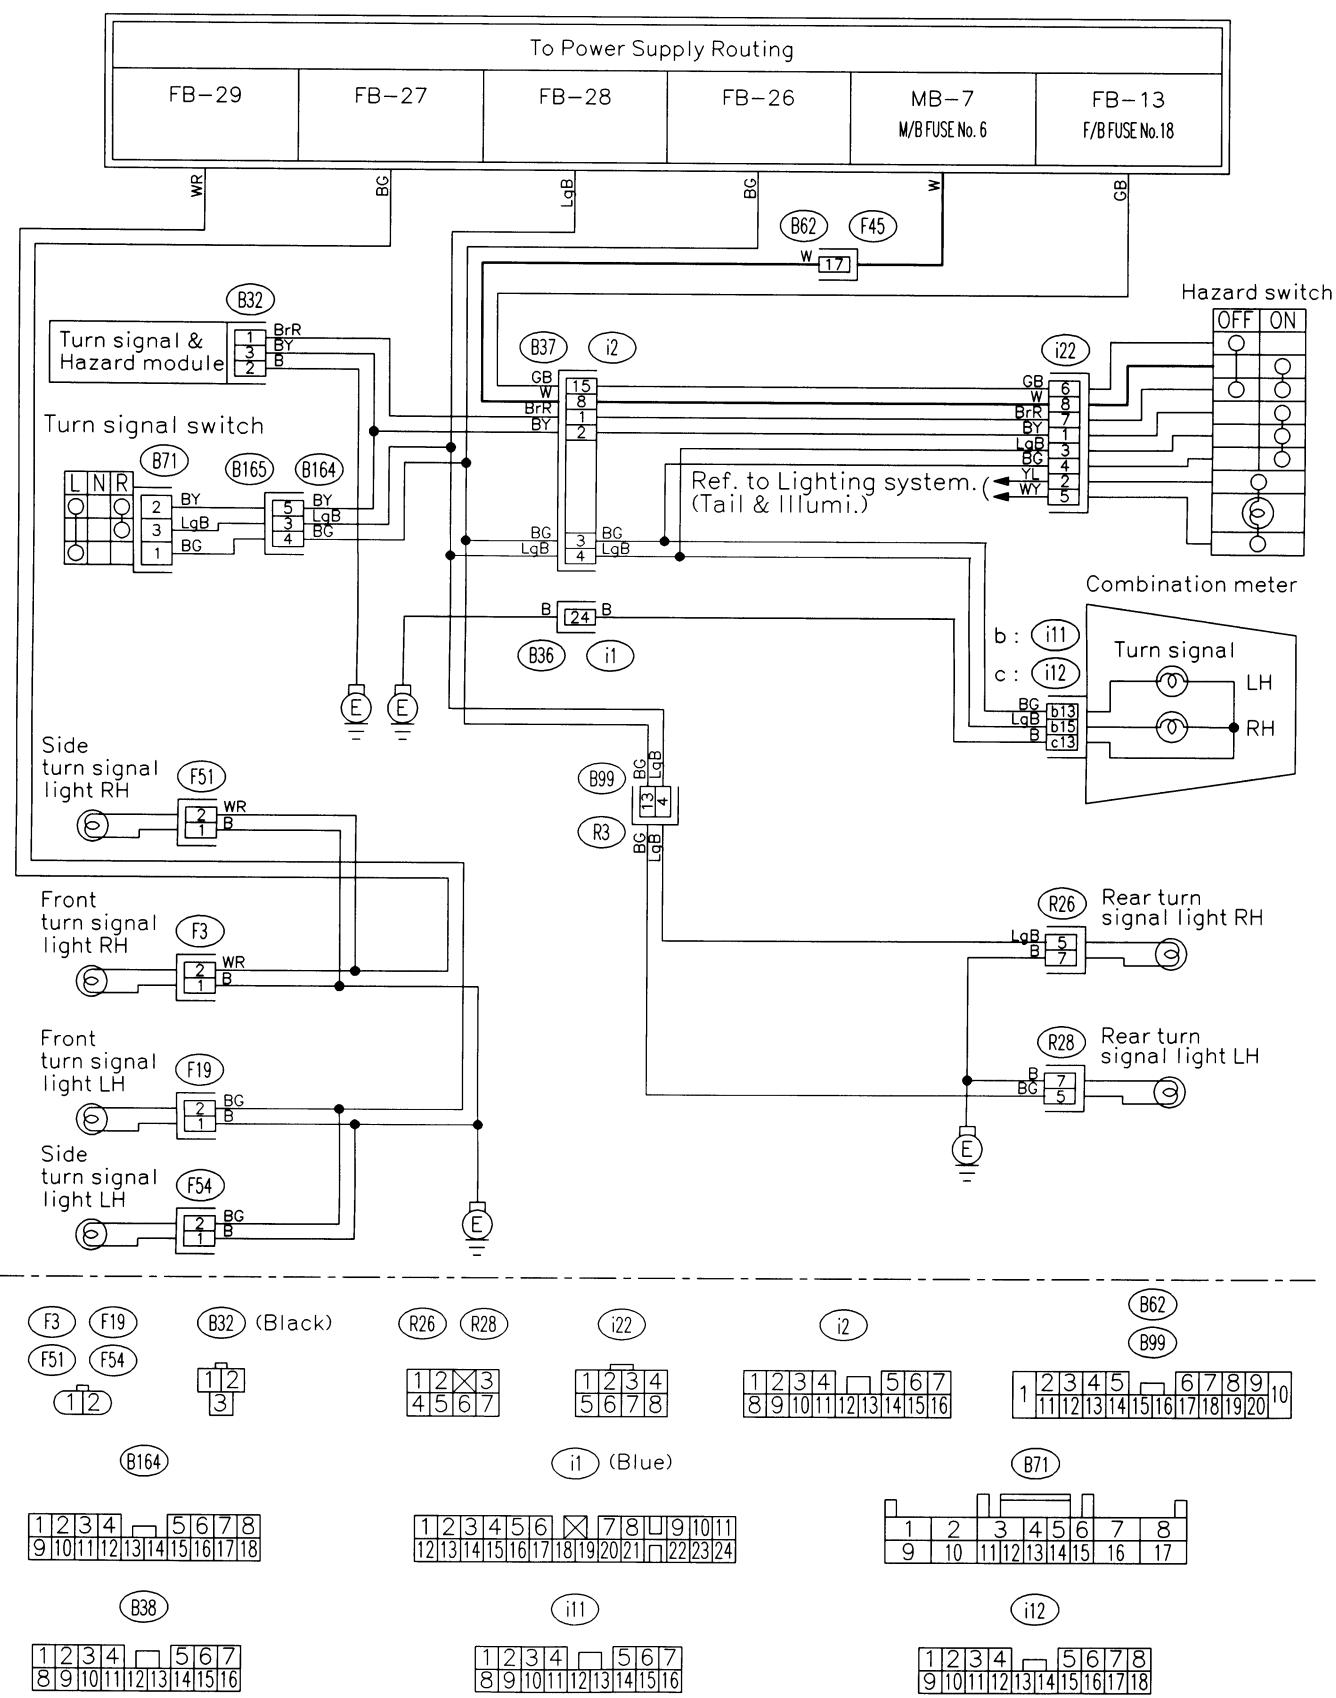

GU26-04

WIRING DIAGRAM

V: OIL PRESSURE AND TEMPERATURE GAUGE SYSTEM

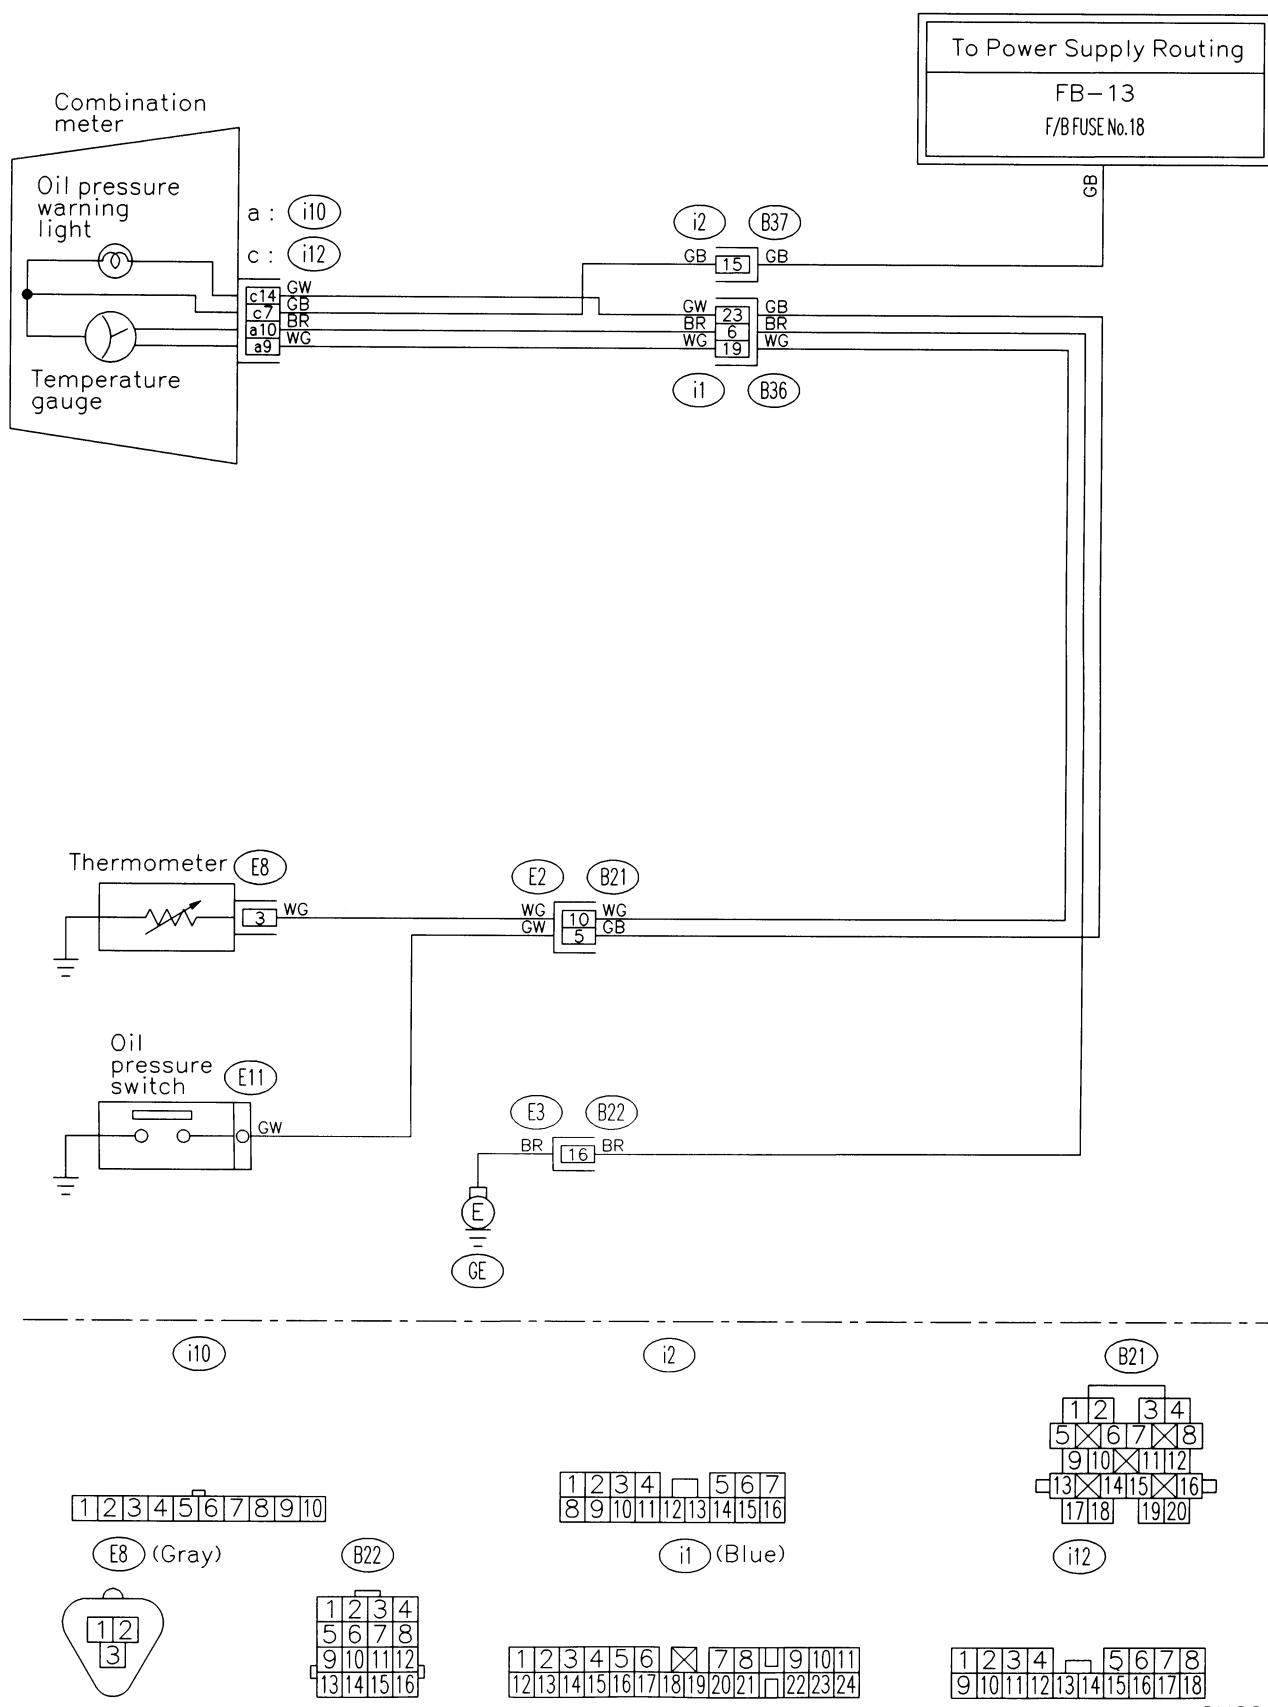


WIRING DIAGRAM

[D5W0] 6-3

5. Wiring Diagram

W: PARKING BRAKE AND BRAKE FLUID LEVEL WARNING SYSTEM

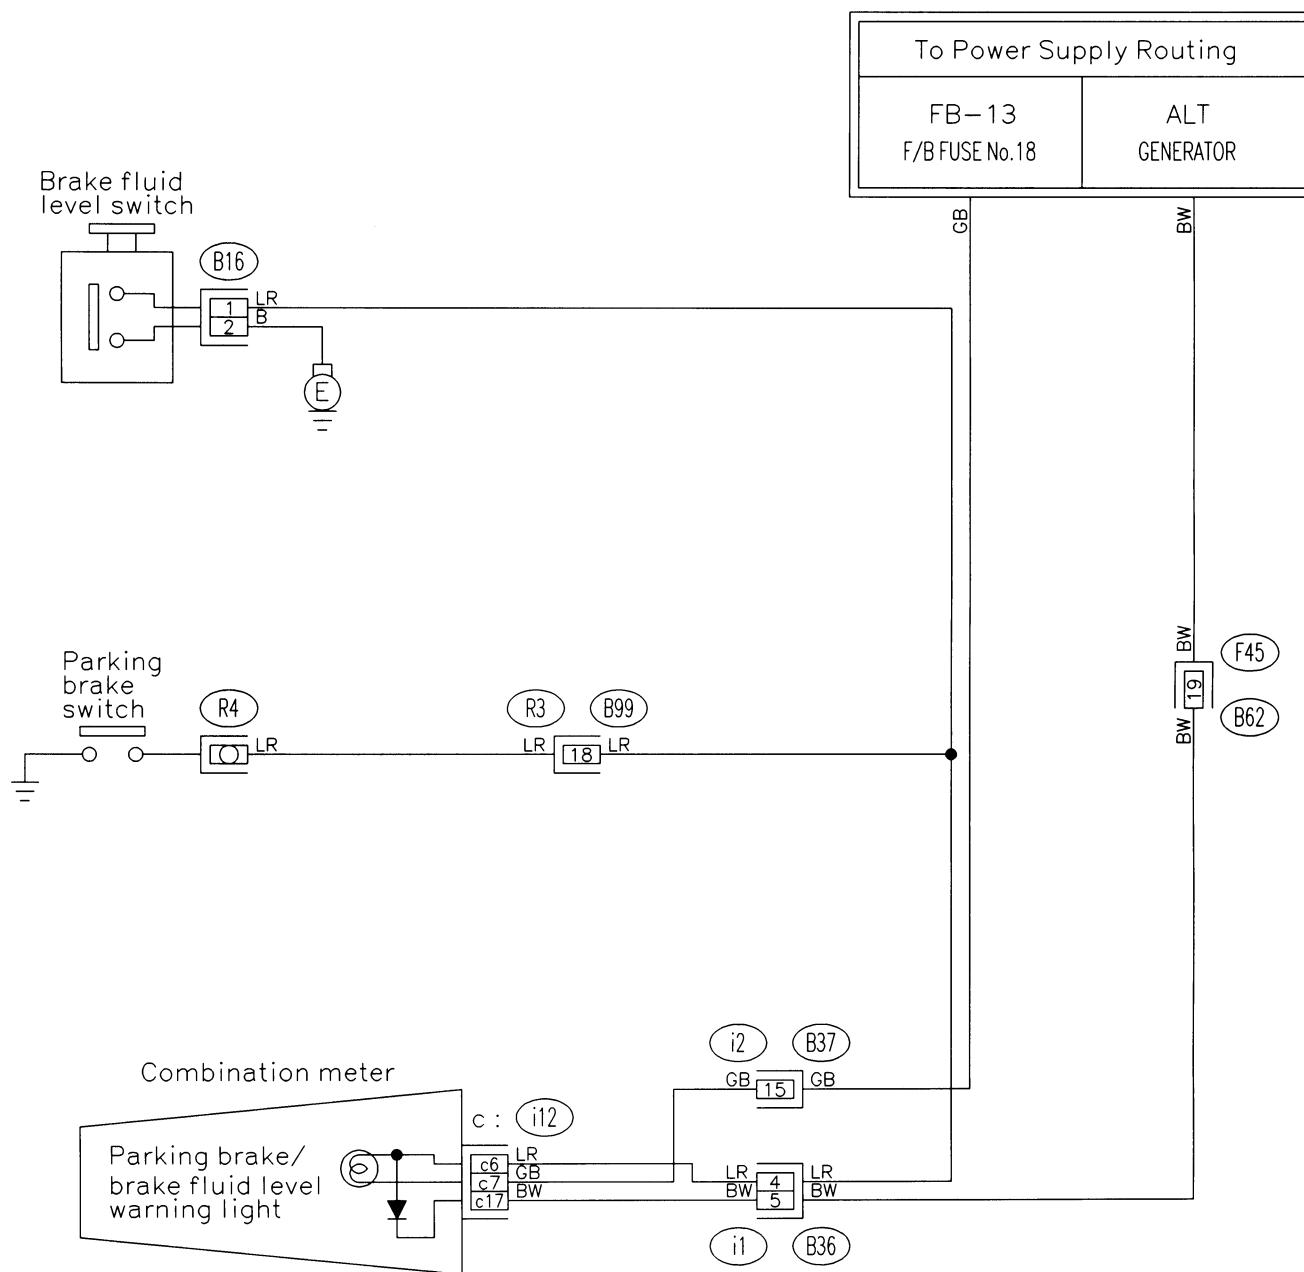

(B16) (Gray)

1
2

i2

1	2	3	4	□	5	6	7	
8	9	10	11	12	13	14	15	16

B62
B99

1	2	3	4	5	□	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	

i1 (Blue)

1	2	3	4	5	6	☒	7	8	□	9	10	11	
12	13	14	15	16	17	18	19	20	21	□	22	23	24

i12

1	2	3	4	□	5	6	7	8	
9	10	11	12	13	14	15	16	17	18

GU60-05


6-3 [D5X1]

5. Wiring Diagram

WIRING DIAGRAM

X: POWER WINDOW SYSTEM


1. COUPE MODEL

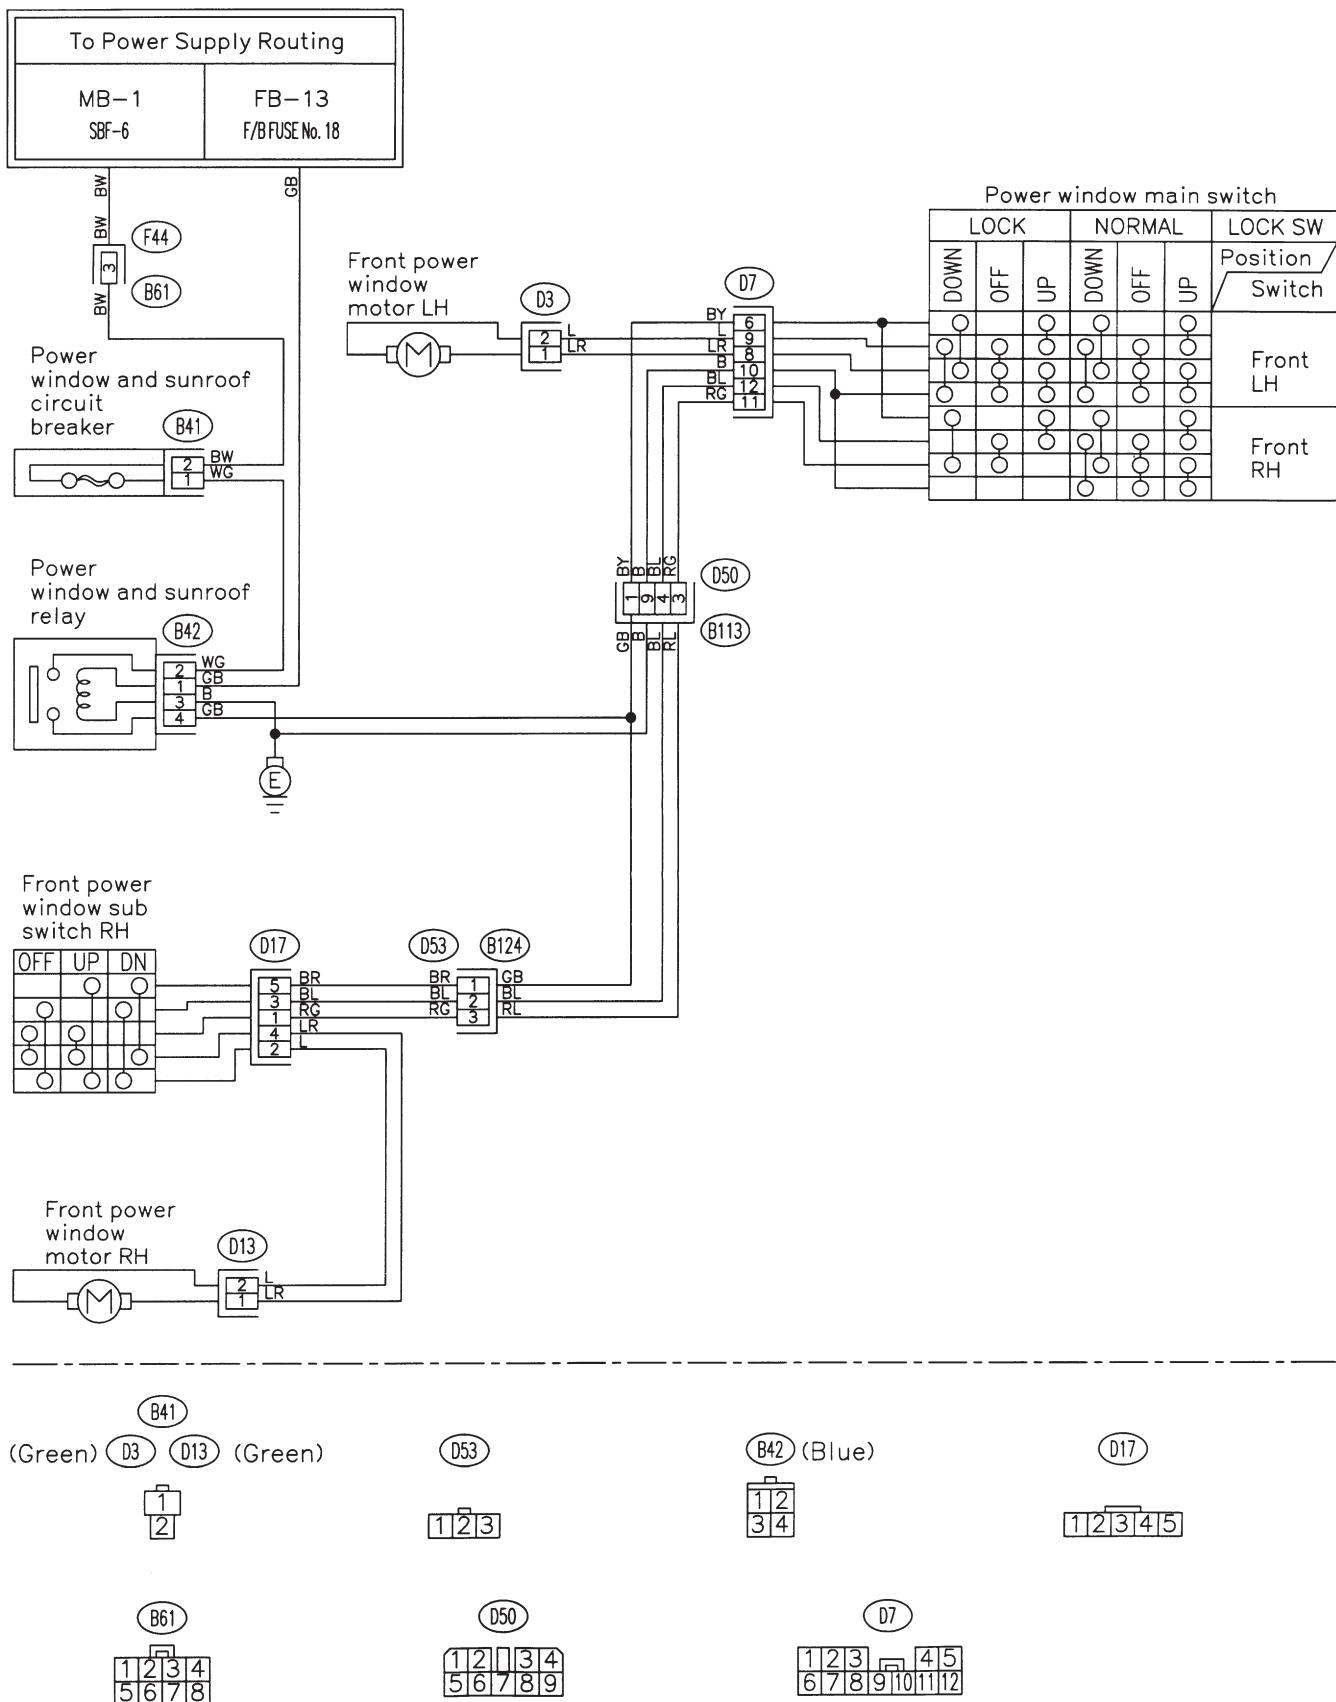

WIRING DIAGRAM

[D5X2] 6-3
5. Wiring Diagram

2. SEDAN AND WAGON MODEL

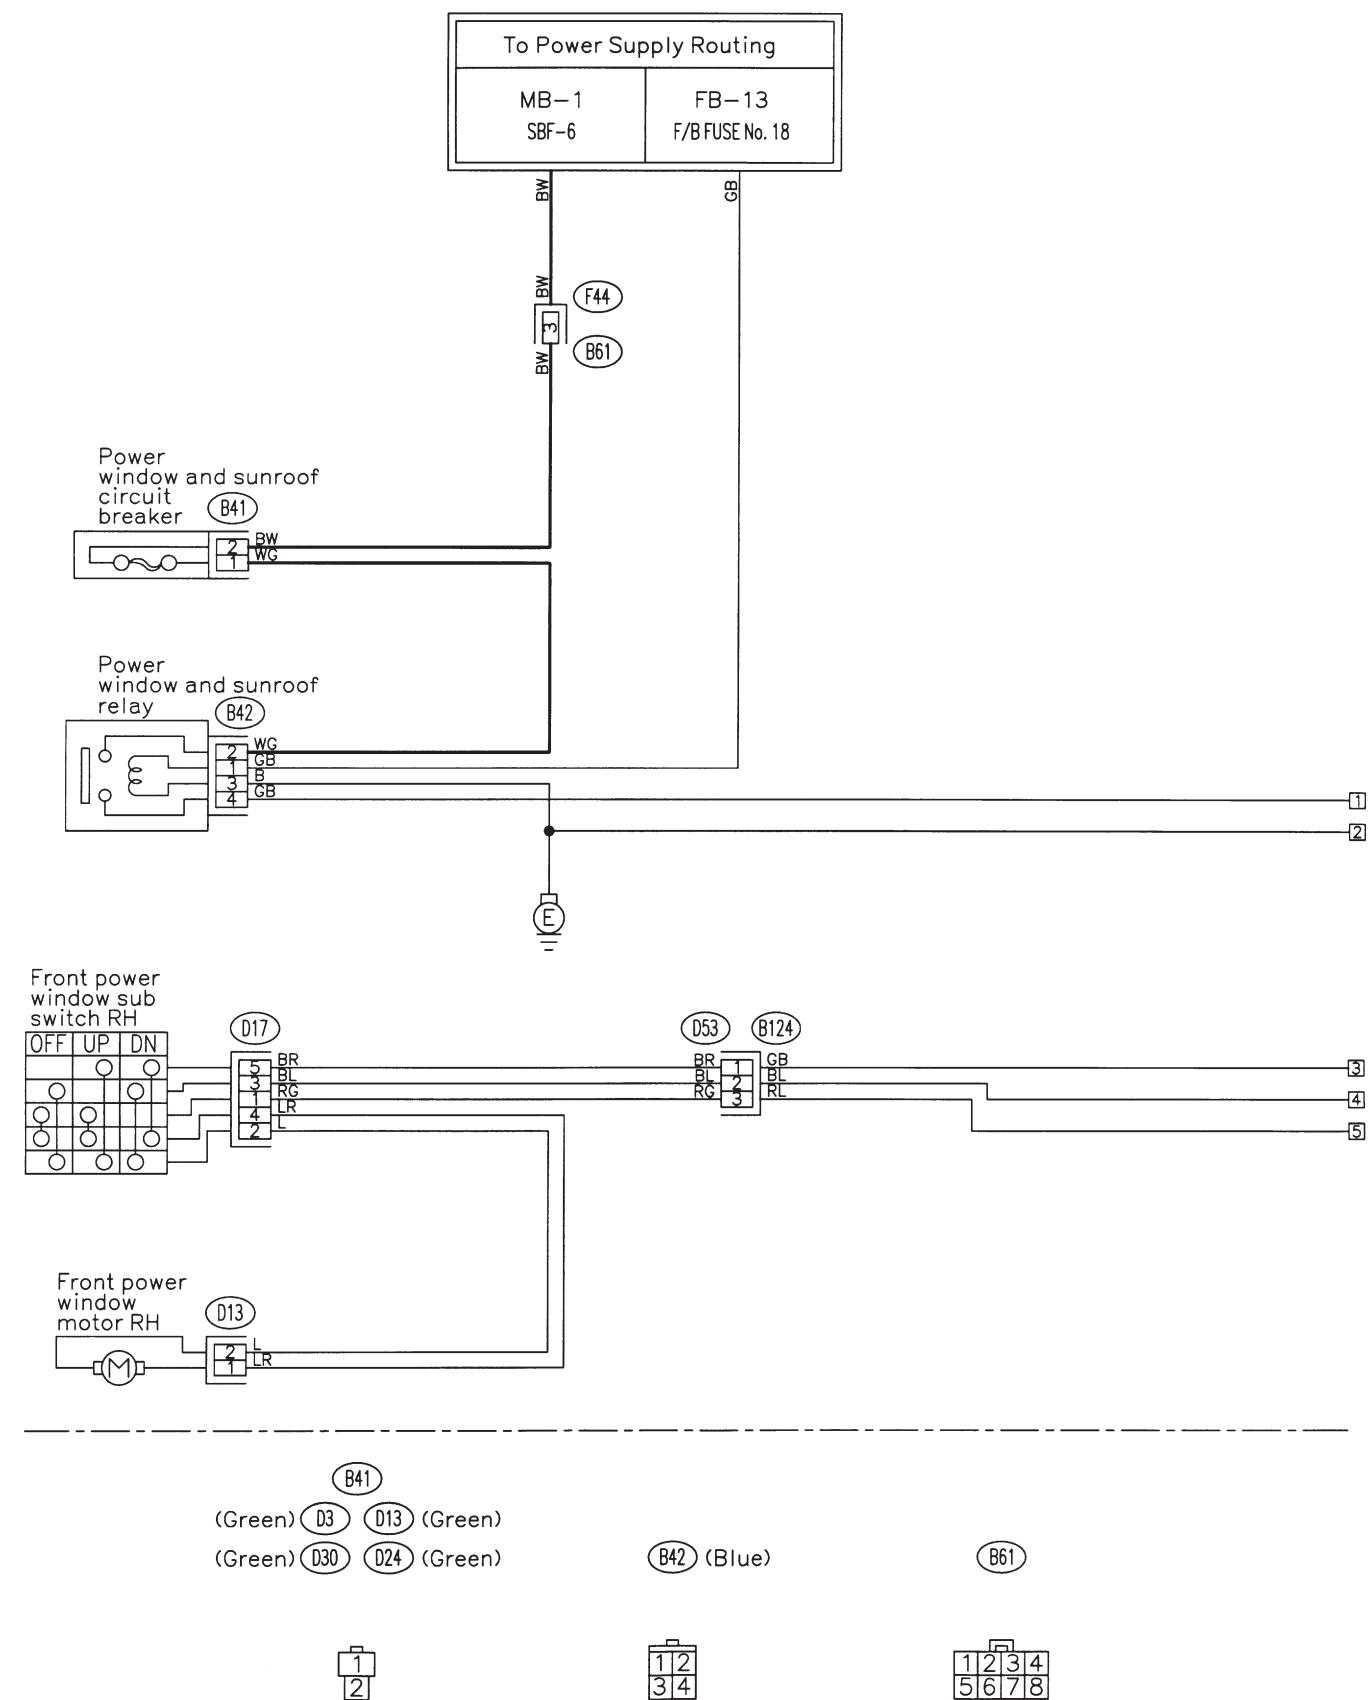


GU70-03A

6-3 [D5X2]

5. Wiring Diagram


WIRING DIAGRAM

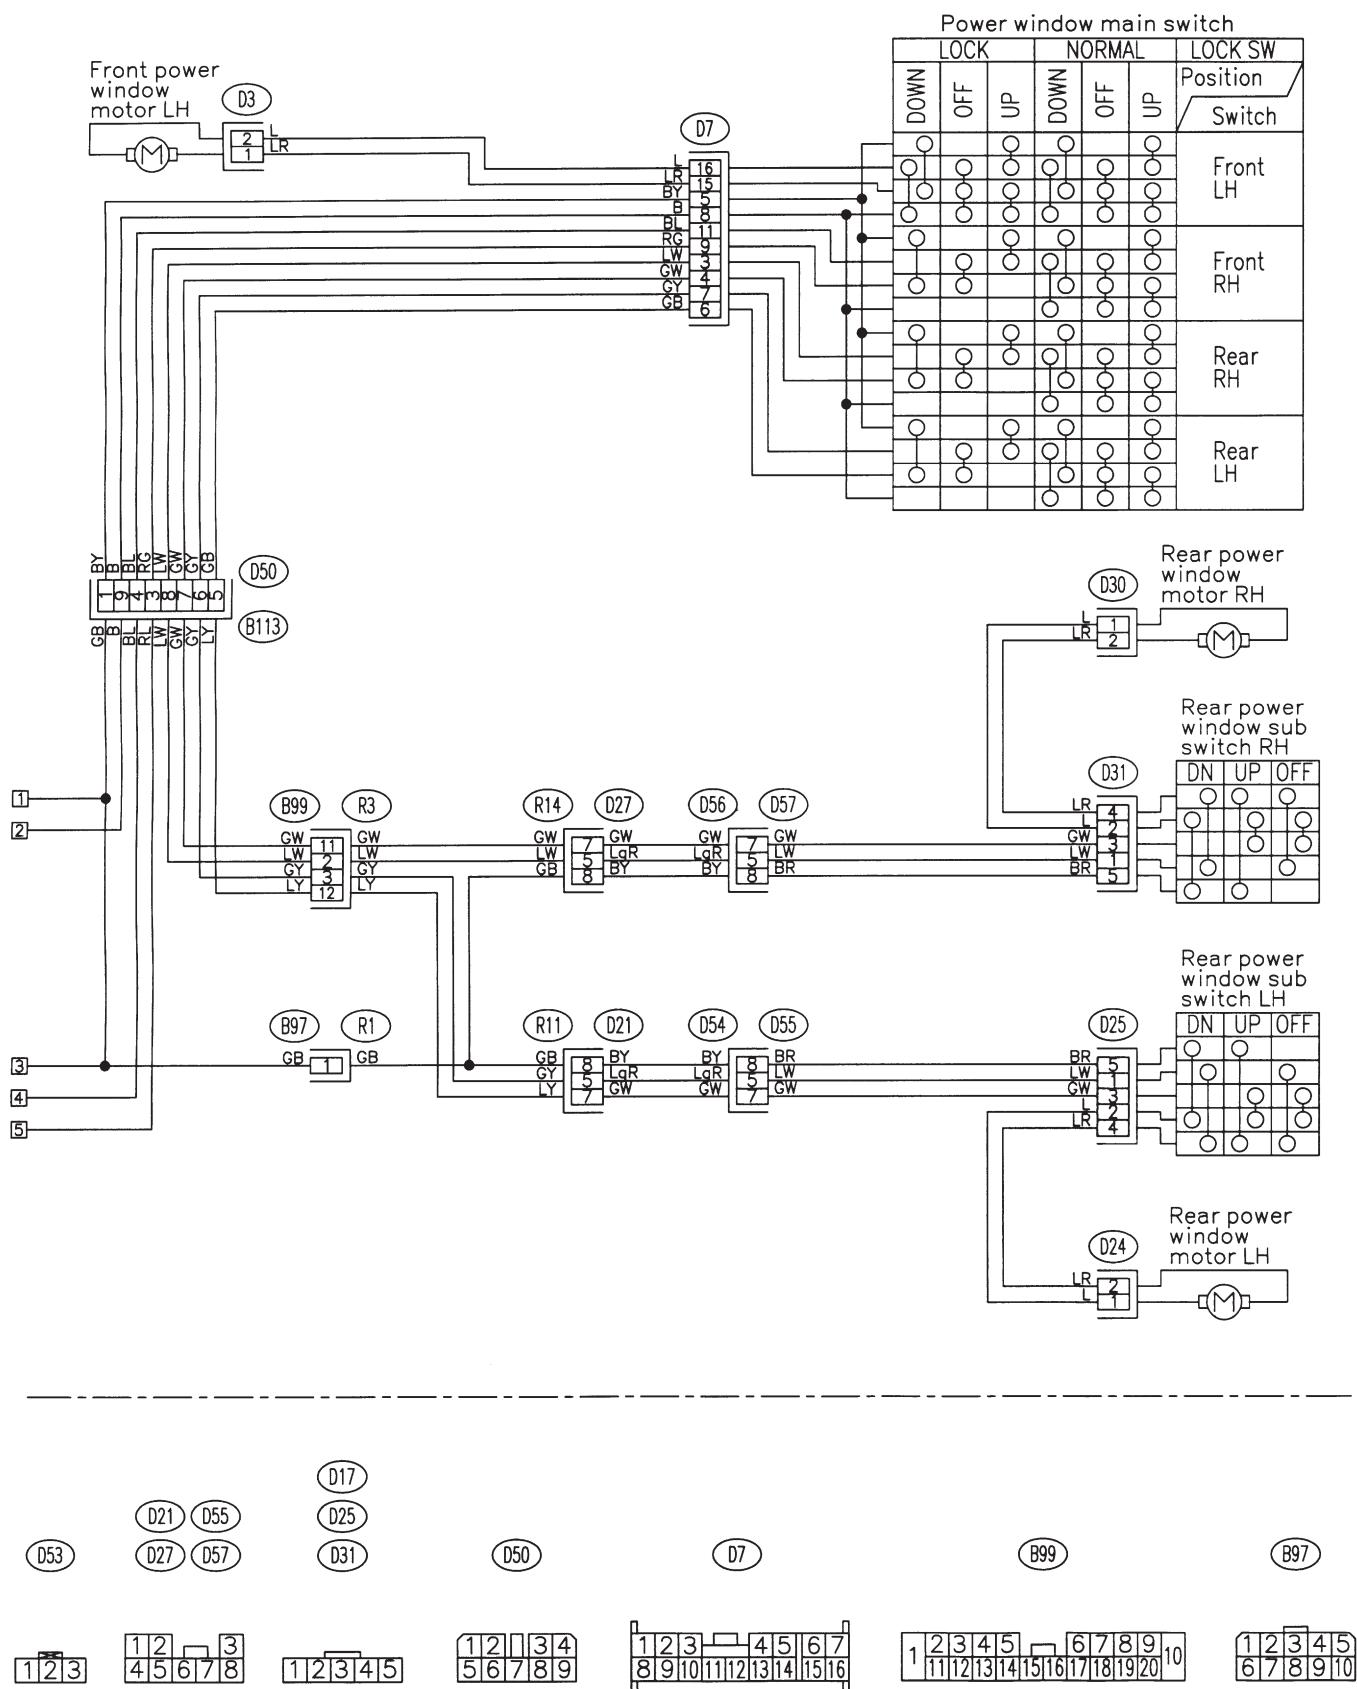

WIRING DIAGRAM

[D5Y0] 6-3
5. Wiring Diagram

Y: RADIATOR FAN SYSTEM

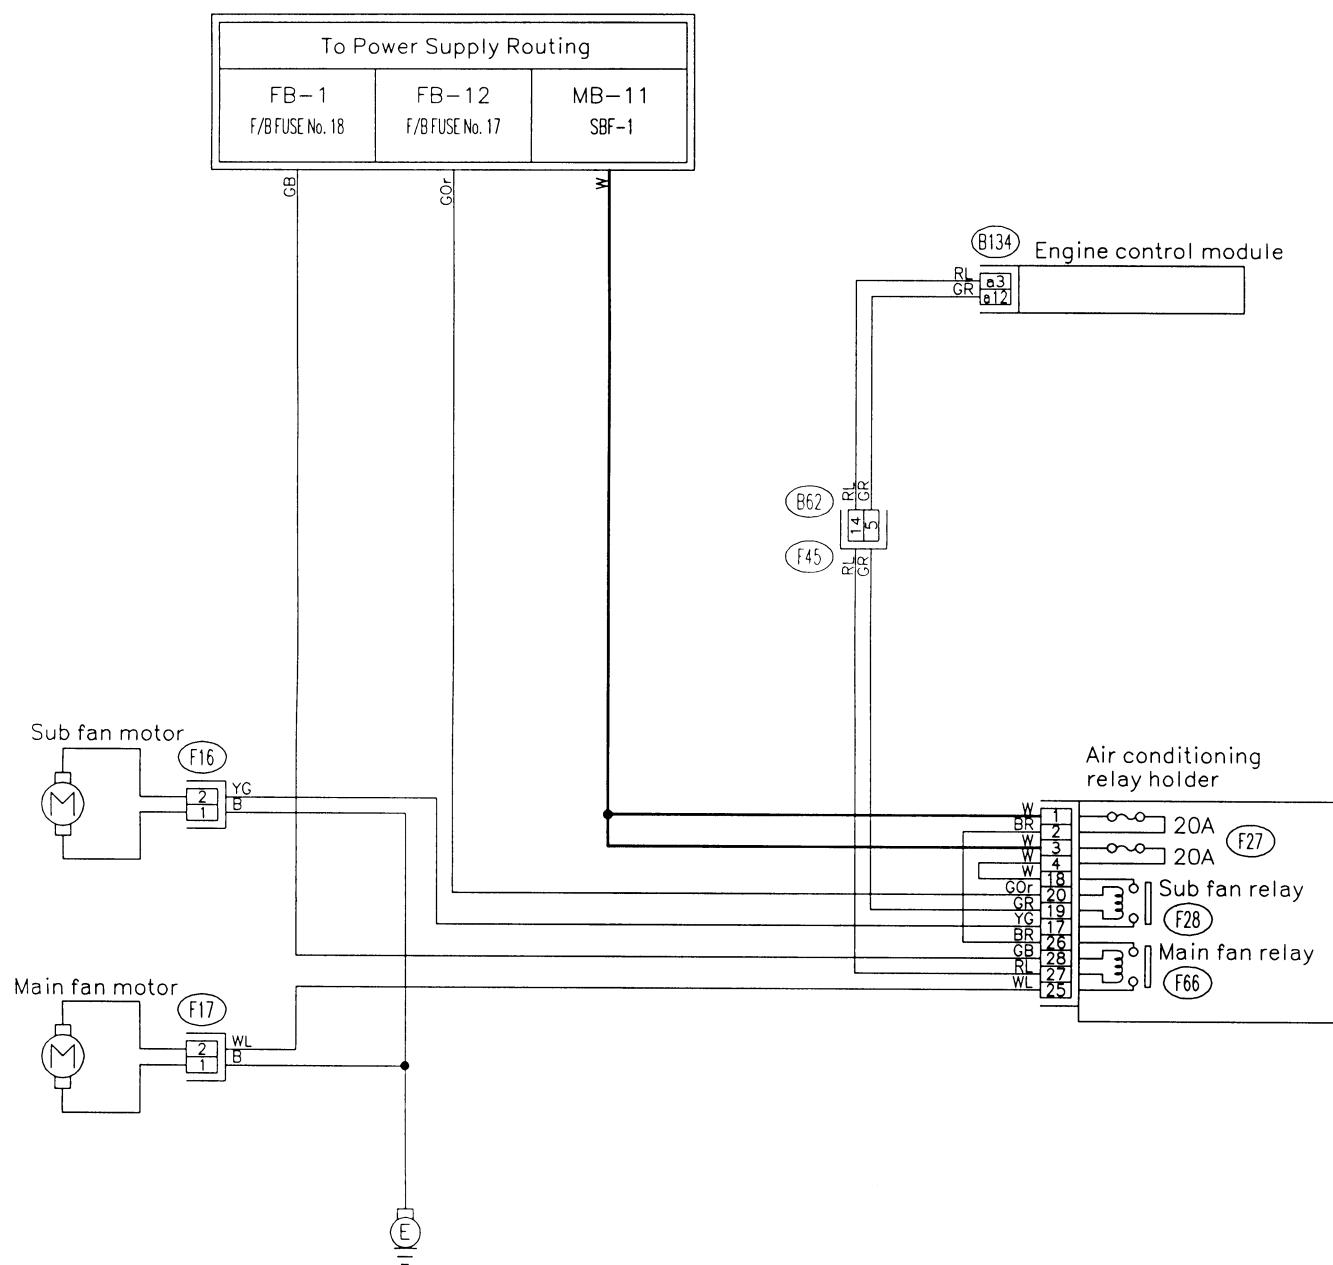

F16 (Black)

F17 (Black)



B62

F27

F31

F28

F66

F67

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

1	2	5	6	9	13	14	17	21	22	25	29
3	4	7	10	15	16	17	18	19	20	23	26

a : B134


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
24	25	26	27	28	29	30	31

6-3 [D5Z0]

5. Wiring Diagram

WIRING DIAGRAM

Z: REAR ACCESSORY POWER SUPPLY SYSTEM

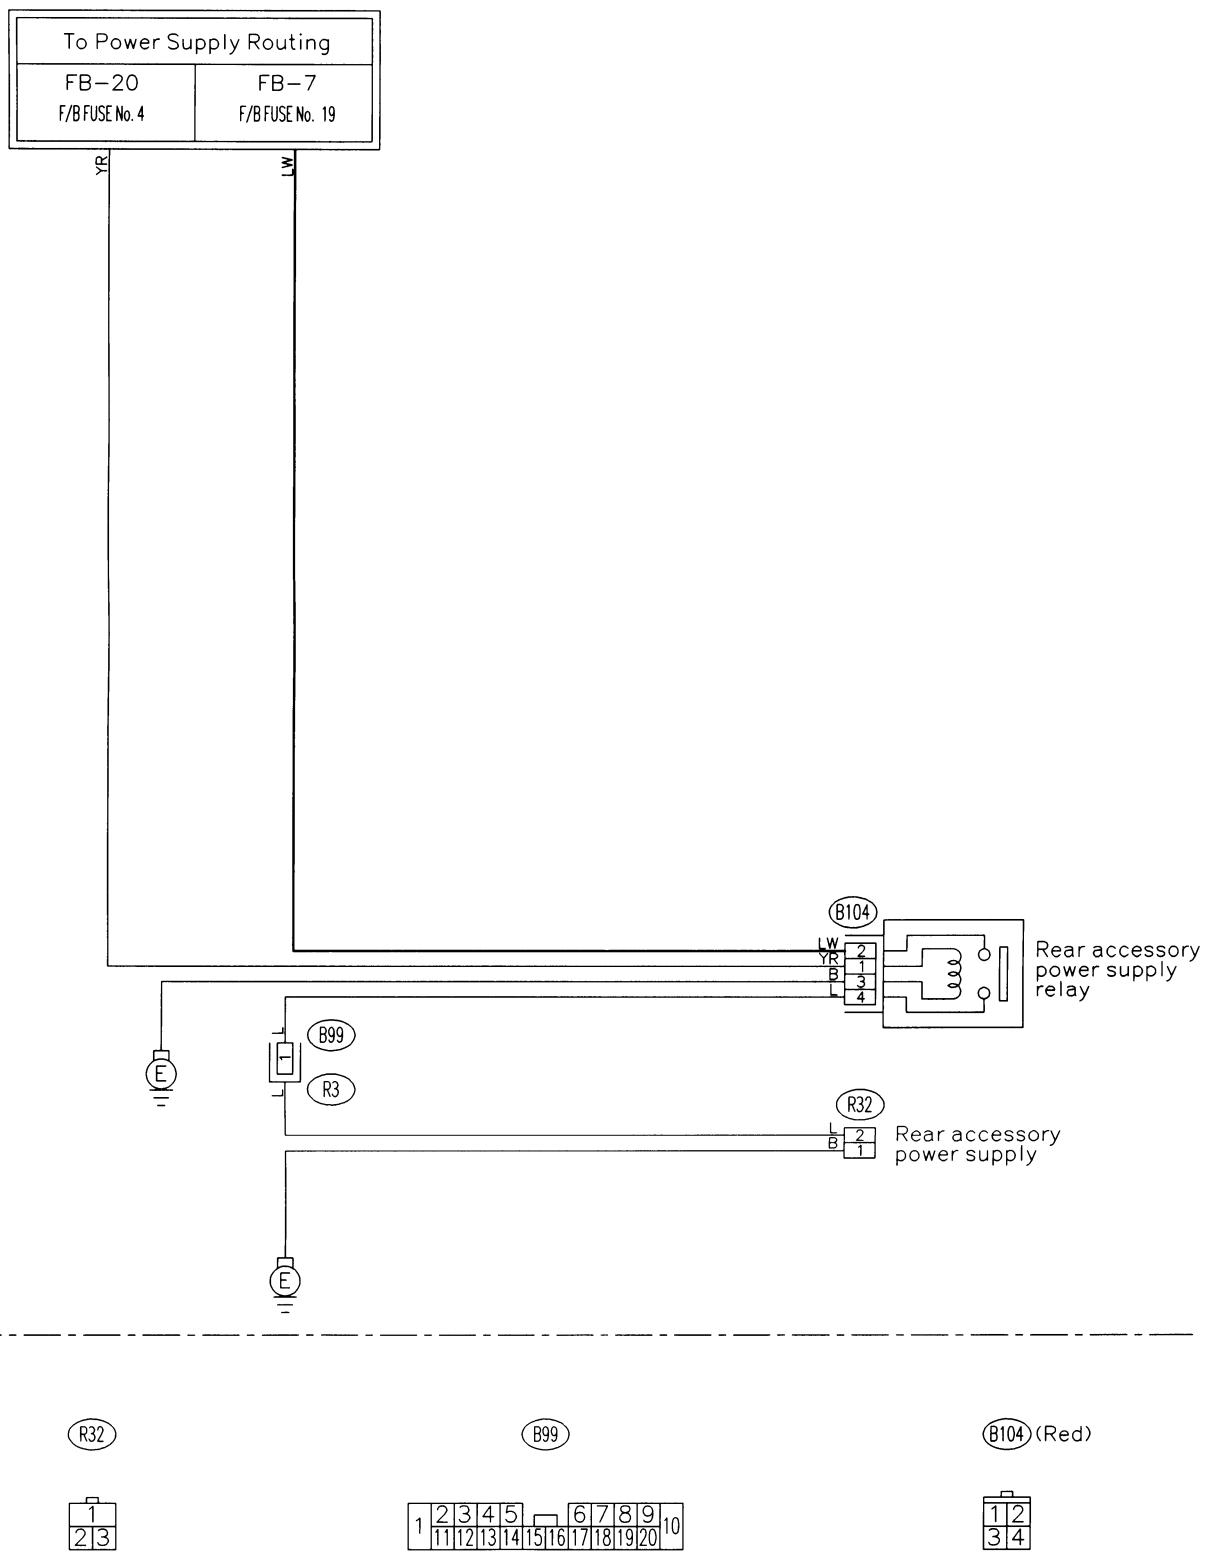


GU90-03

WIRING DIAGRAM

[D5AA0] 6-3
5. Wiring Diagram

AA: REAR WINDOW DEFOGGER SYSTEM

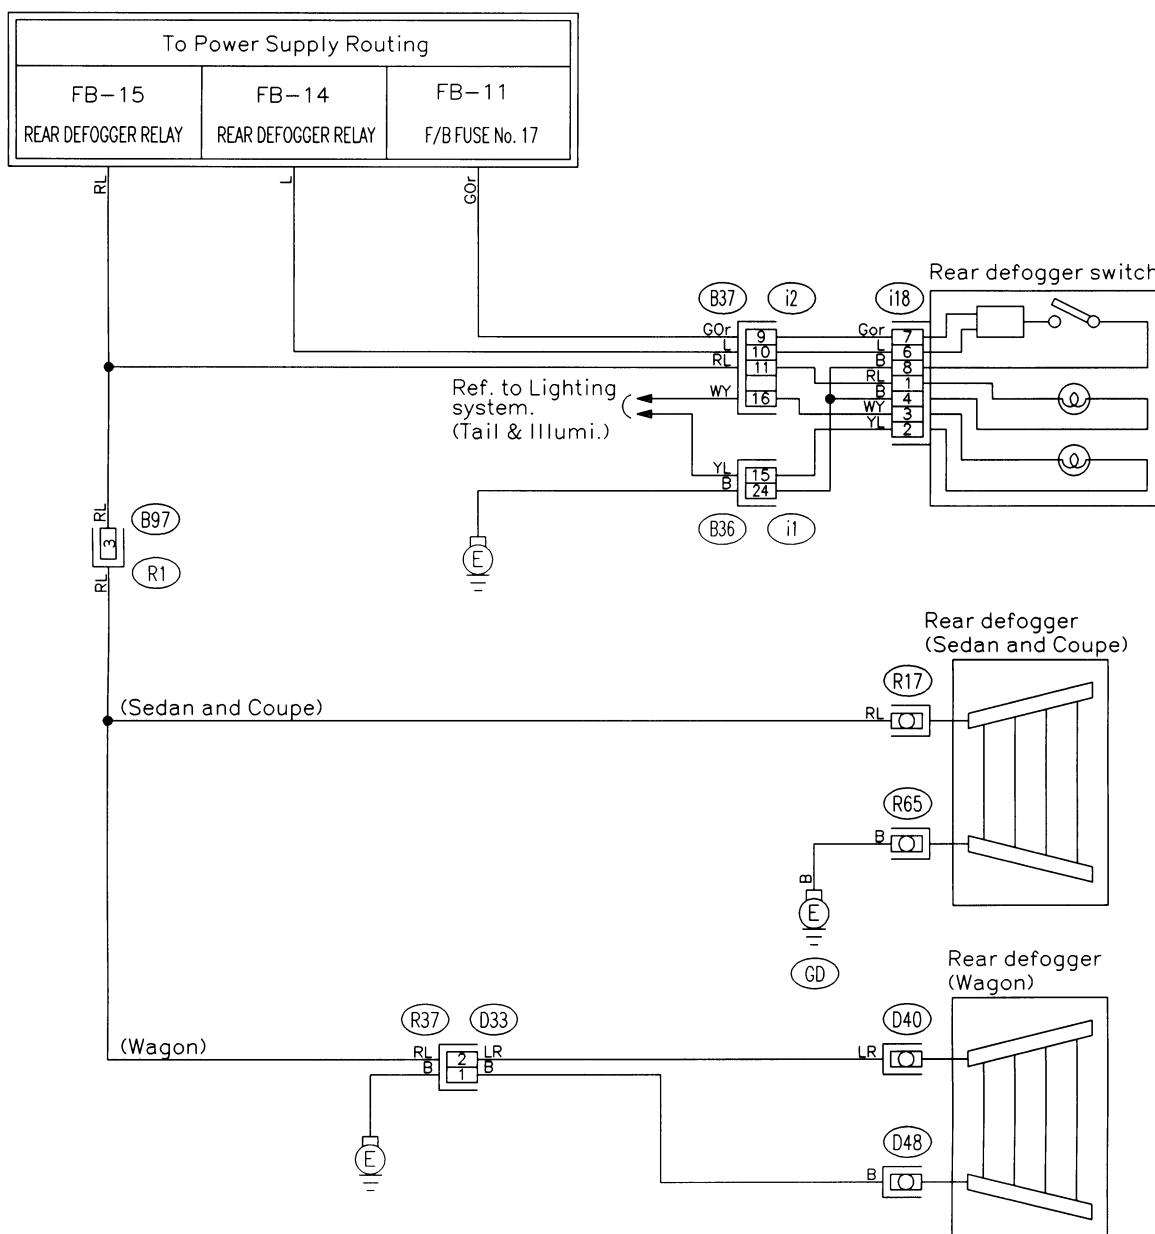





(D33)

(i18)

(B97)


(i2)

(i1) (Blue)



WIRING DIAGRAM

AB: REMOTE CONTROLLED REARVIEW MIRROR SYSTEM

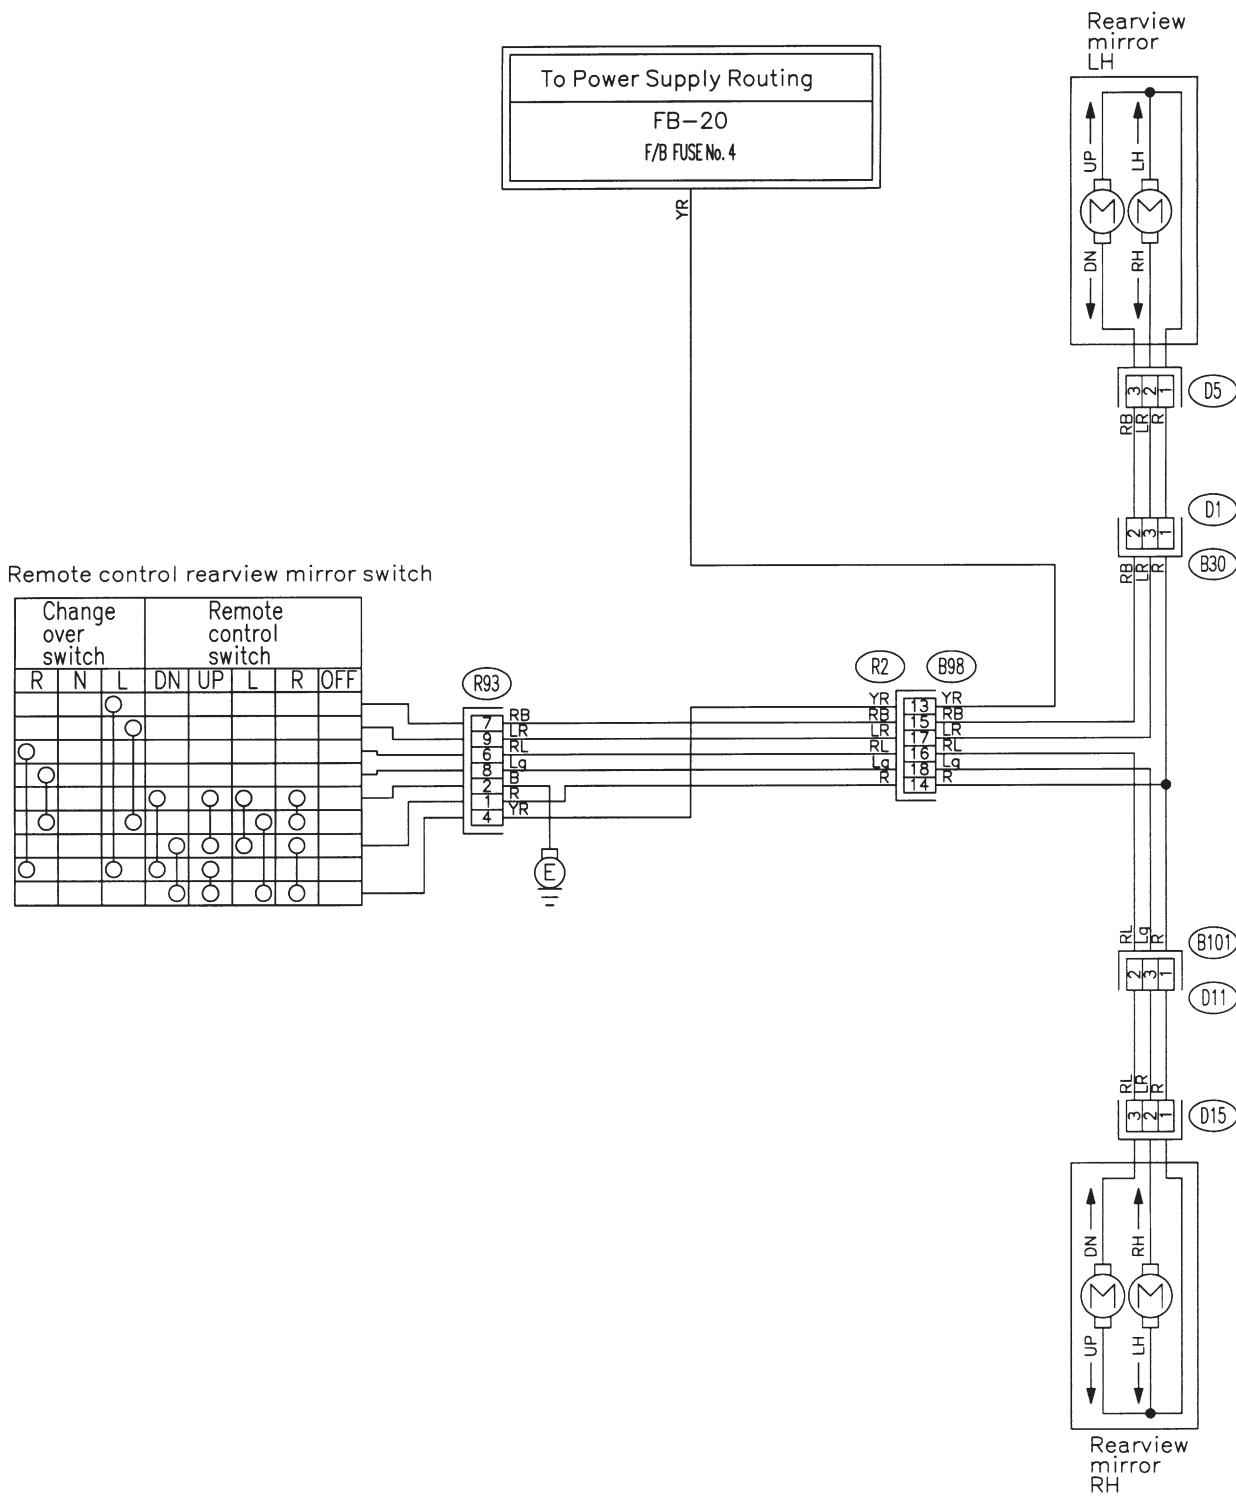

(D5)
(D15)

(R93)

(D1)
(D11)

(B98) (Black)

1	2	3
4	5	6

1	2	3	4	5
6	7	8	9	10


1	2	3	4	5	6	7	8	9	
4	5	6	7	8	9	10	11	12	13

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

WIRING DIAGRAM


[D5AC0] 6-3
5. Wiring Diagram

AC: SEAT BELT WARNING AND KEY WARNING SYSTEM

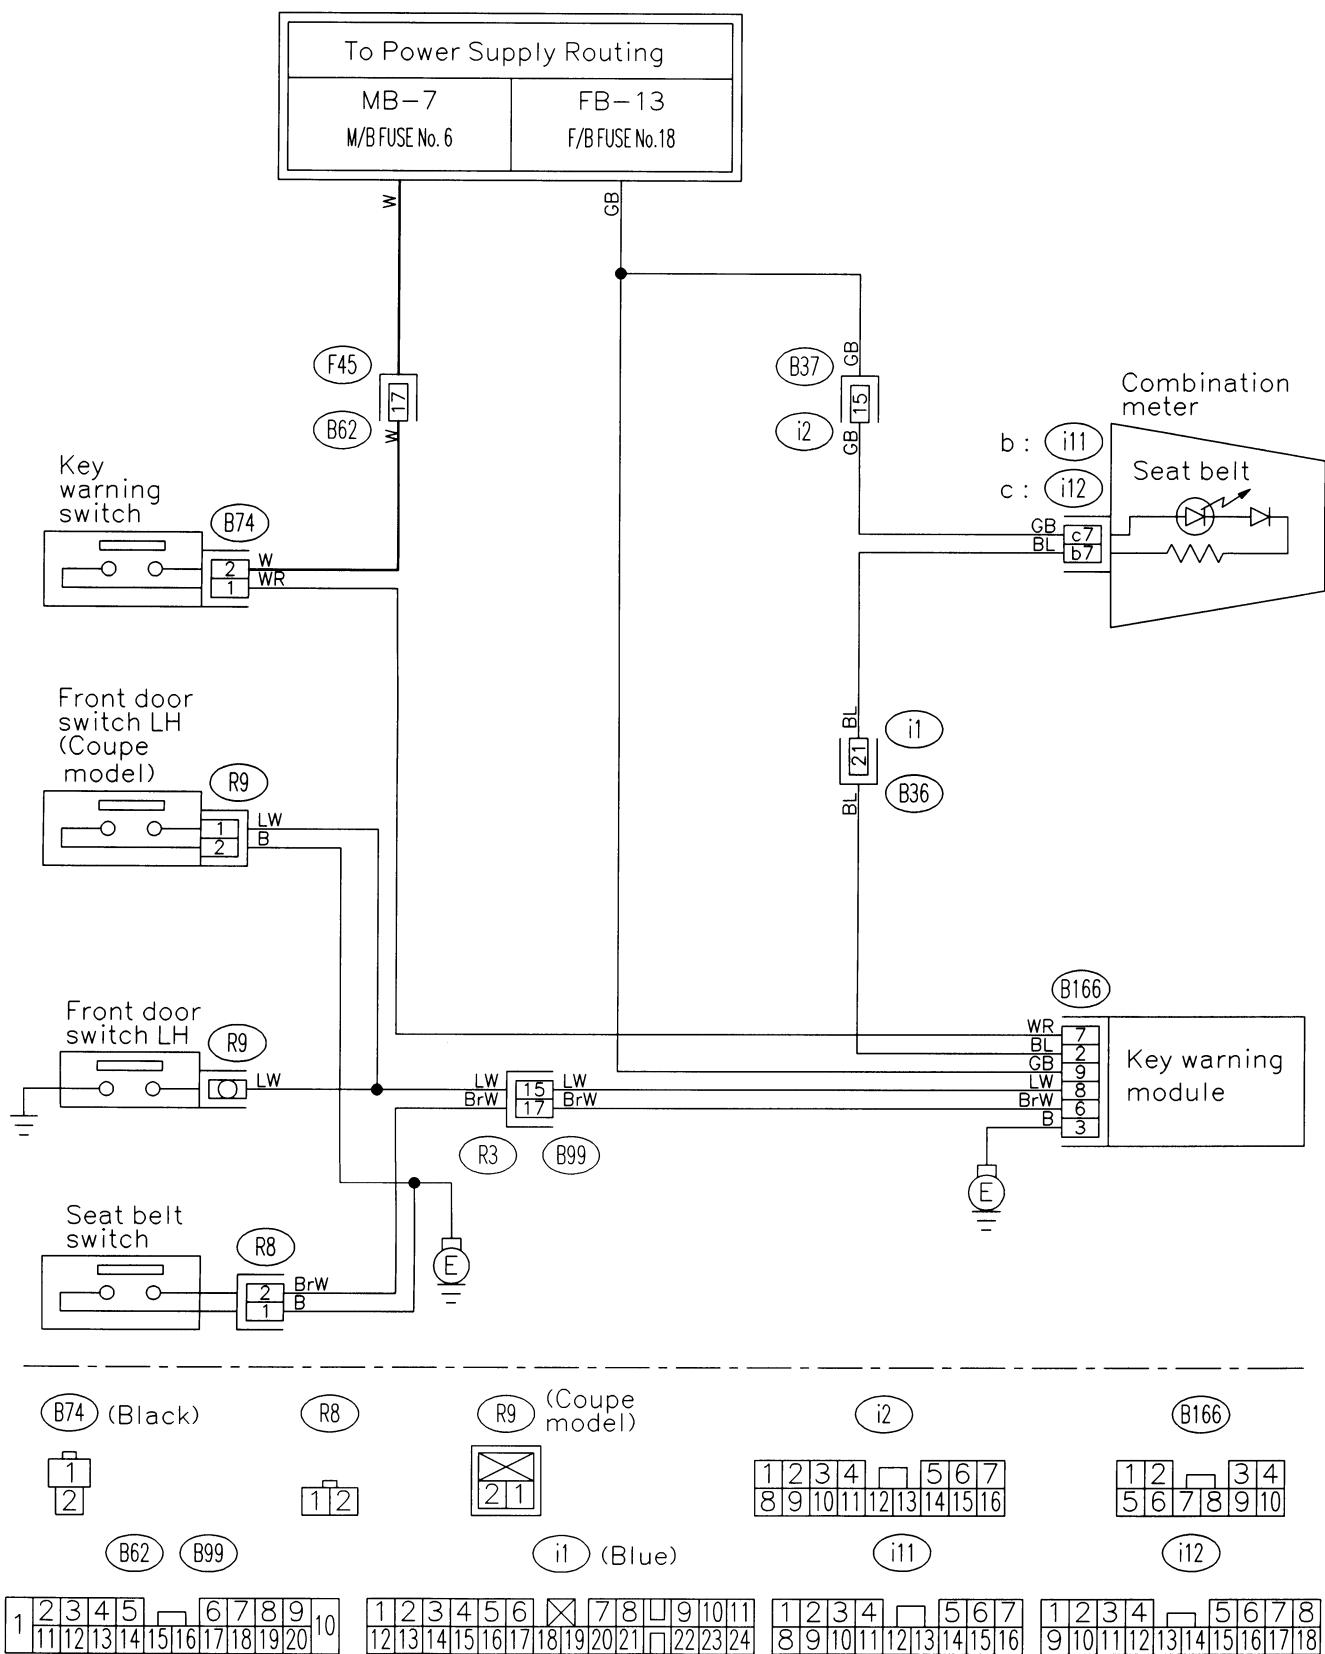

WIRING DIAGRAM


AD: STARTER SYSTEM

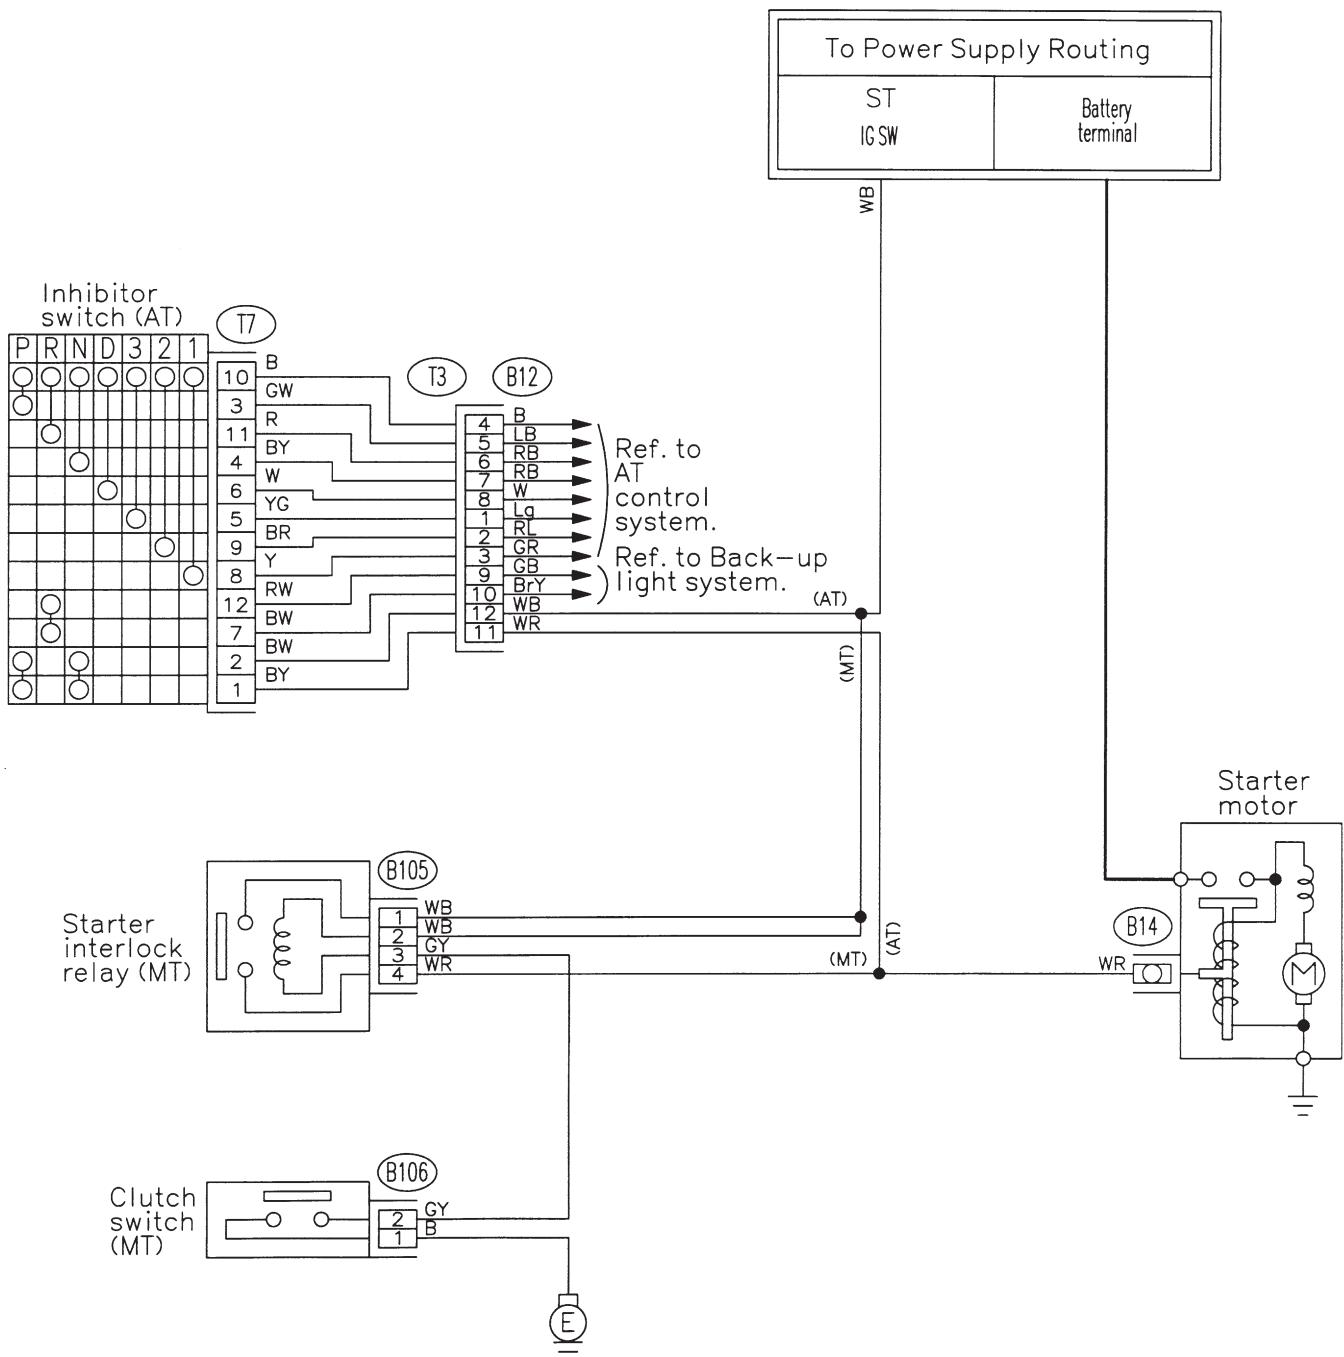


(B106)




(B105)
(Blue)



(B12)




(T7)



WIRING DIAGRAM

[D5AE0] 6-3
5. Wiring Diagram

AE: SUNROOF SYSTEM

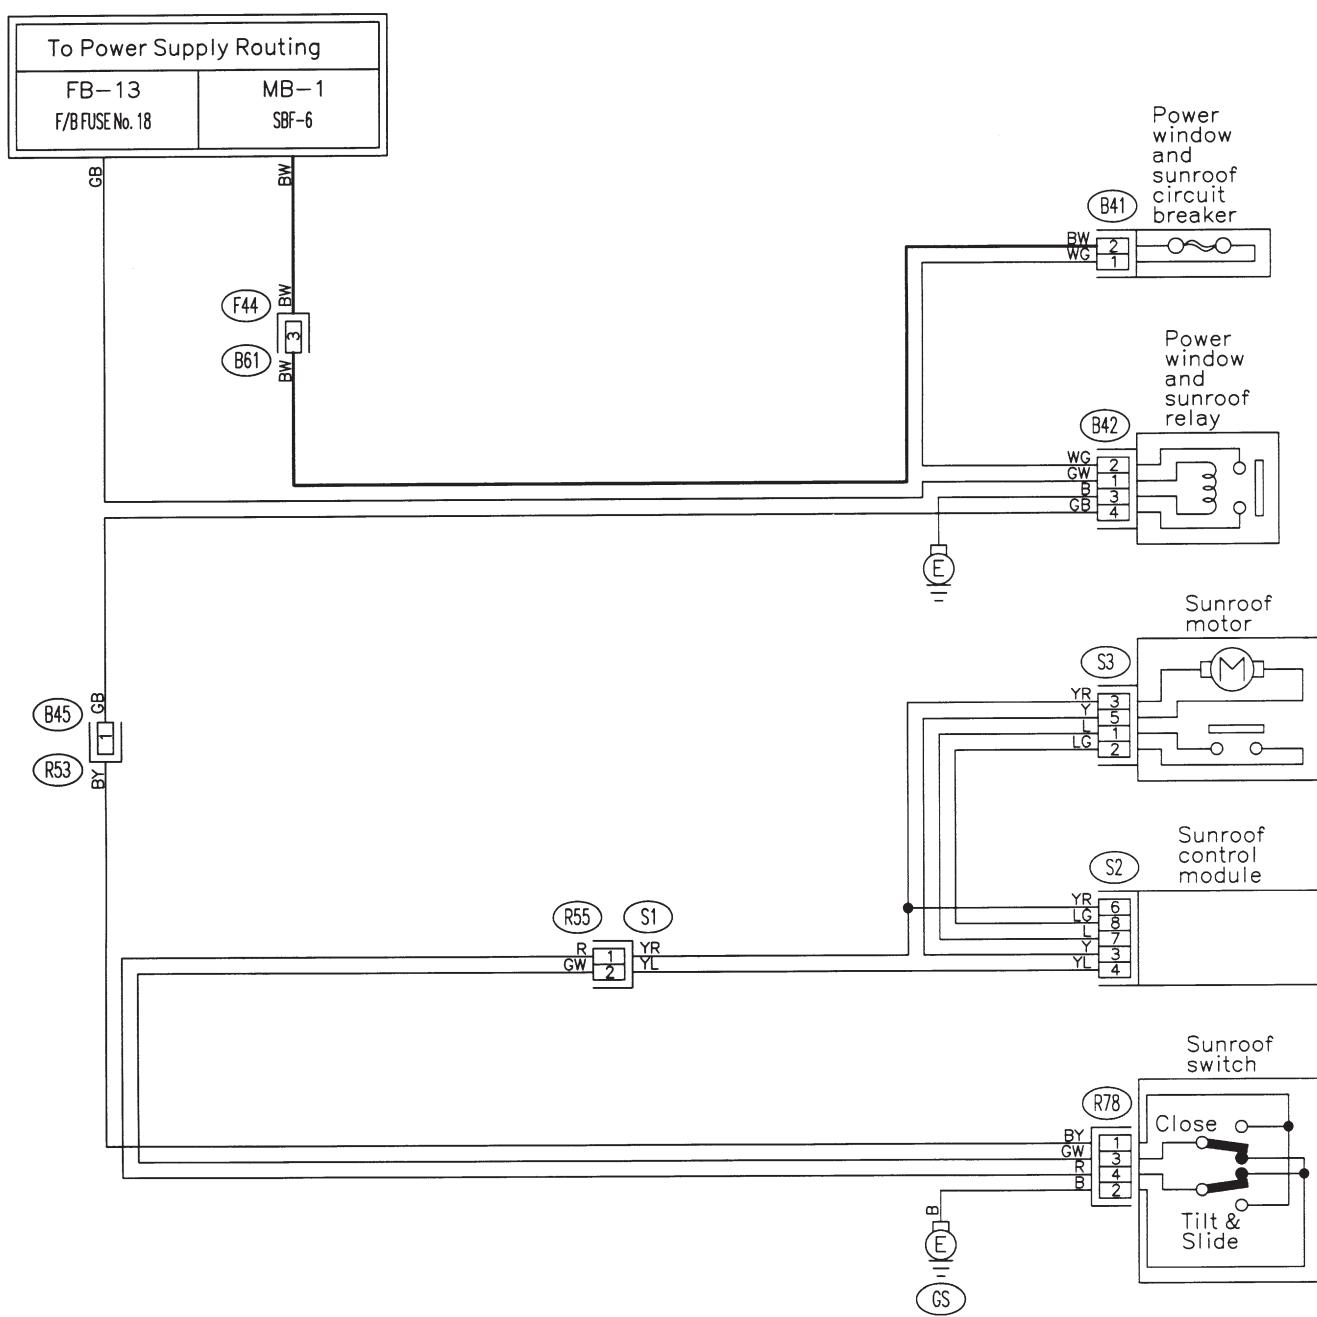

(B41) (R55)

(R78)



(B42) (Blue)

(S3)

(B45)

(S2)

(B61)




GU75-03

6-3 [D5AF0]

5. Wiring Diagram

WIRING DIAGRAM

AF: WIPER AND WASHER SYSTEM (FRONT)

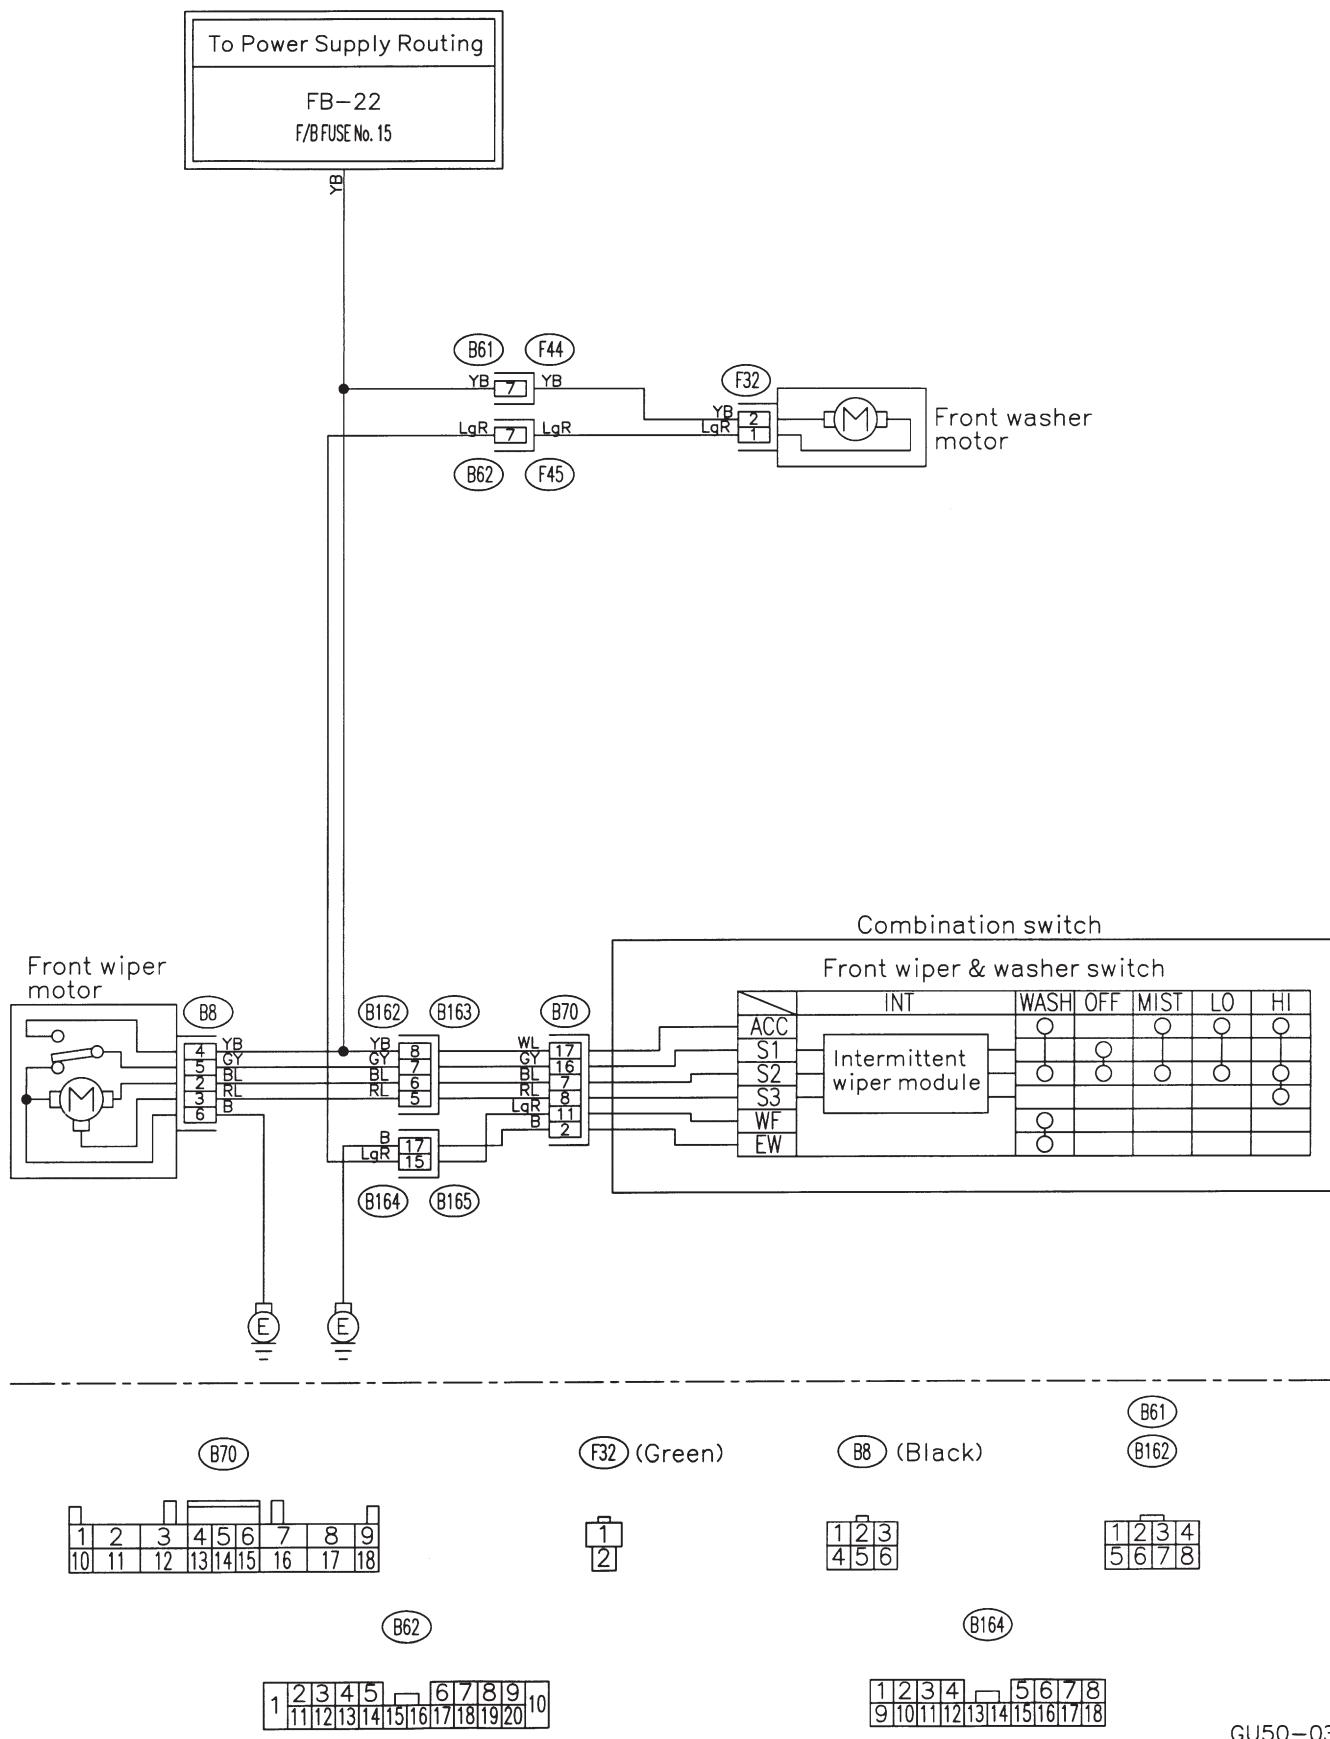


GU50-03

WIRING DIAGRAM


[D5AG0] 6-3
5. Wiring Diagram

AG: WIPER AND WASHER SYSTEM (REAR)

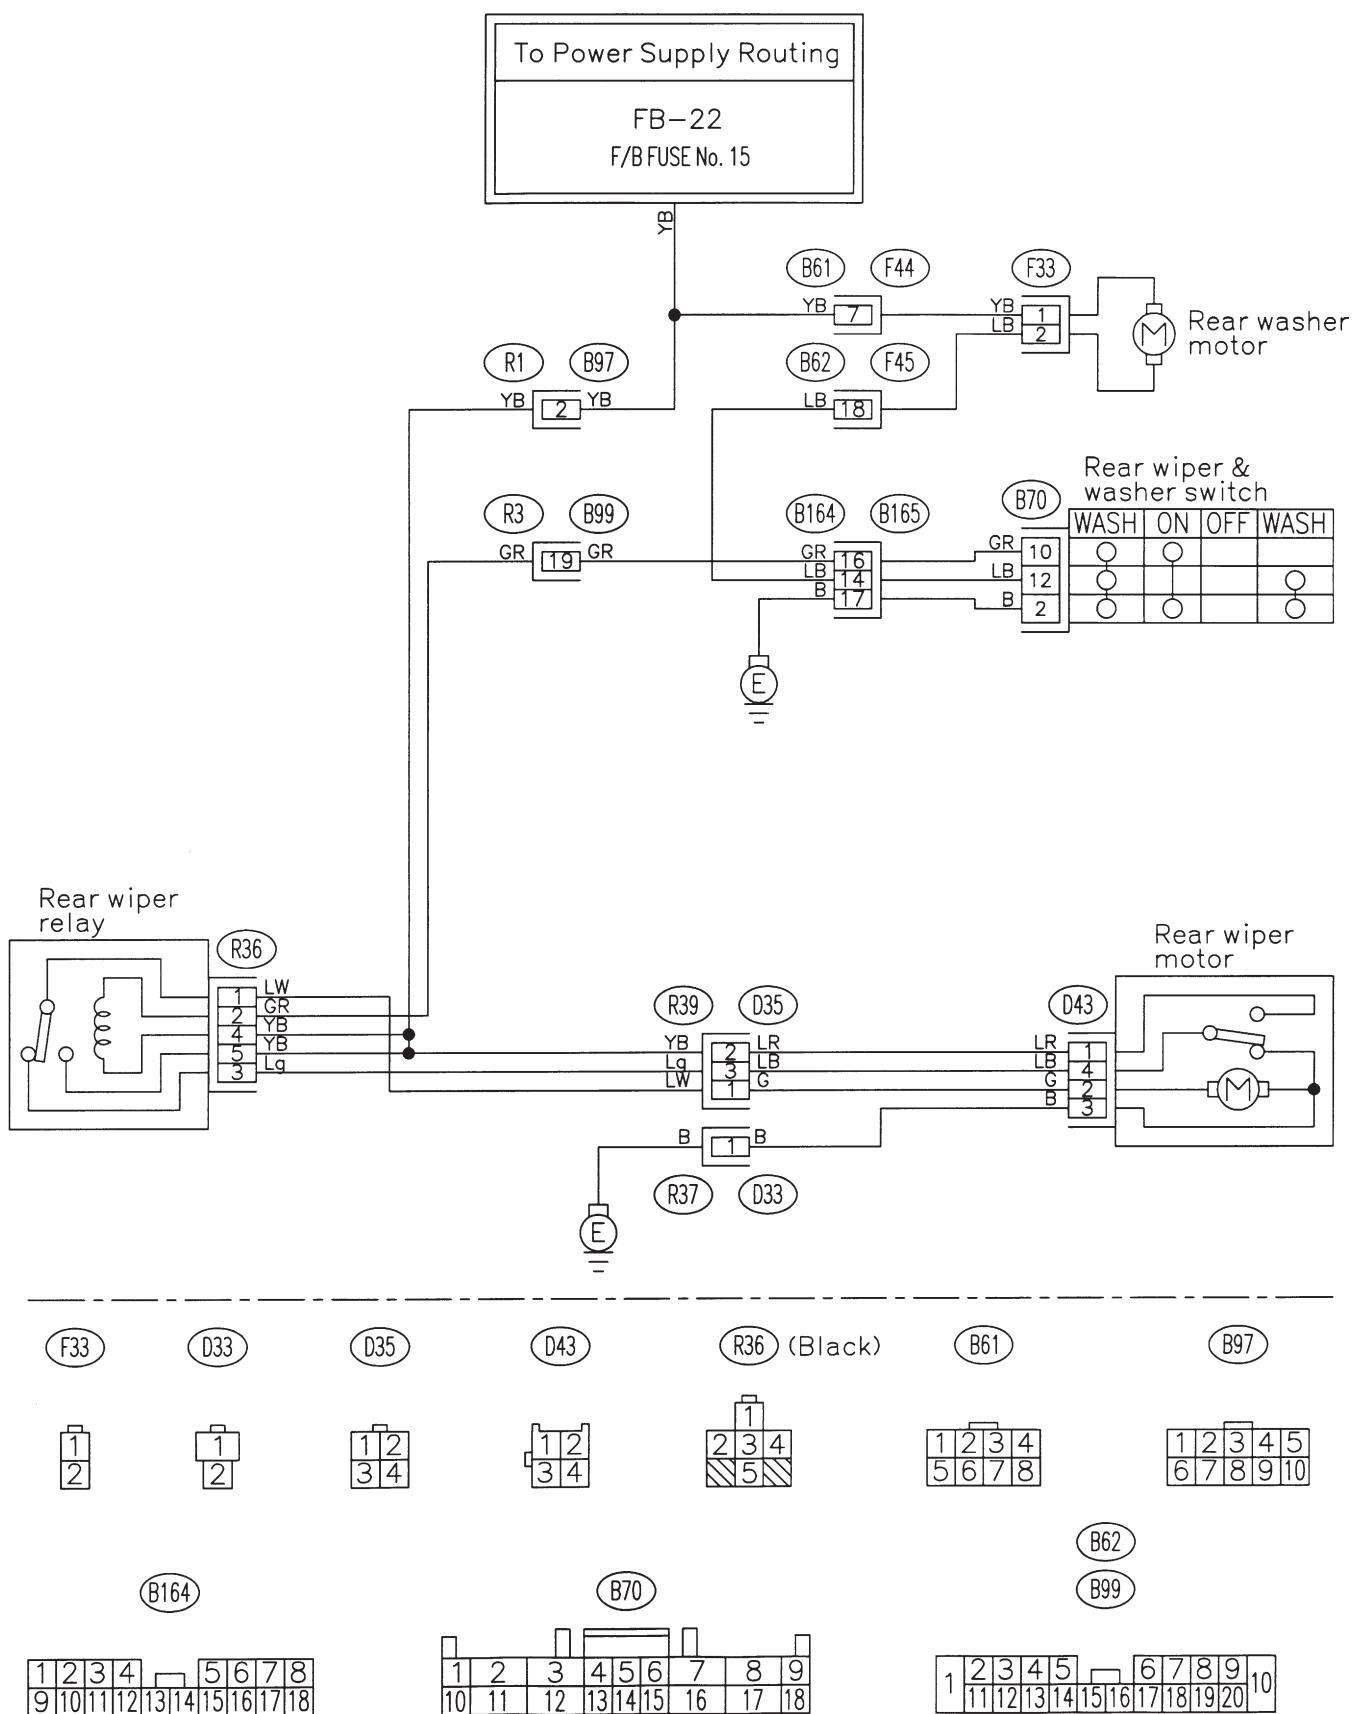

WIRING DIAGRAM

AH: MULTIPLE POWER SUPPLY (OPTION)

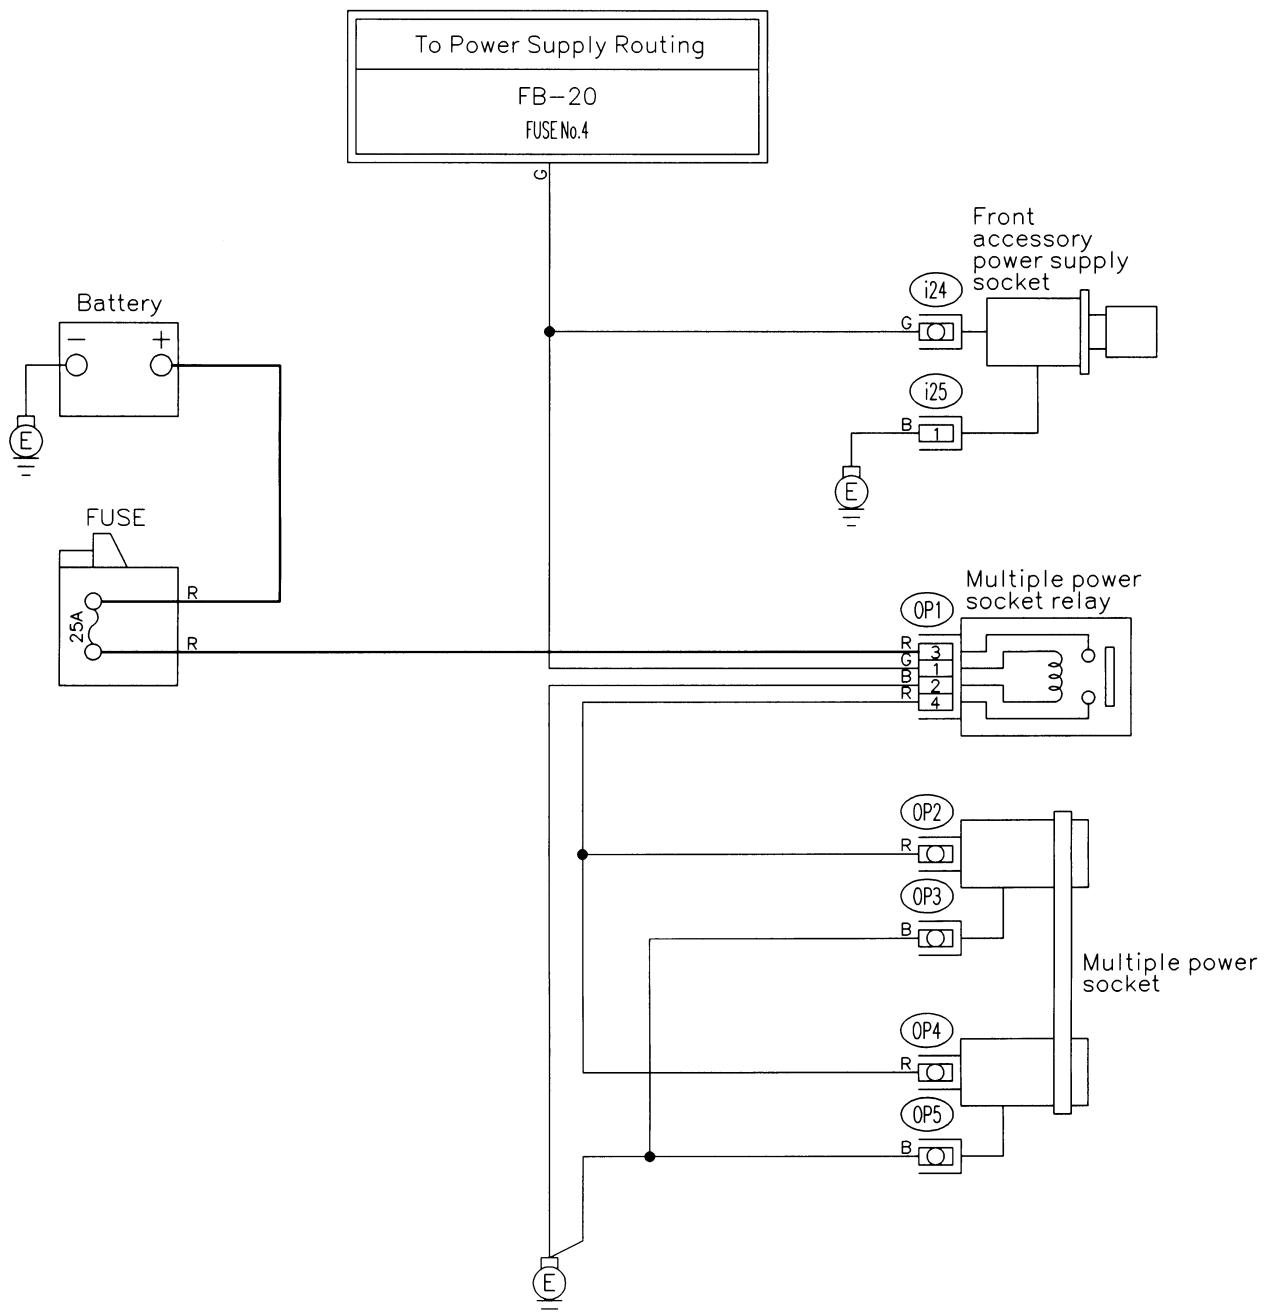

i25

OP1 (Blue)




GU82-01

WIRING DIAGRAM

[D5AI0] 6-3
5. Wiring Diagram

AI: CRUISE CONTROL SYSTEM (OPTION)

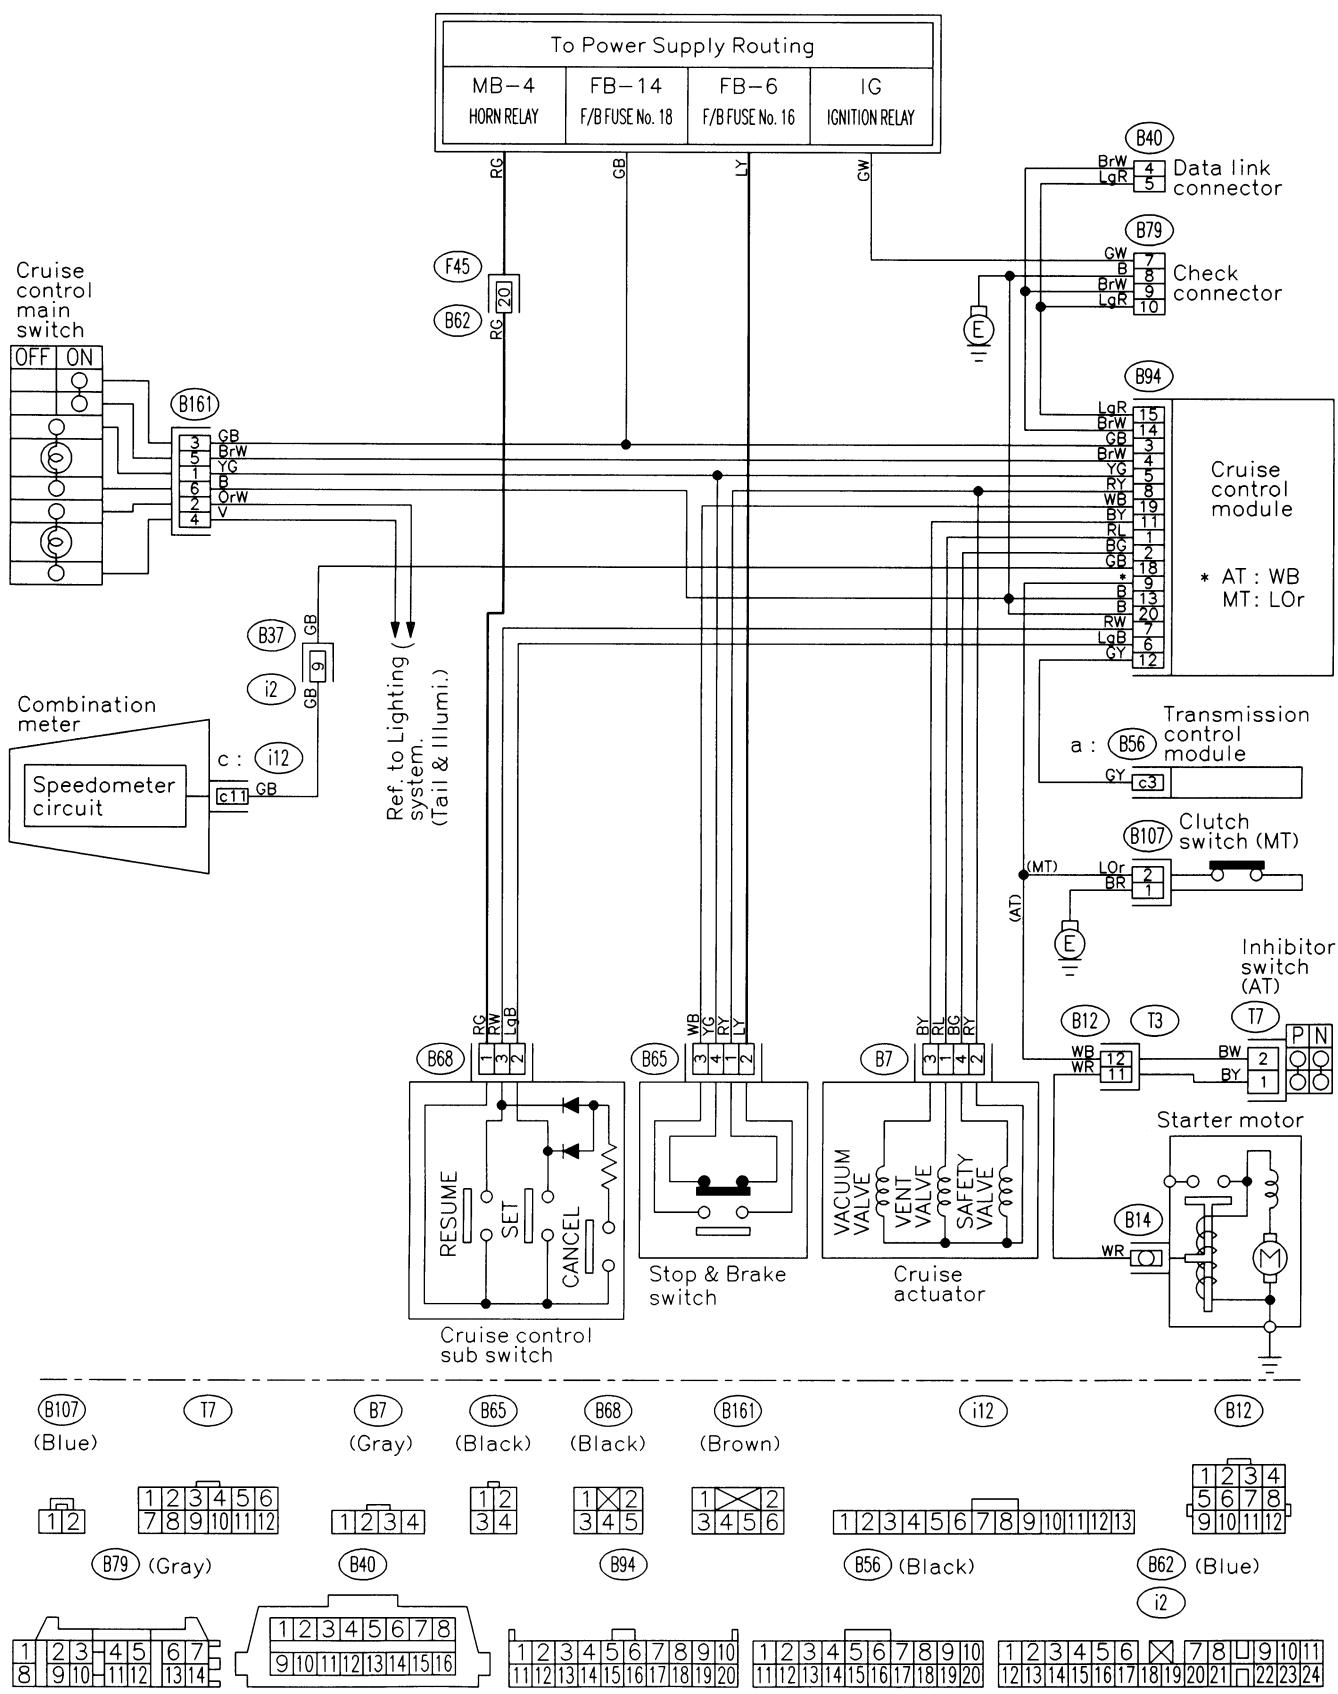

GU71-06

MEMO: